

Kodak

KC30/35
Camera



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE: Your model camera has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits provide reasonable protection against interference in residential use. The camera generates, uses and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause interference to radio communications. There is no guarantee that interference will not occur. If this camera does cause interference to radio or television reception, which can be determined by turning the camera off and on, you may reduce the interference by the following:


- Reorient or relocate the receiving antenna.
- Increase the separation between the camera and the receiver.
- Consult the dealer or an experienced radio/television technician for help.

Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Getting to Know Your Camera

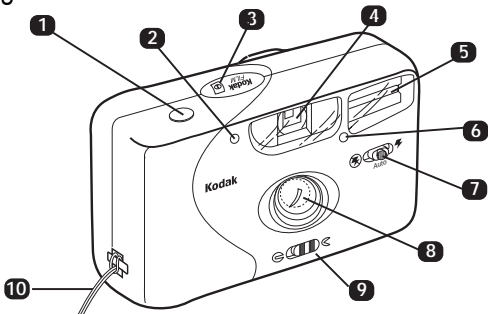

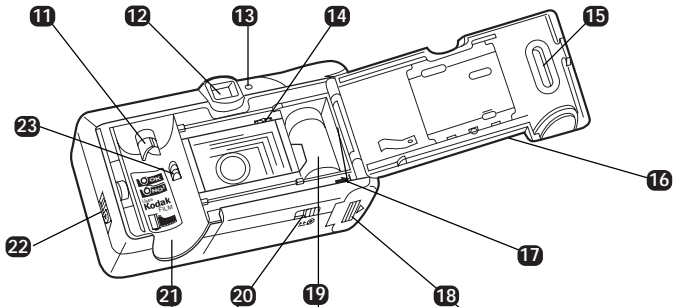

Contents

Need Help with Your Camera?	6
Camera Identification	7
Specifications	8
Loading the Batteries	9
Loading the Film	10
Taking a Picture	14
Tips for Better Pictures	16
Taking Flash Pictures	17
Unloading the Film	20
Troubleshooting	21
For Owners of the Quartz Date Back Model	24

Need Help with Your Camera?

Call:

Kodak (USA only) toll free from 9:00 a.m. to 7:00 p.m. (Eastern time) Monday through Friday at 1 (800) 242-2424.

Kodak (Canada only) from 8:30 a.m. to 5:00 p.m. (Eastern time) Monday through Friday at 1 (800) 465-6325, ext. 36100; for the Toronto area, call (416) 766-8233, ext. 36100.

Visit our web site at www.kodak.com.

For warranty purposes, please keep your sales receipt as proof of the date of purchase.

© Eastman Kodak Company, 1997

Camera Identification (see inside front cover for diagrams)


- | | |
|---------------------------------|-------------------------------------|
| 1 Shutter Button | 13 Flash-/Camera-Ready Light |
| 2 Flash Sensor | 14 Sprocket Teeth |
| 3 Picture Counter | 15 Film Window |
| 4 Viewfinder | 16 Film Door |
| 5 Flash | 17 Film-Load Mark |
| 6 Red-Eye-Reduction Lamp | 18 Battery-Door Latch |
| 7 Flash Switch | 19 Take-Up Spool |
| 8 Lens | 20 Film-Rewind Switch |
| 9 Len-Cover Switch | 21 Film Chamber |
| 10 Camera Strap | 22 Film-Door Latch |
| 11 Film Spindle | 23 DX-Code Sensors |
| 12 Viewfinder Eyepiece | |

Specifications

Type:	Compact 35 mm fixed-focus camera
Lens:	29 mm, 3-element hybrid
Viewfinder:	Reverse-Galilean
Aperture:	<i>f</i> /5.6
Focus Range:	Daylight: 4 ft. (1.2 m) to infinity
Flash Unit:	Electronic flash with ISO 100/21°, guide number of 7.5 m; flash automatically turns on at low-light levels
Flash Recycle Time:	Approximately 5 sec with fresh batteries
Power Source:	2 AA-size alkaline batteries
Dimensions:	4.7 x 2.6 x 1.7 in. (120.4 x 65.2 x 43.7 mm)
Weight:	5.7 oz. (162 g)

Loading the Batteries

This camera uses 2 AA-size alkaline batteries.

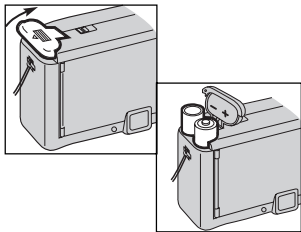

Low-Battery Warning

It's time to replace the batteries when—

- the flash- /camera-ready light takes more than 30 seconds to turn on.
- the camera motor slows down or will not run.
- the film will not advance.


Auto Power Off

This camera automatically turns off after approximately 2 minutes to conserve battery power if it is not used.


Loading the Film

If in sunlight, turn your back to the sun and load the film in the shade of your body.


1. Slide the FILM-DOOR LATCH **22** down; then open the FILM DOOR **16**.

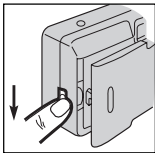

2. Insert the film into the FILM CHAMBER **21**. Place the flat, recessed end of the film over the FILM SPINDLE **11**. Push the other end of the film down into the film chamber until it snaps into place.

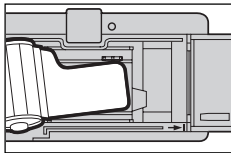


3. Pull out just enough film to place the end of the film at the FILM-LOAD MARK **17**.
(Be sure the end of the film is at the film-load mark or you may not get any pictures).

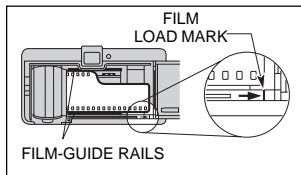


Lay the film flat between the film-guide rails.

If the end of the film extends past the film-load mark, gently push the excess back into the film cartridge.

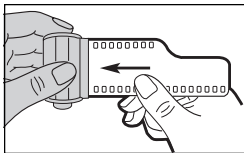


4. Snap the film door closed.
You should be able to read
the film information in the
FILM WINDOW **15**.


CAUTION: Do not open the
film door if you have film
loaded in the camera.

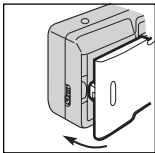

5. Slide the LENS-COVER
SWITCH **9** to uncover
the LENS **8** and turn the
camera on.

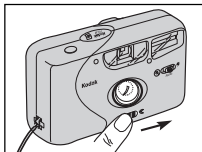


6. Press the SHUTTER BUTTON **1** three times so that the PICTURE COUNTER **3** moves to "1."

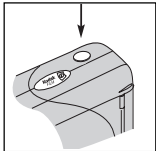


NOTE: Because of limited space on the picture counter, dots stand for frames 2 and 3. Beginning at frame 4, only even numbers show.

Taking a Picture

1. Slide the LENS-COVER SWITCH **9** open until it locks into place. The camera will not work if the lens cover is not **completely** open.

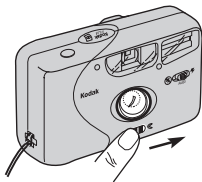


2. For a sharp picture, be at least 4 ft (1.2 m) from your subject in daylight and when using flash.

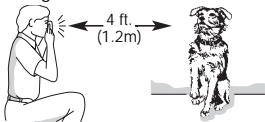

3. Look through the VIEWFINDER EYEPIECE **12** to see your subject.



4. Hold the camera steady and gently press the SHUTTER BUTTON **1** to take a picture. Wait for the FLASH-/CAMERA-READY LIGHT **13** to turn "on" before you take the picture. The flash automatically fires when you take a picture (see **TAKING FLASH PICTURES**). **Do not block the lens or flash with your fingers, strap, or any other object.**

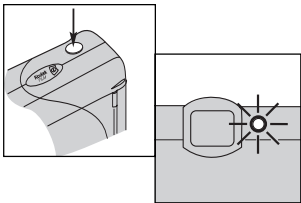

5. The film automatically advances so you can take your next picture.

Tips for Better Pictures

- Keep your pictures simple. Move close enough to your subject, so the subject fills the viewfinder **but not closer than 4 ft (1.2 m)**.
- Take pictures at the subject's level. Kneel down when taking pictures of children, pets, etc.
- Hold your camera vertically to capture tall, narrow subjects, such as a waterfall, skyscraper, or single person.
- Add interest to your picture by framing your subject with a tree branch, window, or even the rails of a fence.
- Keep the sun behind you. This provides the best subject illumination.

Taking Flash Pictures

In dim light, such as indoors or outdoors in heavy shade, or on dark overcast days, you need flash. Your camera features an automatic flash that fires when you need it.

1. Slide the LENS-COVER SWITCH **9** open to turn the camera on.
2. When the FLASH- /CAMERA-READY LIGHT **13** turns "on", you are ready to take the picture.
3. Keep the subject within the distance range for the speed

ISO Film Speed	Flash-to-Subject Distance
100	4 to 9 ft (1.2 to 2.8 m)
200	4 to 13 ft (1.2 to 4.0 m)
400	4 to 18 ft (1.2 to 5.5 m)

of the film in your camera. **Do not block the flash or lens with your fingers, strap, or any other object.**


Using Fill Flash and Flash Off

Fill Flash—Bright light indoors or outdoors from backlit subjects can create dark shadows (especially on faces) in contrasty scenes. Use fill flash to lighten the shadows.

Flash Off—When you do not want to use the flash, especially

indoors, or in dim lighting situations, use flash off.

1. Slide the LENS-COVER SWITCH **9** open.
2. Push the FLASH SWITCH **7** to either the fill flash or flash off mode and **hold into position without lifting your finger.**

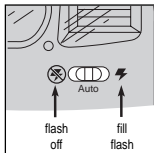

3. While still pressing the desired flash mode, press the SHUTTER BUTTON **1** to take a picture.

Using Red-Eye-Reduction

To minimize red-eye in flash pictures of people, use the red-eye-reduction feature.

Whenever the flash is needed, the red-eye-reduction will automatically be active.

1. Partially depress the SHUTTER BUTTON **1**. The RED-EYE-

REDUCTION LAMP **6** stays on as long as the shutter button is partially depressed.


2. Have your subject look directly at the red-eye-reduction lamp for a **few seconds** before you take the picture.
3. If you choose not to use red-eye-reduction, **do not delay** in pressing the shutter button.

Unloading the Film

After you take the last picture on the roll of film, slide the **FILM-REWIND SWITCH 20** into position to start the film rewind. You may get a few extra pictures on a roll (26 instead of 24, etc.). Wait for the camera motor to stop before you open the **FILM DOOR 16** and remove the film cartridge.

Using Mid-Roll Rewind

If you don't want to take pictures on the entire roll of film, you can rewind the film manually. Slide the **FILM-REWIND SWITCH 20** in until it latches and remains in the on position. Wait for the camera motor to stop before you remove the film cartridge.

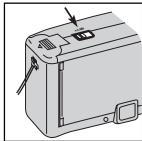

Troubleshooting

What happened	Probable cause	Solution
Camera will not operate	Lens cover closed	Slide the lens-cover switch to uncover lens and turn on camera
	Batteries weak, dead, missing, or improperly inserted	Replace or reload the batteries; see Loading the Batteries

What happened	Probable cause	Solution
Picture counter returns to "S"	Film door opened	Close film door and rewind film to avoid losing additional pictures
Film does not advance	Batteries weak, dead, missing, or improperly inserted	Replace or reload the batteries; see Loading the Batteries
	Film not loaded properly	See Loading the Film

What happened	Probable cause	Solution
Film does not rewind	Film did not load properly	See Loading the Film
	Batteries weak, dead, missing, or improperly inserted	Replace or reload the batteries; see Loading the Batteries
Flash- /camera-ready light fails to turn on within 30 seconds	Batteries weak	Replace with fresh AA-size alkaline batteries

For Owners of the Quartz Date Back Model

Setting the Date and Time

The date and time feature enables you to record the date in a choice of four formats: (month/day/year, day/month/year, year/month/day) or time (day/hour/minute) directly onto the film.

 
Date and Time Imprinting

Press the Mode Button **(b)** to select the desired data type; then take the picture. Following the exposure, the Print Indicator **(a)** blinks in the data panel for approximately two-to-three seconds to confirm imprinting.



Mode Selection

Use the Mode Button **(b)** to change the data display as shown.




Setting Data

1. Press the Mode Button **(b)** to select the desired data type.

2. Use the Select Button **(c)** to move between different parts of the displayed data. With the data displayed, pressing the select button in succession causes the settings for year, month, and then day to blink. On the data panel, the letter "M" indicates the location for the month and the apostrophe " ' " for the year.


In time mode, pressing the select button successively causes the hour, minute, and then the colon to blink.

 3. Press the Set Button **(d)** to change the blinking display.




Replacing the Date Back Battery

 
1. Open the film door. Remove the screw from the battery cover using a small screw-driver.



2. Remove the battery cover and insert a new 3-volt lithium CR 2025 (+ side up) battery.

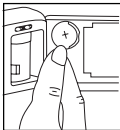

3. Replace the battery cover and reattach the screw. Reset the date and time.

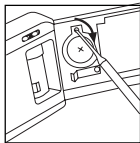

Date back subject to minor appearance and specification changes.

Kodak is a trademark.



Consumer Imaging
EASTMAN KODAK COMPANY
Rochester, NY 14650

Pt. No. 916 5093

1-97
Printed in USA