KODAK EASYSHARE M550 Digital Camera



Extended user guide

www.kodak.com

For interactive tutorials:

www.kodak.com/go/howto

For help with your camera:


www.kodak.com/go/m550support

Kodak

Eastman Kodak Company Rochester, New York 14650 © Eastman Kodak Company, 2009 All screen images are simulated.


Kodak, Pulse, and EasyShare are trademarks of Eastman Kodak Company. 4H6807_en

Front view

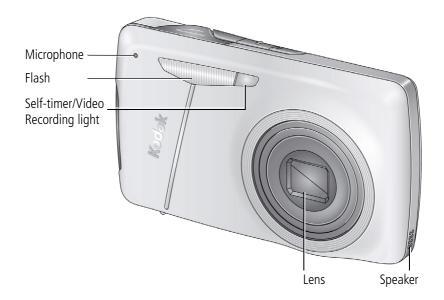

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Back view

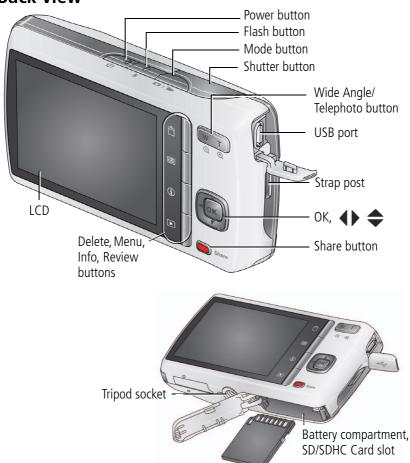

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Table of contents

1	Setting up your camera Attaching the strap Loading the KLIC-7006 battery Charging the battery Turning on the camera Setting the language and date/time Storing pictures on an optional SD or SDHC Card	1 2 4 4
2	Taking pictures/videos Taking a video Adjusting LCD brightness Understanding the picture-taking icons Know when your battery needs charging Using the optical zoom. Using the flash Using different modes Using shortcuts Using the self-timer. Using burst Taking panoramic pictures	6 8 8 9 .11 .13
3	Sharing and tagging pictures Sharing pictures through social networks Tagging pictures Marking pictures/videos for emailing	. 16 . 18
4	Reviewing and editing Reviewing pictures/videos Deleting pictures/videos Viewing pictures/videos in different ways A smarter way to find and enjoy your pictures	. 21 . 22 . 23


Table of contents

	Understanding the review icons	. 25
	Creating a multimedia slide show	. 26
	Using the menu button in review	
	Cropping pictures	. 28
	Editing videos	. 29
	Selecting multiple pictures/videos	.30
	Copying pictures/videos	
5	Doing more with your camera	.31
_	Using the menu button to change settings	.31
6	Transferring, printing pictures	27
U	Transferring pictures to your computer	. ., 27
	Printing pictures	
	Marking your pictures for printing	اد. 10
	Marking your pictures for printing	. 40
7	Troubleshooting	.41
	Getting help from your camera	.41
	Troubleshooting	. 42
	Getting help on the Web	.46
ጸ	Appendix	4 7
•	Camera specifications	<i>,</i>
	Care and maintenance	
	Upgrading your software and firmware	
	Storage capacities	
	Important safety instructions	
	Battery replacement, battery life	
	Limited warranty	
	Regulatory compliance	


1

Setting up your camera

Attaching the strap

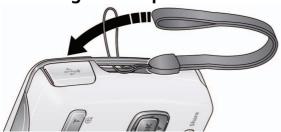

Loading the KLIC-7006 battery

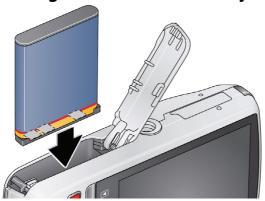


Purchase extra batteries	www.kodak.com/go/m550accessories
Charge the battery	see page 2
Know when your battery needs charging	see page 8

Charging the battery

If your package included	Then see
An in-camera battery charger	Using the in-camera battery charger
An external battery charger	Using the external battery charger

Using the in-camera battery charger

Charge the battery whenever necessary.

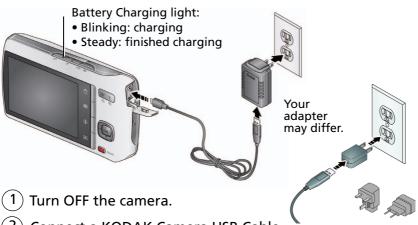


2 Connect a KODAK Camera USB Cable, Micro B / 5-Pin. (Use only the cable included with this camera!)

NOTE: You can use the camera while it's plugged in.

Purchase extra batteries	www.kodak.com/go/m550accessories
Know when your battery needs charging	see page 8

Using the external battery charger

Charge the battery whenever necessary.

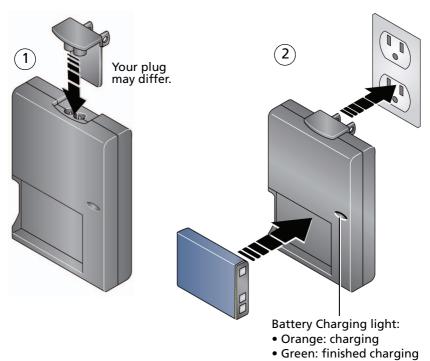

Purchase extra batteries	www.kodak.com/go/m550accessories
Know when your battery needs charging	see page 8

Turning on the camera



Setting the language and date/time



Language:

▲▼ to change.
OK to accept.

Date/Time:

At the prompt, press OK.

to change current field. for previous/next field.

OK to accept.

NOTE: To change language in the future, use the Setup menu (see page 36).

Storing pictures on an optional SD or SDHC Card

Your camera has internal memory. We recommend purchasing an SD or SDHC Card to conveniently store more pictures/videos.



CAUTION:

A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera.

- 1 Turn off the camera.
- Push the card until it clicks.
- (3) Turn on the camera.




Purchase accessories

www.kodak.com/go/m550accessories

2

| Taking pictures/videos


Taking pictures

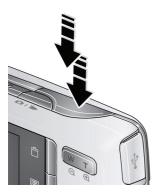

To get clear, focused pictures:

- 1 The camera turns on in Smart Capture mode. (If it's in a different mode, press the Mode button, then until the LCD displays Smart Capture mode, then press OK.)
- 2 Compose the picture.
- **3** Press the Shutter button **halfway** to focus and set exposure. When the framing marks turn green, press the Shutter button **completely down**.

Using the framing marks

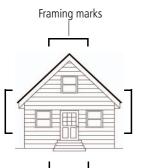

Framing marks indicate the camera focus area.

- 1 Press the Shutter button **halfway**.

 If the camera is not focusing on the desired subject, release the Shutter button and recompose the scene.
- **2** Press the Shutter button **completely down** to take the picture.

NOTE: Multiple framing marks may appear when faces are detected.

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Taking a video



- 1 Press the Mode button, then wuntil the LCD displays Video , then press OK.
- **2** Press the Shutter button **completely down**, then release it. To stop recording, press and release the Shutter button again.

To review and work with videos, see page 21.

Reviewing the picture/video just taken


After you take a picture/video, the LCD briefly displays the picture or the first frame of a video. (To take new pictures/videos sooner, press the Shutter button halfway.)



Adjusting LCD brightness

To adjust the LCD brightness for your environment, see page 35.

Understanding the picture-taking icons

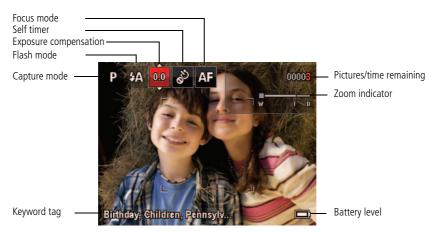

Know when your battery needs charging

The battery level icon works like the gas gauge in your car, but appears only when the battery requires your attention. (If you're viewing shortcuts, the battery level is always displayed. See page 13.)

Charge the battery whenever necessary.

Purchase extra batteries	www.kodak.com/go/m550accessories
Charge the battery	see page 2

Using the optical zoom



- **1** Use the LCD to frame your subject.
- 2 To zoom in, press Telephoto (T).
 To zoom out, press Wide Angle (W).
- **3** Take the picture.

 
NOTE: For focus distances, see Specifications starting on page 47.

Using digital zoom

Use digital zoom to get up to 5X magnification beyond optical zoom. (Digital zoom is not available in Smart Capture mode.) Press Telephoto (T) until the slider on the LCD is at the end of the optical zoom range. Release Telephoto (T), then press it again.

NOTE: You may notice decreased image quality when using digital zoom.

Using the flash




Flash modes		Flash fires
Auto	4A	When the lighting conditions require it.
Fill (Flash On)	4	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the light is behind the subject). NOTE: (Not available in Smart Capture mode.)
Red-eye Reduction Choose a	Preflash \$	A preflash fires, shrinking the eye pupil, before the picture is taken.
setting in the Setup menu, see page 35.	Digital Correction	A preflash does not fire; the camera corrects red eye. NOTE: When using digital correction, image processing takes longer than when using preflash.
Off	3	Never

10

Using different modes

 Press the Mode button, then — until the LCD displays the mode that best suits your subjects and surroundings, then press OK.



Use this mode		For
		General picture taking—it offers excellent image quality and ease of use.
		■ Faces get focus and exposure priority.
	C	■ The scene is analyzed for other content and for lighting.
9	Smart Capture	You can choose the best picture size and aspect ratio for your needs—just press the Menu 📰 button and choose Picture Size.
		■ 3:2 (the best choice when making 4 x 6 prints)
		■ 16:9 (wide screen)
		■ 4:3 (the default setting)
P	Program	Advanced picture taking—allows access to manual settings.
SCN	Scene	Point-and-shoot simplicity when taking pictures in practically any situation. (See page 12.)
	Video	Capturing video with sound. (See page 7.)

Using Scene (SCN) modes

Choose a Scene mode—for great pictures in practically any situation.

- 1 Press the Mode button, then wuntil the LCD displays SCN, then press OK.
- **2** Press **1** To view scene mode descriptions.
- **3** Press OK (or let the description turn off) to enter the highlighted Scene mode. The camera is now in the highlighted scene mode. To read a mode description after it has turned off, press OK to see it again.

SCN mode	For	
Portrait	Full-frame portraits of people.	
Sport	Action pictures.	
Blur Reduction	Reducing blur caused by camera shake or subject motion.	
Panorama L-R, R-L "Stitching" 2 or 3 pictures into 1 panoramic scene. (See page 1)		
Landscape	Distant scenes.	
High ISO	gh ISO People indoors, in low-light scenes.	
Close-up	Close range. Use available light instead of flash, if possible.	
Flower	Close-ups of flowers or other small subjects in bright light.	
Sunset	Subjects at dusk.	
Backlight	Subjects that are in shadow or "backlit."	
Candle Light	Subjects illuminated by candle light.	
Children	Action pictures of children in bright light.	
Manner/ Museum	Quiet occasions, like a wedding or lecture. Flash and sound are disabled. For best results, place the camera on a steady surface or tripod.	
Text	Documents. For best results, place the camera on a steady surface or tripod.	
Beach	Bright beach scenes.	

SCN mode	For	
Snow	Bright snow scenes.	
Fireworks	Fireworks. For best results, place the camera on a steady surface or tripod.	
Self-Portrait	Close-ups of yourself. Assures proper focus and minimizes red eye.	
Night Portrait	Reduces red eye of people in night scenes or low-light conditions.	
Night Landscape	Distant scenery at night. Flash does not fire.	
Panning Shot	Emphasizing horizontal motion, with a sharp subject and blurred background.	

Using shortcuts

Your camera has a clean, uncluttered interface. For quick access to the most popular capture and review functions:

- 1 Press the Info button.

 The shortcuts appear. To hide the shortcuts again, press 1.
- 2 Press **\| \| \| \)** to access functions like Exposure Compensation, Self-timer, and Auto focus. (You'll see different functions in different modes.)
- **3** Press **t** o choose a setting.



Using the self-timer

Use the self-timer when you want to be included in a picture or to ensure a steady Shutter button press. For best results, place the camera on a tripod or steady surface. You can turn on the self-timer using a shortcut (see page 13) or these steps:

- 1 Press the Menu button. Press to choose Self-timer/Burst, then press OK.
- - **10 Seconds**—**10** A picture is taken after a 10-second delay.
 - **2 Seconds** A picture is taken after a 2-second delay.
 - **2 Picture Timer**—_{2x} The first picture is taken after a 10-second delay. A second picture is taken 8 seconds later.
- **3** Compose the scene. Press the Shutter button **halfway**, then **completely down**. *The camera takes the picturelpictures after the delay.*

To take a video after a 2- or 10-second delay, use the same procedure but press the Shutter button **completely down**.

Using burst

Use the burst feature to take up to 3 pictures in rapid succession. You can turn on burst using a shortcut (see page 13) or these steps:

- **1** Press the Menu **■** button.
- 2 Press ▲▼ to choose Self-timer/Burst, then press ◀▶ to choose Burst On.
- **3** Press the Menu button.
- 4 Compose the scene. Press the Shutter button halfway, then completely down and hold it.

The camera stops taking pictures when you release the Shutter button, when pictures are taken, or when there is no more storage space. Burst is unavailable in some modes.

Taking panoramic pictures

Use panorama to "stitch" up to 3 pictures into a panoramic scene.

NOTE: Only the panoramic picture is saved; individual pictures are not. (Exposure and white balance are set with the first picture. The flash is set to Off.)

- 2 Press \to choose Panorama Left-Right or Panorama Right-Left (depending on the direction you want to pan), then press OK.
- **3** Take the first picture.

 After a quickview, the LCD displays the liveview and an "overlay" from the first picture. (You can press the Delete button to re-take the first or second picture.)
- **4** Compose the second picture. Make the overlay from the first picture cover the same portion in the new picture.
- **5** If you are taking/stitching only 2 pictures, press OK to stitch them together. *After you take 3 pictures, the pictures are automatically stitched together.*

Take 2 or 3 pictures.



Get 1 panoramic picture.



NOTE: To use the self-timer 10-second or 2-second setting, see page 14.

3 Sharing and tagging pictures

Sharing pictures through social networks

It's never been easier to share your pictures on your favorite social networking sites.

IMPORTANT: To use the camera's social networking features, you need to download KODAK Software. (See page 37.)

- **1** Press the Review ▶ button, then **♦** to find a picture.
- **2** Press the Share button.

 If it's your first time, a Help screen appears.
- 3 Press to choose a social networking site, then press OK.

 A check mark appears. Repeat this step to choose more sites. (Press OK again to remove a check mark.)
- **4** Press to choose Done, then press OK.

 The picture is displayed with the Share icon. When you transfer the picture to your computer, it will be sent to the networking site(s) that you chose.

Tip: Do you send pictures to the same sites each time?

Find a picture, then press and hold the Share button for about 1 second. The camera applies the settings that you used previously and adds the Share icon to the picture.

Choose which social networking sites to display on your camera

You can show/hide social networking sites on your camera so that only your favorite sites appear.

- 1 In Review, press the Menu 🔳 button.
- 2 Press ◀▶ to choose the Setup tab, then ▲▼ to choose Share Button Settings, then press OK.
- 3 Press ▲▼ to choose a social networking site, then press ◀▶ to choose Show or Hide. Repeat this step until you have chosen Show/Hide for each social network.
- **4** When finished, press to choose Done, then press OK.

 To return to picture-taking mode, press the Shutter button halfway down. When you are in Review and press the Share button, only chosen sites are shown.

Manage email addresses and KODAK PULSE Digital Frames

You can add, edit, or delete email addresses and KODAK PULSE Digital Frames on your camera.

- 1 In Review, press the Share button. Press to choose Manage Email Addresses (or Manage Frames), then press OK.
- - To edit an email address or a KODAK PULSE Digital Frame, press to choose the address's nickname ("Dad" or "Mary") or the frame, then press OK. Use the on-screen keyboard to make edits.
 - To delete an email address or frame, choose Delete Email or Delete Frame, then press OK. Press to choose the address or frames, then press OK so that a check mark appears. Press to choose Delete, then press OK.
- **3** When finished, press to choose Done, then press OK.

 To return to picture-taking mode, press the Shutter button halfway down.

Tagging pictures

Tag pictures to make them easy to find, later. You can tag pictures in 2 ways:

- **People**, and then find all pictures of "Mary."
- **Keywords**, and then find all pictures from "Dad's 60th Birthday."

Tagging people

When you tag faces, your camera "learns" to recognize people by name. Then it matches names and faces in pictures you've taken and those you take in the future.

- 1 Press the Review ▶ button, then ◆ to find a picture that contains faces.
- 2 Press the Menu **■**button. Press **▲▼** to choose Tag People, then press OK.
- **3** Press to choose Apply Tags, then press OK.
- 4 Press to choose an existing name, or New Name to add a new one (see Using the keyboard, page 20), then press OK.



Tip: Are faces not always detected?

If a face is turned sideways, is too distant, or if the contrast between face and background is insufficient, then the camera might not detect the face.

Need to update a name?

If you meet a new friend—James—but you already have pictures tagged with your old friend, James, you can:

- Tag the new James with "James Smith" and/or
- Update the old James to "James Monroe"

Here's how:

- **1** Press the Review button.
- 2 Press the Menu button. Press ▲▼ to choose Tag People, then press OK.
- **3** Press ▲▼ to choose Modify Names List, then press OK.
- **4** Press to choose the name you want to modify, then press OK.
- **5** Edit the name, press ▲▼ to choose OK, then press OK.

 To return to picture-taking mode, press the Shutter button halfway down.

Tip: You can have up to 20 active names.

Tagging with keywords

- **1** Press the Review ▶ button, then **♦** to find a picture to tag.
- 2 Press the Menu 🔳 button. Press 🗪 to choose Keyword Tag, then press OK.
- 3 Press to choose an existing keyword, or New Keyword (See Using the keyboard, page 20) to add a new one, then press OK.
- **4** Press **♦** to add keywords to other pictures. When finished, press **▶** to choose Done, then press OK.

To return to picture-taking mode, press the Shutter button halfway down.

Tip: You can pre-choose a tag so that new pictures are assigned that tag (see page 32).

Using the keyboard

The keyboard appears when you need to add names or keywords.

- 1 Press **♦** ▶ **★** to highlight a letter, then press OK.
- **2** When finished, press **T** to choose OK, then press OK.
- **3** If you've added a new name, the camera prompts you to update all faces to match assigned names. Choose Yes, then press OK.

The name is assigned to all faces that match this one.

Tip: Here's another way to update pictures so that faces are matched to names:

- **1** Press the Review button.
- 2 Press the Menu button. Press ▲▼ to choose Tag People, then press OK.
- **3** Press to choose Update People Tags, then press OK.

Marking pictures/videos for emailing

It's simple to mark pictures so that they're ready to email when you transfer them to your computer. First, create a new email address. (See Using the keyboard.)

- **1** Press the Review ▶ button. Press **♦** to find a picture.
- **2** Press the Share button.
- **3** Press **T** to choose Email, then press OK.
- **4** Press **T** to find an email address, then press OK.

To mark other pictures/videos with the same address, press ◀▶, then press OK.

To send the pictures/videos to more than one address, repeat step 4.

To return to picture-taking mode, press the Shutter button halfway down.

When you transfer the marked pictures/videos to your computer, the software prompts you to send the pictures/videos.

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Reviewing and editing

Reviewing pictures/videos



- 1 Press the Review button.
- 2 Press **♦** for previous/next picture/video.
 - To exit, press the Review button or press the Shutter button halfway down.
 - To view pictures/videos as thumbnails, press the Wide Angle (W) button. (See page 23.)

Find your pictures like a pro...

See "A smarter way to find and enjoy your pictures" on page 24.

Playing a video

Press OK to play/pause/resume a video. During playback:



- Press ▶ to play at 2X speed; press again for 4X.
- Press to reverse at 2X speed; press again for 4X.

Deleting pictures/videos

- **1** Press the Review button.
- **2** Press **♦** for previous/next picture/video.
- **3** Press the Delete button.
- **4** Follow the screen prompts.

NOTE: To delete protected pictures/videos, remove protection before deleting. (See Protecting pictures/videos from deletion, page 22.)

Using the undo delete picture feature

If you accidentally delete a picture, you may be able to use Undo Delete to retrieve it. This feature is only available immediately after you delete a picture.

Protecting pictures/videos from deletion

- **1** Press the Review button.
- 2 Press the Menu 🛅 button.
- **3** Press to choose Protect, then press OK.
- **4** Press **t** o choose Protect, then press OK.

A check mark indicates that the picture/video is protected. Clicking OK again removes the check mark. Press \P to protect other pictures/videos, or press \P to choose Done, then press OK.

■ Press the Menu 🔠 button to exit the menu.



Formatting internal memory or an SD or SDHC Card deletes all (including protected) pictures/videos. (Formatting internal memory also deletes email addresses and keyword tags.)

Viewing pictures/videos in different ways

Magnifying a picture



- 1 Press the Review button.

 The camera shows the last picture that was taken.
- 2 Press Telephoto (T) to magnify 1X–8X.
- **3** Press **\(\rightarrow\)** to view other parts of a picture.
 - Press OK to return to 1X.

Viewing as thumbnails

- 1 Press the Review button.

 The camera shows the last picture that was taken.
- **2** Press the Wide Angle (W) button to view pictures/videos as thumbnails. (Press it again to see more, smaller thumbnails.)
 - To view all pictures/videos, choose the All tab.

 To sort by favorites, date, people, or tagged pictures/videos, press ◀▶ and choose the appropriate tab.
- 3 To see a single picture/video, press ◀▶▲▼ to choose it. Then press the Telephoto (T) button.
 - To select multiple pictures/videos, see page 30.
 - Press the Review button to exit Review.

A smarter way to find and enjoy your pictures

Tag pictures—by people or keywords—to make them easy to find, later. For example, the camera can find all pictures that contain "Mary" or "Dad's 60th Birthday." (See Tagging people, page 18 or Tagging with keywords, page 19.)

- **1** Press the Review button.
- **2** Press the Wide Angle (W) button to view pictures by thumbnail (or choose View Thumbnails shortcut).
- 3 Press \to choose a tab and sort pictures by All, Date, People, Favorite, or Keyword.
- **4** Press **♦** ▶ **★** to choose a picture or picture stack.

Press Telephoto (T) see pictures in a stack or to see an individual picture. Press Wide Angle (W) to see thumbnails or picture stacks. To return to picture-taking mode, press the Shutter button halfway down.



Tip: For best results, make sure the camera's date/time is current (see page 34).

Understanding the review icons



^{*} For more about shortcuts, see page 13.

Know when your battery needs charging

The battery level icon works like the gas gauge in your car, but appears only when the battery requires your attention. (If you're viewing shortcuts, the battery level is always displayed. See page 13.)

Charge the battery whenever necessary.

Purchase extra batteries	www.kodak.com/go/m550accessories
Charge the battery	see page 2

Creating a multimedia slide show

Use Multimedia Slide Show to display your pictures/videos on the LCD. You can play all pictures/videos, or select pictures to include in the slide show. You can customize your slide show to include music and your choice of transitions. You can even save a slide show.

Make a slide show that you can save

- 1 Press the Review button. Select pictures (see page 30). If none are selected, then all pictures are shown.
- 2 Press the Menu i button. If the Review tab is not highlighted, press ◀▶.
- **3** Press to choose Multimedia Slide Show, then press OK.
- **4** Press to choose Preview Slide Show, then press OK.

 Each picture/video is displayed once. To interrupt the slide show, press OK. After the slide show plays, you may save or modify it.

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Play a slide show loop

When you turn on Loop, the slide show is continuously repeated.

- 1 On the Multimedia Slide Show menu, press → to choose Loop, then press OK.
- **3** Press to choose Preview Slide Show, then press OK.

 The slide show repeats until you press OK or until the battery is exhausted.

Displaying pictures/videos on a television

You can display pictures/videos on a television, computer monitor, or any device equipped with a video input. To connect the camera directly to a television, use an A/V cable (may be sold separately).



Purchase accessories www.kodak.com/go/m550accessories

NOTE: Ensure that the Video Out setting (NTSC or PAL) is correct (see page 36). The slide show stops if you connect or disconnect the cable while the slide show is running. (Image quality on a television screen may not be as good as on a computer monitor or when printed.)

Using the menu button in review

- 1 Press the Review button then the Menu button.
- **2** Press **♦** to choose a tab:
 - Review
 - Edit
 - Setup
- **3** Press to choose a setting, then press OK.
- **4** Choose an option, then press OK.

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Cropping pictures

You can crop a picture so that only the desired portion of the picture remains.



- Picture Cropped picture
- 1 Press the Review ▶ button, then ◆ to find a picture to crop.
- 2 Press the Menu button, then to choose the Edit tab. Choose Crop, then press OK.
- **4** Follow the screen prompts.

The picture is cropped. (The original is saved.) Cropped pictures cannot be cropped again on the camera. To return to picture-taking mode, press the Shutter button halfway down.

 
IMPORTANT: Your camera offers a built-in Help system. See page 41.

Editing videos

You can do incredible things with your videos.

Making a picture from a video

You can choose a single frame from a video, then make a picture suitable for a 4×6 -inch $(10 \times 15 \text{ cm})$ print.




- 1 Press the Review ▶ button, then ♦ to find a video.
- 2 Press the Menu button, then to choose the Edit tab. Choose Make Picture, then press OK.
- **3** Follow the screen prompts.

 A picture is created. (The original video is saved.) To return to picture-taking mode, press the Shutter button halfway down.

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Trimming a video

 You can remove an unwanted start or end from a video, saving only the desired portion.




- **1** Press the Review **▶** button, then **♦** to find a video.
- 2 Press the Menu **□** button, then **↓** to choose the Edit tab. Choose Trim, then press OK.
- **3** Follow the screen prompts.

The video is trimmed. (You can save it as a new video or replace the original.) To return to picture-taking mode, press the Shutter button halfway down.

Selecting multiple pictures/videos

 Use the multi-select feature when you have two or more pictures to print, share, delete, protect/unprotect, tag with keyword, etc. Multi-select is used most effectively when viewing thumbnails, Viewing as thumbnails, page 23.



- 1 Press the Review ▶ button, then ♠ (and ▲▼ if you're viewing thumbnails) to find a picture/video.
- **2** Press OK to select pictures/videos. A check mark appears on the picture. (Press OK again to remove a check mark.) You can now print, transfer, delete, etc. the selected pictures.

Copying pictures/videos

You can copy pictures/videos from a card to internal memory or from internal memory to a card.

Copy pictures/videos:

- 1 Press the Review ▶ button, then ◀ ▶ to find a picture. (You can also use multi-select. See "Selecting multiple pictures/videos" on page 30.)
- **2** Press the Menu **■** button, then **♦** to choose the Edit tab.
- **3** Press to choose Copy, then press OK. Choose an option, then press OK.

NOTE: Pictures/videos are copied, not moved. To remove pictures/videos from the original location after copying, delete them (see page 22).

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Doing more with your camera

IMPORTANT: Your camera offers a built-in Help system. To get the most from your camera, see page 41.

Using the menu button to change settings

You can change settings to get the best results from your camera.

NOTE: Some modes offer limited settings. Some settings remain until you change them; others, until you change modes or turn off the camera.

- 1 Press the Menu 🔚 button.
- **2** Press **♦** to choose a tab:
 - Capture/Video for the most common picture- and video-taking settings
 - **Setup** for other camera settings
- **3** Press to choose a setting, then press OK.
- **4** Choose an option, then press OK.

Using the capture tab

Press Menu, ♠, ♠▼, and OK to access settings	Picture-taking Options
Picture Size	See Camera Specifications starting on page 47.
Choose a picture resolution.	

D M 4b A.	Distance to Live Outline
Press Menu, ◀▶, ▲▼, and OK to access settings	Picture-taking Options
Self-timer/Burst	Off
Choose Self-timer or Burst	10 Seconds
feature.	2 Seconds
	2 Picture Timer
	Burst On —Press the Shutter button halfway to focus and set exposure. Press the Shutter button completely down and hold it to take up to 3 pictures.
Preset Keyword Tag	New Keyword
Create keyword names and assign them to pictures/videos. See page 19.	Delete Keyword
Exposure Compensation	See Camera Specifications starting on page 47.
Make a picture lighter or darker. (Available in Program and Panorama modes.) To access this feature with a shortcut, see page 13.	
ISO Speed	See Camera Specifications starting on page 47.
Control the camera's sensitivity to light.	
Long Time Exposure	None
Choose how long the shutter stays open (normally in low-light conditions). For best results, place the camera on a tripod or steady surface.	0.5, 1.0, 2.0, 4.0, 8.0 seconds

Press Menu, ◀ ▶, ▲▼, and OK to access settings	Picture-taking Options
Color Mode	High Color
Choose color tones.	Natural Color
Unavailable in Video mode.	Low Color
	Black & White
	Sepia —For a reddish-brown, antique look.
White Balance Choose your lighting	Auto —Automatically corrects white balance. Ideal for general picture taking.
condition. (Available in	Daylight —For pictures in natural lighting.
Program and Panorama modes.)	Tungsten —Corrects the orange cast of incandescent light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash.
	Fluorescent —Corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash.
	Open Shade —For pictures in shade in natural lighting.
Focus Mode	Auto —For general picture-taking.
Choose a focus distance.	Macro —For sharpness and detail in pictures at close range. Use available light instead of flash, if possible. The camera automatically sets the focus distance depending on the zoom position.
	Infinity —For distant subjects; auto-focus framing marks are unavailable.
Focus/Exposure Zone Choose how the camera assesses the scene for	Face Priority —If faces are detected, they receive focus/exposure priority. (If faces are not detected, the camera switches to Multi-Zone.)
exposure and focus.	Multi-Zone —Evaluates 5 zones to give an even picture focus. Ideal for general picture taking.
	Center-Zone —Evaluates the small area centered in the lens. Ideal for focusing on a precise area.

Press Menu, ◀▶, ▲▼, and OK to access settings	Picture-taking Options
AF Control (Still) Choose an auto-focus setting.	Continuous AF—Because the camera is always focusing, there is no need to press the Shutter button halfway down to focus. Single AF—Focuses when the Shutter button is pressed halfway down. (This setting uses less battery power.)
Sharpness Control picture sharpness or softness.	Sharp Normal Soft

Video settings

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Press Menu, ◀ ▶, ▲ ▼, and OK to access settings	Video-taking Options
AF Control (Video)	Continuous AF—Camera is always focusing.
Choose an auto-focus setting.	Single AF —Camera focuses once, when the Shutter button is pressed.
Self-timer	Off
Choose Self-timer feature.	10 Seconds
	2 Seconds

Using the Setup menu

Use Setup to customize other camera settings.

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Press Menu, to choose Setup, then to access settings	Setup Options
Date & Time	Set date and time.

Press Menu, to choose Setup, then to access settings	Setup Options
LCD Brightness Choose LCD brightness during picture/video capture. (During Review, the LCD is set to High Power.) Share Button Settings	Auto—LCD brightness is automatically adjusted according to environment. High Power—Brighter LCD; uses more battery power. Power Save—Dimmer LCD; uses less power. Show or hide:
Choose what is displayed when the Share button is pressed in Review.	 Individual social networking sites E-mail addresses (all or none) KODAK Digital Frames (all or none)
Red-eye Reduction The Red-eye flash fires automatically before a picture is taken.	Preflash—The flash fires to reduce the chance of red-eye. Digital correction—The camera digitally corrects red-eye after a picture is taken. (Processing time after taking a picture may increase.)
Orientation Sensor Orient pictures so that they are displayed with the correct side up.	On—The camera rotates pictures so that all appear in the same orientation on the camera. On Transfer—The camera rotates pictures when they are transferred to your computer. Off—Pictures are not rotated.
Camera Sounds Choose camera volume. Choose sound effects for each function.	Volume Focus Lock Shutter Self-timer Error Power On

Press Menu, to choose Setup, then to access settings	Setup Options
Video Out Choose the regional setting that lets you	NTSC—Used in North America and Japan; most common format.
connect the camera to a television or other external device.	PAL—Used in Europe and China.
Image Storage Choose a storage location for	Auto —The camera uses the card if one is in the camera. If not, the camera uses internal memory.
pictures/videos.	Internal Memory —The camera always uses internal memory, even if a card is installed.
Language	Choose your language.
Reset Camera Reset settings to their default.	Reset All Camera Settings —Settings revert to their factory defaults.
J	Reset Startup Application —Resets camera to startup mode to allow KODAK Software download.
Format	Memory Card —Deletes everything on the card; formats the card.
A CAUTION:	Cancel—Exits without making a change.
Formatting deletes all pictures/videos, including those that are protected. Removing a card during formatting may damage the card.	Internal Memory —Deletes everything in internal memory including email addresses and keyword tags; formats the internal memory.
About	
View camera information.	

6

Transferring, printing pictures

Transferring pictures to your computer

Download KODAK Software—so it's easy to transfer and share pictures and videos.

Make sure the computer is connected to the Internet. When you connect the camera to the computer, the KODAK Software Downloader automatically runs. Follow the prompts to download and install KODAK Software.*

- 1 Turn off the camera.
- Use the KODAK Camera USB Cable, Micro B / 5-Pin to connect camera to computer. (Use only the cable included with this camera!)
- Turn on the camera. After the software is installed, follow the prompts to transfer pictures and videos to your computer.
 - * If the downloader does not run, find and launch it:
 - WINDOWS OS: in My Computer
 - MAC OS: on your Desktop

NOTE: You can also use a card reader to transfer your pictures/videos.

Download KODAK Software later	www.kodak.com/go/camerasw
To use this camera on more than one computer, use the camera's Reset Startup Application feature	see page 36

Printing pictures

Direct printing with a KODAK All-in-One Printer

Your camera is compatible with PICTBRIDGE Technology, so you can print directly to PICTBRIDGE enabled Printers. You need a camera, a PICTBRIDGE enabled Printer, and a USB cable.

Connecting the camera to a KODAK All-in-One Printer

- 1 Turn off the camera and printer.
- 2 Connect the appropriate USB cable from the camera to the printer.

Printing from a KODAK All-in-One Printer

- **1** Turn on the printer. Turn on the camera.
 - The PictBridge logo is displayed, followed by the current picture and menu. (If no pictures are found, a message is displayed.) If the menu turns off, press any button to redisplay it.
- **2** Choose a printing option, then press OK.
 - **Current Picture**—Press **◆** ▶ to choose a picture.

Tagged Pictures—If your printer is capable, print pictures that you marked for printing.

Index Print—Print thumbnails of all pictures. (This option requires one or more sheets of paper.)

All Pictures—Print all pictures in internal memory or on a card.

Image Storage—Access Auto or Internal Memory.

NOTE: During direct printing, pictures are not permanently transferred or saved to the printer. To transfer pictures to your computer, see page 37.

Purchase cables, accessories www.kodak.com/go/m550accessories

Disconnecting the camera from a KODAK All-in-One Printer

- **1** Turn off the camera and printer.
- 2 Disconnect the USB cable from the camera and the printer.

Ordering prints online

KODAK Gallery (www.kodakgallery.com) makes it easy to:

- Upload your pictures.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Have prints, photo greeting cards, frames, and albums delivered to your door.

Printing from an optional SD or SDHC Card

- Automatically print tagged pictures when you insert your card into a printer with an SD/SDHC Card slot. See your printer user's guide for details.
- Make prints at an SD/SDHC Card-capable KODAK Picture Kiosk. Visit www.kodak.com/go/picturemaker.
- Take the card to your local photo retailer for professional printing.

Marking your pictures for printing

- **1** Press the Review ▶ button. Press **↓** to find a picture.
- 2 Press the Menu 🛅 button.
- **3** Press to choose Print, then press OK.
- **4** Press **t** to choose the number of copies.
- **5** Press OK.

To return to picture-taking mode, press the Shutter button halfway down.

IMPORTANT: Your camera offers a built-in Help system. See page 41.

Troubleshooting

Getting help from your camera

You want the most from your camera. You want to understand:

- What it can do for you
- And how to take the best possible pictures and videos

Great news!

Your camera offers a built-in Help system. It describes every setting for every menu choice. If you learn nothing else about your camera, learn how to use on-camera Help.

Turning on camera Help



- Press the Menu 🔳 button, then highlight a menu choice.
- Press the Info
 button.
 - ▲▼ Scroll through a Help topic.

Troubleshooting

Camera problems

Status	Solution
Camera does not turn on	Make sure the battery is charged and installed correctly (see page 1).
Camera does not turn off	
Camera buttons and controls do not function	
LCD is too dark.	■ Adjust the LCD Brightness setting (see page 35).
In Review, a blue or black screen is displayed instead of a picture	Transfer all pictures to the computer (see page 37).Take another picture.
Pictures remaining number does not decrease after taking a picture	■ Continue taking pictures. The camera is operating normally. (The camera estimates the number of pictures remaining after each picture is taken, based on picture size and content.)
Flash does not fire	Check the flash setting, and change as needed (see page 10). NOTE: The flash does not fire in all modes.
Memory card is almost or entirely full	Transfer the pictures to the computer (see page 37).Delete pictures from the card (see page 22) or insert a new card.
Battery life is short	 Make sure the correct battery type is installed (see page 51). Wipe the contacts with a clean, dry cloth before inserting a battery in the camera. Insert a new/charged battery (see page 1).

Status	Solution
You cannot take a	■ Turn the camera off, then on again.
picture	■ Depress the Shutter button all the way (see page 6).
	■ Insert a new/charged battery (see page 1).
	■ Memory is full. Transfer pictures to the computer (see page 37), delete pictures (see page 22), or insert another card.
Memory card not recognized or camera	Card may be corrupted. Format the card in the camera (see page 36).
freezes with card	■ Use another memory card. Only SD or SDHC Cards are supported.
Cannot find the desired picture/video	■ To view pictures on a card or in internal memory, see page 21.

Computer/connectivity problems

Status	Solution
Slide Show does not run on an external	Adjust the camera Video Out setting to NTSC or PAL (see page 36).
video device	Make sure the external device settings are correct. (See the device's user guide.)
Computer does not	■ Turn off the camera, then turn it back on.
communicate with the camera	Make sure the battery is charged and installed correctly (see page 1).
	Make sure the KODAK Camera USB Cable, Micro B / 5-Pin is connected to the camera and the computer (see page 37). Then turn on the camera.
	■ See KODAK Software Help at www.kodak.com/go/camerasw.

Picture quality problems

Status	Solution
Picture is not clear	To automatically set exposure and focus, press the Shutter button halfway . When the framing marks turn green, press the Shutter button completely down to take the picture.
	Clean the lens (see page 49).
	■ Make sure the camera is not in Macro mode if you are more than 27.6 in. (70 cm) from your subject (see page 33).
	■ Place the camera on a flat, steady surface or use a tripod (especially in high-zoom settings or in low light).
	■ Use a larger picture size (see page 31).
	■ If you're manually adjusting the ISO speed, realize that a high ISO setting may cause grainy pictures (see page 32).
Picture is too dark	Reposition the camera for more available light.
	■ Use Fill flash (see page 10) or change your position so light is not behind the subject.
	Move so that the distance between you and the subject is within the effective flash range. (See Camera Specifications starting on page 47.)
	■ To automatically set exposure and focus, press the Shutter button halfway . When the framing marks turn green, press the Shutter button completely down to take the picture.
	■ In Program mode, adjust the Exposure Compensation (see page 32).
Picture is too light	Reposition the camera to reduce the amount of available light.
	■ Turn the flash off (see page 10).
	Move so that the distance between you and the subject is within the effective flash range. (See Camera Specifications starting on page 47.)
	■ To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture.
	■ In Program mode, adjust the Exposure Compensation (see page 32).

Direct printing (PICTBRIDGE enabled printer) problems

Status	Solution
Cannot find the desired picture	■ Use the Direct printing menu to change the image storage location.
The Direct printing menu interface turns off	■ Press any camera button to redisplay the menu.
Cannot print pictures	Make sure there is a connection between the camera and the printer (see page 38).
	■ Make sure the printer and the camera have power.
Camera or printer displays an error message	Follow the prompts to resolve the issue.

Getting help on the Web

Camera

Get support for your product (FAQs, troubleshooting information, arrange for repairs, etc.)	www.kodak.com/go/m550support
See step-by-step solutions and repair information	www.kodak.com/go/itg
Purchase camera accessories	www.kodak.com/go/m550accessories
Download the latest camera firmware and software	www.kodak.com/go/m550downloads
See online demonstrations of your camera	www.kodak.com/go/howto
Register your camera	www.kodak.com/go/register
Chat, email, write, or phone Kodak (Chat not available in all languages)	www.kodak.com/go/contact

Software

Download and get Help with KODAK Software	www.kodak.com/go/camerasw
Download KODAK EASYSHARE Software	www.kodak.com/go/easysharesw (or see Help in EASYSHARE Software)
Get help with the WINDOWS OS and working with digital pictures	www.kodak.com/go/pcbasics

Other

Get support for cameras, software, accessories, more	www.kodak.com/go/support
Get information on KODAK All-in-One Printers	www.kodak.com/go/inkjet

8 Appendix

Camera specifications

CCD-1/2.33-type

Effective pixels—12 MP (4040 x 3032)

LCD—2.7 in. (6.9 cm) LCD; 230K pixels; 4:3 aspect ratio

Image storage—Optional SD/SDHC Card (The SD logo is a trademark of the SD Card Association.) Maximum supported card size: 32 GB

Internal storage capacity—32 MB internal memory (20 MB available for image storage. 1 MB equals one million bytes.)

Taking lens—5X optical zoom; f/3.5–f/5.9; 35 mm equivalent: 28–140 mm

Lens protection—Built-in

Digital zoom—5X continuous

Focus system—TTL-AF (through-the-lens auto focus); Multi-Zone, Center-Zone, Face Priority. Working range:

0.5 m (1.6 ft)-infinity @ wide, normal

2.0 m (6.6 ft)-infinity @ telephoto, normal

0.1-0.8 m (0.3-2.6 ft) @ wide, Macro mode

1-2.1 m (3.3-6.9 ft) @ telephoto, Macro mode

Auto focus control—Continuous and Single AF

Face detection—Yes

Face recognition—Yes

Shutter speed—1/8–1/1400 seconds

Long time exposure—0.5–8 seconds

ISO speed—Auto 64-640; manual 64, 100, 200, 400, 800, 1000

Exposure metering—TTL-AE; Face Priority, Multi-Zone, Center-Zone

Exposure compensation—+/-2.0 EV with 1/3 EV step

White Balance—Auto, Daylight, Tungsten, Fluorescent, Open Shade

Electronic Flash—Auto flash; Auto, Fill, Red Eye, Off; Guide No. 7 (m); working range @ ISO 400 in Smart Capture mode: 0.3–3.5 m (1–11.5 ft) @ wide; 0.5–2.0 m (1.6–6.6 ft) @ telephoto

Self-timer mode—10-second, 2-second, 2-picture timer

Burst mode—Maximum 3 pictures @ 1.6 fps

Capture modes—Smart Capture, Program, Scene modes, Video

Image file format—

Still: EXIF 2.21 (JPEG compression); file organization DCF Video: OUICKTIME (CODEC Motion JPEG: audio: G711)

Picture size—12.0 MP (4:3): 4000 x 3000 pixels

10.7 MP (3:2): 4000 x 2664 pixels

9.0 MP (16:9): 4000 x 2248 pixels

6.2 MP (4:3): 2880 x 2160 pixels

3.1 MP (4:3): 2048 x 1536 pixels

2.1 MP (16:9): 1920 x 1080 pixels

1.2 MP (4:3): 1280 x 960 pixels

Color modes—High Color, Natural Color, Low Color, Black & White, Sepia

Sharpness modes—Sharp, Normal, Soft

Video capture—4 GB maximum; VGA (640 x 480 @ 30 fps)

Communication with computer—USB 2.0 high speed (PIMA 15740 protocol); via KODAK Camera USB Cable, Micro B / 5-Pin

Video output—NTSC or PAL

Microphone—Yes

Speaker—Yes

PICTBRIDGE support—Yes

Power—KODAK Li-Ion Rechargeable Digital Camera Battery KLIC-7006; 5V AC-to-USB battery charging

Tripod mount—1/4 inch

Size—98 x 58 x 22.9 mm (3.9 x 2.3 x 0.9 in.) @ power off

Weight—125 g (4.4oz) without card or battery

Operating temperature— $0-40^{\circ}$ C (32–104° F)

Care and maintenance

- If you suspect water has gotten inside the camera, remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of KODAK Products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance site at www.eiae.org or www.kodak.com/go/m550support.

Upgrading your software and firmware

Download the latest versions of KODAK Software and the camera firmware (the software that runs on the camera). Visit www.kodak.com/go/m550downloads.

Storage capacities

The LCD displays the approximate number of pictures (or minutes/seconds of video) remaining. For average SD Card capacities, visit www.kodak.com/go/SDcapacities. Actual storage capacity varies depending on subject composition, card size, and other factors. You may be able to store more or fewer pictures and videos.

Important safety instructions



CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, visit www.kodak/go/accessories.
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.

- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Go to www.kodak.com/go/reach for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH).
- Dispose of batteries according to local and national regulations. Visit www.kodak.com/go/kes.
- Do not charge non-rechargeable batteries.

 For more information on batteries, visit www.kodak.com/go/batterytypes.

Battery replacement, battery life

KODAK Li-lon Rechargeable Digital Camera Battery KLIC-7006 (770 mAh): 220 pictures per charge. Battery life per CIPA testing method. (Approx. number of pictures in Smart Capture mode, using an SD Card.) Actual life may vary based on usage.

Extending battery life

- Set LCD Brightness to Power Save (see page 35).
- Charge the battery whenever necessary.
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading the battery in the camera.

■ Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

Limited warranty

Kodak warrants its digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for the warranty period specified on your KODAK Product packaging. Retain the original dated sales receipt. Proof of purchase date is required with any request for warranty repair.

Limited warranty coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's

operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty. Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be the length of the express warranty period specified on your Kodak product packaging. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use, or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

Regulatory compliance

FCC compliance and advisory

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver: 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation. The KODAK High Performance USB AC Adapter K20-AM complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Waste Electrical and Electronic Equipment/Battery disposal



In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste.) For more information, contact your retailer, collection facility, or appropriate local authorities; or visit www.kodak.com/go/recycle. Product weight: 125 g (4.4 oz).



Australian C-Tick



VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。 取扱説明書に従って正しい取り扱いをして下さい。

Russian GOST-R

Eastman Kodak Company
Rochester, NY 14650
Фотокамера изготовлена в Китае; остальные элементы АЮ-40 в соответствии с маркировкой.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CE

Hereby, Eastman Kodak Company declares that this KODAK Product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Korean Class B ITE

이 기기는 가정용(B급)으로 전자파적합등록을 B급 기기 한 기기로서 주로 가정에서 사용하는 것을 목적 (가정용 방송통신기기) 으로 하며, 모든 지역에서 사용할 수 있습니다.

Korean Li-ion Regulatory

취급상의 주의사항

- < 경고 > 발열, 화재, 폭발 등의 위험을 수반할 수 있으니 다음 사항을
- a) 육안으로 식별이 가능할 정도의 부풀음이 발생된 전지는 위험할 수 있으므로 제조자 또는 판매자로 즉시 문의할 것
- b) 지정된 정품 충전기만을 사용할 것
- c) 화기에 가까이 하지 말 것(전자레인지에 넣지 말 것)
- d) 여름철 자동차 내부에 방치하지 말 것
- e) 찜질방 등 고온다습한 곳에서 보관, 사용하지 말 것
- f) 이불, 전기장판, 카펫 위에 올려 놓고 장시간 사용하지 말 것
- g) 전원을 켠 상태로 밀폐된 공간에 장시간 보관하지 말 것
- h) 전지 단자에 목걸이, 동전, 열쇠, 시계 등 금속 제품이 닿지 않도록 주의할
- Ĭi) 휴대 기기, 제조 업체가 보증한 리튬2차전지 사용할 것
- i) 분해, 압착, 관통 등의 행위를 하지 말 것
- k) 높은 곳에서 얼어뜨리는 등 비정상적 충격을 주지 말 것.
- T) 60℃이상의 고온에 노출하지 말 것
- m) 습기에 접촉되지 않도록 할 것

기타정보

- 폐기지침 : 각 지방자치단체의 법규에 의거하여 폐기할 것.
- 충전방법에 대한 권고지침
 - 1 본 충전지와 함께 사용할 디지털카메라 사용자 설명서의 충전설명 참조하세요. 2 코닥 정품 충전기 및 카메라에서만 충전하세요.(타사 충전셋 사용 급지)

제조년월: Y = Year(제조년도의 마지막 숫자), WW = Week(제조년도의 주)

제조년월 표시 예: 901 = 9 (2009년), 01 (첫째주)

China RoHS

环保使用期限 (EPUP)

在中国大陆,该值表示产品中存在的任何危险物质不得释放,以免危及人身健康、财产或环境的时间期限(以年计)。该值根据协明中所规定的产品正常使用而定。

有毒有害	F物质或元	素名称	及含量	标识表		
		有毒有害物质或元素				
部件名称	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	0	0	0	0	0
锂电池	×	0	0	0	0	0
交流变压器	×	0	0	0	0	0
电池充电器	×	0	0	0	0	0
〇:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。						
×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。						



Index

A	C
A/V out, 27	cable
about this camera, 36	audio/video, 27
accessories	camera sounds, 35
battery, 51	Canadian compliance, 55
buying, 46	care and maintenance, 49
SD/SDHC Card, 5	charging the battery, 2
add keywords, names, 20	children, 12
AF control (Still), 34	clock, setting, 4
AF control (video), 34	color mode, 33
AF zone, 33	computer
auto, 11	connecting camera, 37
focus control, 34	transfer to, 37
focus framing marks, 6	connector, USB / A/V, 27
auto focus (AF)	copy pictures
zone, 33	card to memory, 30 memory to card, 30
В	to computer, 37
backlight, 12	cropping pictures, 28
battery	customize camera, 34
charging, 2	castornize carriera, 5 i
expected life, 51	D
loading, 1	date setting, 4
purchase, 8, 25	deleting
status, 8, 25	during quickview, 7
types, 51	from internal memory, 22
beach, 12	from SD/SDHC Card, 22
brightness, LCD, 8	protecting pictures, videos, 22
burst, 14	digital zoom, 9
button	display, brightness, 8
delete, 7	displaying slide show, 26
telephoto/zoom, 9	disposal, recycling, 49

downloading pictures, 37	I
E edit videos, 29 emailing pictures, videos, 20 expected battery life, 51 exposure long time, 32, 35	icons, modes, 11 image storage, 36 installing battery, 1 SD/SDHC Card, 5 ISO speed, 32
exposure compensation, 32 external video device viewing pictures, videos, 27	K keyboard, 20 keywords, 19 KODAK Software
F faces, tagging, recognition, 18 FCC compliance, 54	upgrading, 50 Kodak Web sites, 41
find pictures, 24 fireworks, 13 firmware, upgrading, 50 flash, using, 10 flower, 12 focus framing marks, 6 focus mode, 33 format, 36 framing marks, 6 G guidelines, battery, 51	L language, 36 LCD brightness, 35 reviewing pictures, 21 reviewing videos, 21 LCD brightness, 8, 35 lens cleaning lens, 49 loading battery, 1 SD/SDHC Card, 5
H help	locate pictures, 24 long time exposure, 32, 35
camera help, 41 Web links, 41 high ISO, 12	M magnify a picture, 23 maintenance, camera, 49 make picture from video, 29 manner/museum, 12

marking	P
for email, 20	panoramic pictures, 15
memory	people, tagging, 18
inserting card, 5	PICTBRIDGE enabled printer, 38
menu settings, 31	picture size, 31, 32
modes, 11	pictures
auto, 11	copying, 30
backlight, 12	cropping, 28
beach, 12	emailing marked, 20
children, 12	marking, 40
fireworks, 13	printing marked, 40
flower, 12	protecting, 22
high ISO, 12	review icons, 25
manner/museum, 12	reviewing, 21
night landscape, 13	taking, modes, 11
night portrait, 13	transfer via USB cable, 37
scene (SCN), 12	pictures/video
self-portrait, 13	deleting, 22
snow, 13	playing a video, 21
text, 12	power
modes, capture	camera, 4
smart capture, 11	printing
multiple selections, 30	from a card, 39
multi-up, 23	optimizing printer, 41
	order online, 39
N	PICTBRIDGE, 38
night landscape, 13	tagged pictures, 39
night portrait, 13	protecting pictures, videos, 22
0	Q
online prints, ordering, 39	quickview, using, 7
optical zoom, 9	R
orientation sensor, 35	
	recycling, disposal, 49

regulatory information, 54	picture size, 31, 32		
repair, 46	picture-taking mode, 11		
reset camera, 36	self-timer, 14		
reviewing pictures/video	sharpness, 34		
as you take them, 7	video out, 36		
deleting, 22	white balance, 33		
LCD, 21	setting up the camera, 1		
protecting, 22	setup menu, 34		
slide show, 26	Share button, 35		
running slide show, 26	sharing pictures, 16		
	sharpness, 34		
S	shutter		
safety, 50	problems, 43		
scene modes (SCN), 12	self-timer delay, 14		
SD/SDHC Card	slide show		
inserting, 5	continuous loop, 26		
printing from, 39	running, 26		
search pictures, 24	smart capture, 11		
select multiple pictures/videos, 30	smart display, 35		
self-portrait, 13	smart find, 24		
self-timer, 14	smart share, 16		
set tag, 32	snow, 13		
setting	social networks, 16		
AF zone, 33	software		
auto-focus, 34	upgrading, 50		
camera sounds, 35	sounds, 35		
color mode, 33	specifications, camera, 47		
date and time, 4	strap, 1		
image storage, 36	_		
ISO, 32	Т		
language, 36	tagging		
LCD brightness, 35	keywords, 19		
long time exposure, 32, 35	people, faces, 18		
orientation sensor, 35	taking pictures, videos, 6		

television, slide show, 27 text, 12 time, setting, 4 timer, shutter delay, 14 tips battery guidelines, 51 care & maintenance, 49 transfer, via USB cable, 37 trash can, deleting, 7 trimming a video, 29 troubleshooting, 41 turning camera on and off, 4 typing, 20	viewing by multi-up, 23 picture, after taking, 7, 21 W warranty, 52 white balance, 33 Z zoom digital, 9 optical, 9
undelete, undo, 22 upgrading software, firmware, 50 URLs, Kodak Web sites, 41 USB transferring pictures, 37	
V VCCI compliance, 55 video copying, 30 edit, 29 emailing marked, 20 out, 36 playback, 21 protecting, 22 review icons, 25 transfer to computer, 37 viewing, 21 video out, 36	