## **OLYMPUS**<sup>®</sup>

http://www.olympus.com/

#### OLYMPUS EUROPA HOLDING GMBH

Consumer Product Division
Vendenstrasse 14 – 18, 20097 Hamburg, Germany
el.: +49 40 - 23 77 3-0 / Fax: +49 40 - 23 07 61
Bredowstrasse 20, 22113 Hamburg, Germany
Postfach 10 49 08, 20034 Hamburg, Germany

#### European Technical Customer Support: Please visit our homepage http://www.olympus-europa.com or call our TOLL FREE NUMBER\*: 00800 - 67 10 83 00

for Austria, Belgium, Denmark, Finland, France, Germany, Luxemburg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland, United Kingdom.

\* Please note some (mobile) phone services / provider do not permit access or request an additional prefix to +800 numbers.

For all not listed European Countries and in case that you can't get connected to the above mentioned number please make use of the following CHARGED NUMBERS: +49 180 5 - 67 10 83 or +49 40 - 237 73 48 99. Our Technical Customer Support is available from 9 am to 6 pm MET (Monday to Friday).

#### **Authorized Distributors**

#### United Kingdom: Olympus Service Department South Africa: Tudor Photographic /Eire Olympus Imaging & Audio 4th floor, Park on Long KevMed House 66 Long Street

Stock Road Southend-on-Sea Essex SS2 5QH United Kingdom 4th floor, Park on Long 66 Long Street Cape Town 8001 South Africa Tel: +27 (0) 21 423 4150 Fax: +27 (0) 21 424 4632

Sales - 0800 111 4777 Service - 0800 111 4888 Facsimile - +44 (0)1702 445134 email - consumer@olympus.co.uk www.olympus.co.uk Ņ

Ĭ

INSTRUCTION MANUAL

## **DIGITAL CAMERA**




# INSTRUCTION MANUAL

#### Basic guide

P.2

Review the camera part names, the basic steps for shooting and playback, and the basic operations.

#### Table of Contents P. 26

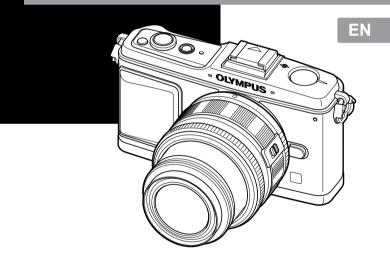

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product.
- The contents in this manual are based on firmware version 1.0 for this camera. If there
  are addition and/or modification of functions due to firmware update for the camera,
  the contents will differ. For the latest information, please visit the Olympus website.


Register your product on www.olympus-consumer.com/register and get additional benefits from Olympus!

# OLYMPUS


## Unpack the box contents

The following items are included with the camera.

If anything is missing or damaged, contact the dealer from whom you purchased the camera.

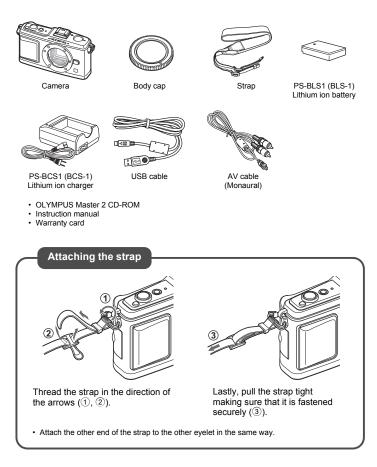


# **Preparing the Camera**

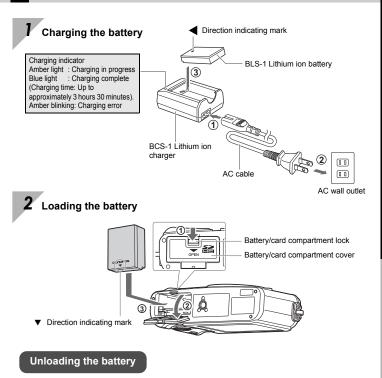

Turn off the camera before opening or closing the battery/card compartment cover.

To remove the battery, first push the battery lock knob in the direction of the arrow and then remove.

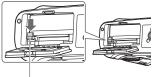

Battery lock knob


It is recommended to set aside a backup battery for prolonged shooting in case the battery in use drains.



## **3** Loading the card

· Insert the SD/SDHC card (referred to as "card" in these instructions) until it locks in place. Card basics" (P. 127)


· Turn off the camera before loading or removing the card.

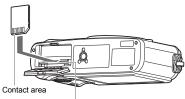

SD card slot

#### Removing the card

- · Press the inserted card lightly and it will be eiected.
- · Pull out the card.
- · Never open the battery/card compartment cover while the card access lamp is blinking.

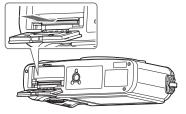

## 4 Closing the battery/card compartment cover

When using the camera, be sure to close the battery/card compartment cover.

· Close the cover until you hear a click.




# Preparations for shooting

# Attaching a lens to the camera

Remove the body cap from the camera and the

rear cap from the lens

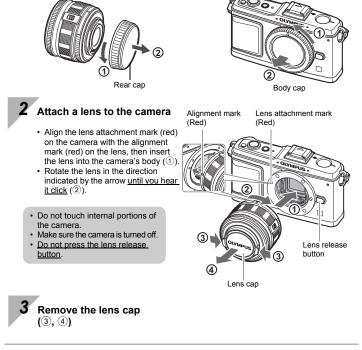

#### Removing the lens from the camera

While pressing the lens release button  $(\widehat{0})$ , rotate the lens in the direction of the arrow  $(\widehat{2})$ .

Interchangeable lenses" (P. 129)




Lens release button

## Power on

Press the ON/OFF button to turn on the camera

• To turn off the power, press the ON/OFF button again.

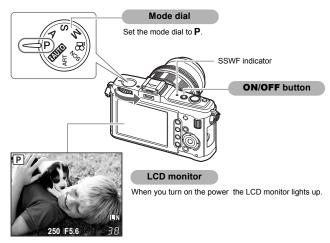

#### **Dust reduction function operation**


The dust reduction function is automatically activated when the camera is turned on. Ultrasonic vibrations are used to remove dust and dirt from the image pickup device's filter surface. The SSWF (Super Sonic Wave Filter) indicator blinks while dust reduction is working.

#### Using separately sold retractable lens

Certain types of lens are retractable and contained within the barrel when stored. You cannot take a picture with the lens retracted.

Turn the zoom ring in the direction of arrow ((1)) to extend the lens ((2)).


To store, turn the zoom ring in the direction of arrow (4) while sliding the **UNLOCK** switch (3).

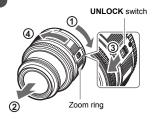


BINGLEDOR

# Setting the date/time

Date and time information is recorded on the card together with the images. The file name is also included with the date and time information. Be sure to set the correct date and time before using the camera.

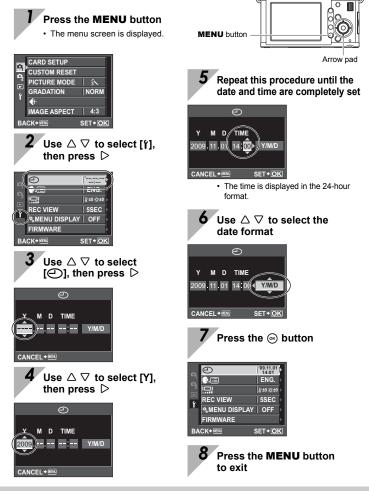


# Camera

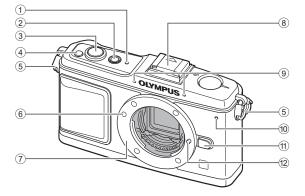

① SSWF indicator 📭 P. 6, 125	8 ⊢
2 ON/OFF button 🕰 P. 6	9 N
3 Shutter button 🕼 P. 12	10 S
④ 🔀 (Exposure compensation) button	11 L
📭 P. 43	12 L
5 Strap eyelet 📭 P. 2	
6 Lens attachment mark 📭 P. 5	
⑦ Mount	
(Remove the body cap before attaching the lens.)	

3)	Hot shoe	🕼 P. 61
)	Microphone	IS P. 74, 86
)	Self-timer lamp	🕼 P. 57
D	Lens release button	📭 P. 5
2)	Lens lock pin	

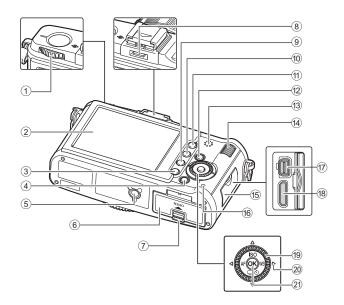

- ① Mode dial ..... 📭 P. 10
- ② LCD monitor ...... ISP P. 22, 24
- 3 MENU button ..... 📭 P. 20
- ④ INFO (Information display) button
- 5 Tripod socket
- Battery/card compartment cover ..... 
  P. 3
- Battery/card compartment lock ...... I P. 3
- 9 1 (Erase) button ..... ISP P. 88
- 10 [Playback) button ..... 📭 P. 14, 77
- 1 AEL/AFL button ...... ISP. 44, 96 On (Protect) button ...... ISP. 87
- (Protect) button ...... IS P. 87
   (2) Fn button ...... IS P. 97
- ③ Speaker

- 15 Connector cover
- 16 Card access lamp ..... 12, 119
- 17 Multi-connector ..... 🐼 P. 83, 112, 117
- 18 HDMI mini-connector ..... 18 P. 84
- 19 Main dial (**(**) ..... **I**SP. 15, 25
- 2 Arrow pad ( ) ..... IS P. 15, 20, 25 Press the main dial in the following places.
  - Up: △ Down: ▽ Left: ⊲
  - Right: D
- 2) 🐵 button ...... 📭 P. 20

# Mode dial

The mode dial allows you to change the camera settings easily according to the subject.



#### Advanced shooting modes

- For more advanced shooting and greater creative control, you can set the aperture value and shutter speed.
- The settings made in the advanced shooting modes are retained even if the camera is turned off.

Р	P Program shooting Allows you to shoot using an aperture and shutter that the camera sets. ( <b>I</b> SP P. 37)	
Α	Aperture priority shooting	Allows you to set the aperture manually. The camera sets the shutter speed automatically. (ITP 138)
S	Shutter priority shooting	Allows you to set the shutter speed manually. The camera sets the aperture automatically. (ISP P. 39)
м	Manual shooting	Allows you to set the aperture and shutter speed manually. (

#### Easy shooting modes

- Select according to the shooting scene. The camera sets the appropriate shooting conditions automatically.
- When rotating the mode dial or turning off the power in the easy shooting modes, functions with changes made to their settings are restored to the factory default settings.

(TAUTO)	iAuto	The camera automatically selects an optimal shooting mode from [PORTRAIT], [LANDSCAPE], [NIGHT SCENE], [SPORT], and [MACRO]. This is a fully automatic mode which allows you to shoot with the optimal settings for the scene by simply pressing the shutter button.	
ART	Art filter	When you select a desired filter or scene, the camera optimizes the shooting conditions for that filter or scene In <b>SCN</b> mode, most of the functions cannot be changed	
SCN	Scene		
æ	Movie	Used for shooting movies. Besides using <b>[P]</b> , <b>[A]</b> and <b>[M]</b> , you can record a movie with the art filter.	

#### Setting the art filter/scene

1 Set the mode dial to ART or SCN.

· The art filter menu or scene menu is displayed.



- 2 Use  $\Delta \nabla$  to select the filter or scene.
- 3 Press the 🐵 button.




Types of art filters					
lcon	Art filter	lcon	Art filter		
ART 1	POP ART	APT5	GRAINY FILM		
AR <sup>T</sup> 2	SOFT FOCUS	APT_6	PIN HOLE		
ART3	PALE&LIGHT COLOR	APT-	DIORAMA		
NRT.	LIGHT TONE	INRI	CROSS PROCESS		

#### - Types of scene modes

lcon	Mode	lcon	Mode
	PORTRAIT	()	DIS MODE
(a.	e-PORTRAIT		MACRO
	LANDSCAPE	×	NATURE MACRO
<b>^</b>	LANDSCAPE+PORTRAIT	Ψ	CANDLE
*	SPORT	(E	SUNSET
<b>.</b>	NIGHT SCENE	臣	DOCUMENTS
<u>ع</u> د	NIGHT+PORTRAIT	Σ	PANORAMA (13 P. 60)
<b>2</b> ~	CHILDREN		FIREWORKS
HI	HIGH KEY	<b>*</b>	BEACH & SNOW
LOW	LOW KEY		

- Art filters and [e-PORTRAIT] are not applied to RAW images.
- If the record mode is set to [RAW] and art filter is applied, the record mode is automatically set to [UN+RAW].
- The grainy appearance of the picture may be emphasized depending on the type of art filter.
- When either RAW or JPEG+RAW are set in [e-PORTRAIT], a RAW image and a JPEG (III (2560×1920)) with applied effect are saved.
- When JPEG is set in [e-PORTRAIT], two images are saved, one from before application of the effect (with set picture quality) and the other from after application of the effect (12560×1920)).

# Shooting

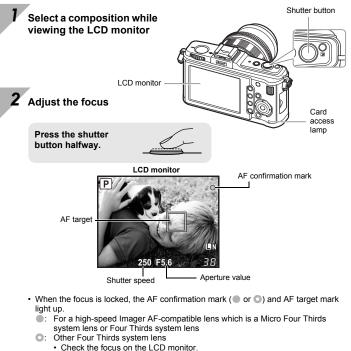

 The shutter speed and aperture value that have been set automatically by the camera are displayed.


Release the shutter

Press the shutter button all the way (fully).



- The shutter sounds and the picture is taken.
- · The card access lamp blinks and the camera starts recording the picture.

Never remove the battery or card while the card access lamp is blinking. Doing so could destroy stored pictures and prevent storage of pictures you have just taken.

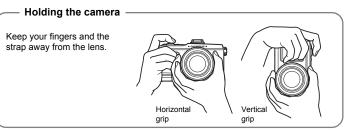

#### When the camera stops operating

If no operations are performed for approximately one minute, the camera enters the sleep mode (stand-by) and stops operating. The camera activates again when you touch any button (the shutter button, **>** button, etc.). **\*** SLEEP" (P. 100)

#### TIPS

#### To adjust the focus by using manual focus:

→ In [S-AF+MF] mode or [MF] mode, turn the focus ring to enlarge the subject and achieve focus. IS<sup>®</sup> "MF ASSIST" (P. 94)


Resetting the camera settings

In **P**, **A**, **S**, and **M** mode, current camera settings (including any changes you have made) are retained when the power is turned off. To reset the camera to the factory default settings, set [**RESET**]. **I**S "Resetting the camera settings" (P. 92)

# Playback/Erasing

Playing back images Pressing the **b** button displays the last picture taken.

 Pressing the button again sets the camera to the shooting mode.

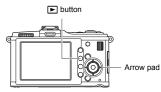


bisplays the previous frame Displays the previous frame Displays the Displays the previous frame that is stored 10 frames ahead

Displays the frame that is

Close-up playback Each time you turn the sub dial towards Q, the image is incrementally enlarged from 2× to 14×.



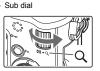

Erasing images

Playback the image you want to erase and press the m button. Use  $\triangle \nabla$  to select **[YES]** and press the m button to erase.





# **Direct buttons**


There are three ways to operate this camera. Using the direct buttons to operate the camera ISP.15 Setting while looking at the Live control or Super control panel ISP.16, 18 Setting on the menu ISP.20


#### Press the button for the function you want to set

- · The direct menu is displayed.
- The function assigned to the button that was pressed remains selected. You can turn the sub dial and set the function during that time. If no operations are performed during that time, the setting for that function is confirmed.
   INTON TIMER" (P. 98)
- e.g.) Sequential shooting/ self-timer shooting



Direct menu

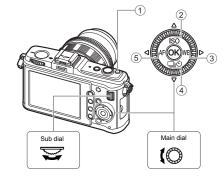

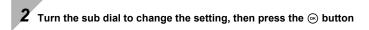


#### List of direct buttons

No.	Direct button	Function	Ref. page
1	Z	Exposure compensation	P. 43
2	ISO	Sets ISO sensitivity	P. 46
3	WB	Sets white balance	P. 68
4		Sequential/Self-timer shooting	P. 56-57
5	AF	Sets AF mode	P. 49

# Live control

The following screen which simultaneously displays shooting setting functions and associated options is called the live control. Press the O button to display the live control on the LCD monitor. You can set the art filter, the white balance and other effects while checking live view. When the super control panel is displayed, press the **INFO** button to switch the display.

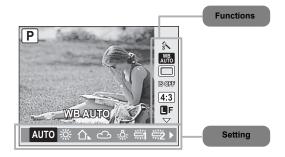


Functions	Setting	Ref. page
Scene mode*1	(C) (C) (A) (A) (C) (C) (C) (C) (C) (C) (C) (C) (C) (C	P. 11
Art filter mode*1		P. 11
Movie AE mode*2	[P] [A] [M] [M] [M] [M] [M] [M] [M] [M] [M]	P. 75
Picture mode	(R) (R) (R) (R) 🔟 🖸	P. 72
White balance	[AUTO] [凚] [仚] [小] [仚] [崇] [兴] [兴] [兴] [兴] [兴] [WB	P. 68
Sequential shooting/ self-timer	[ <b>□</b> ] [ <b>□</b> ] [᠔128] [᠔28]	P. 56-57
Image stabilizer	[OFF] [I.S. 1] [I.S. 2] [I.S. 3] [FOCAL LENGTH]	P. 57
Aspect ratio	[4:3] [16:9] [3:2] [6:6]	P. 59
Record mode	[RAW] [🛛 F] [📣] [🖾 N] [🕲 N] [🗳 F+RAW] [🔃 N+RAW] etc.	P. 65
ISO sensitivity	[AUTO] [100] [125] [160] [200] [250] [320] etc.	P. 46
Flash mode	[AUTO] [③] [\$] [③] [④\$] [\$SLOW] [\$SLOW2] etc.	P. 62
Metering mode	[🞯] [O] [OHI] [OSH]	P. 42
AF mode	[S-AF] [C-AF] [MF] [S-AF+MF] [C-AF+TR]	P. 49
Face detection	[ON] [OFF]	P. 55
AF target selection	[::::] [ · ]	P. 52
Movie sound record*2	[ŲON] [ŲOFF]	P. 76


\*1 ART or SCN mode only

\*2 Pmode only

There may be unavailable menus depending on the selected shooting mode.

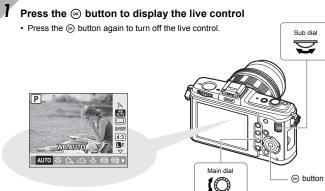


2 Move the cursor to the function you wish to set using the main dial and select settings using the sub dial, then press the button

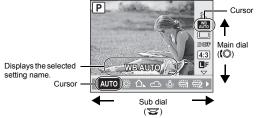

- If no operations are performed during that time, the setting for that function is confirmed.
- · You can use the arrow pad instead of the dials.

# Super control panel

The following screen allows the display and setting of shooting settings at the same time and is called the super control panel. On the live control display, press the **INFO** button to switch to the super control panel.

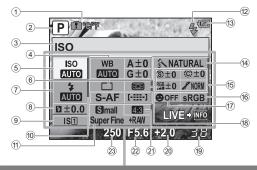


The functions within this area can be set on the super control panel.

① Internal temperature warning <b>①</b> *C/*F
② Shooting mode* ISP P. 10, 37-40
③ Function name
④ White balance
5 ISO sensitivity ISP P. 46
6 Sequential shooting/self-timer ISP P. 56-57
⑦ Flash mode 🕼 P. 62
8 Flash intensity control ISP P. 63
9 Image stabilizer ISP P. 57
10 AF mode 13 P. 49
AF target 128 P. 52
1 Record mode ISP P. 65
12 Flash charging ISP P. 121
13 Battery check ISP P. 22
Sottings can be made in the ABT and SCN m

14	Picture mode Picture P. 72
15	Sharpness (S ISP P. 72
	Contrast (C) ISP P. 72
	Saturation RGB RSP P. 72
	Gradation 8 BP 73
	B&W Filter (P 197 P. 72
	Picture tone ① Picture tone ①
16	Color space ISP P. 105
17	Face detection 📭 P. 55, 101
18	Metering mode ISP P. 42
(19)	Number of storable still pictures ISP P. 139
(20)	Exposure compensation value I P. 43
0	Exposure level
21	Aspect ratio P. 59
22	Aperture value 📭 P. 37-40
23	Shutter speed IN P. 37-40

\* Settings can be made in the ART and SCN modes.

· Movie recording mode is not displayed.

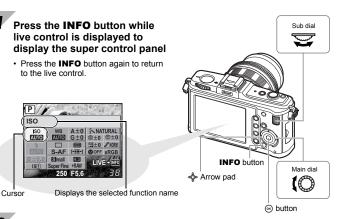

Use 🚸 to move the cursor to the function you wish to set, and change the settings using the main dial or sub dial





#### Direct menu



2

Press the o button to display the direct menu indicated at the position of the cursor. You can also use the direct menu to change the setting. After changing the setting, press the obutton to confirm your setting. If no operation is performed within a few seconds, your setting is confirmed and the camera returns to the shooting mode.

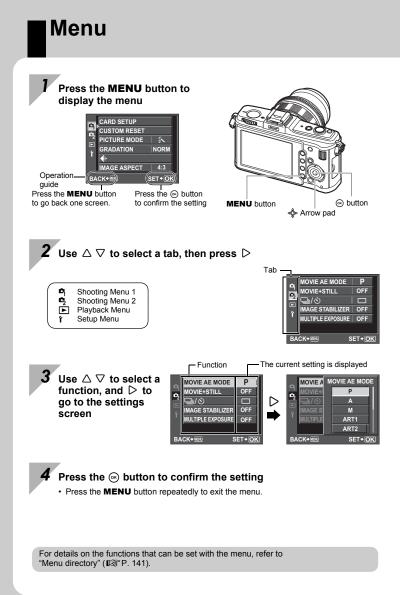


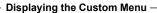

You can use the Custom Menu to customize the camera settings and operations to suit your personal preferences. Customization is performed from the "Custom Menu" menu. The Custom Menu is added when [\* MENU DISPLAY] in the Setup Menu is set to [ON].

For details of the Custom Menu, refer to "Customizing your camera" (IPP P. 93)



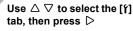

	Ð	'09.11.01 14:01
	<u>}</u>	ENG.
~2		&±0 ☆±0 ⊳
H.	REC VIEW	5SEC
Ŀ.	SMENU DISPL	AY OFF
	FIRMWARE	
BA	CK+ 📖	SET+OK



Use riangle 
abla to select [ON], then press the  $\ensuremath{\textcircled{\sc onlymbol {\sc onlymbol {\sc$ 

(ок)





The [♣] tab is displayed. ♣ Custom Menu: Customizes shooting functions.

The settings on the Custom Menu are for customizing the camera to suit your personal preferences or needs. They are not suited to frequent changing. The initial menu is more than adequate for setting both simple and advanced shooting functions. Normally, there is no need to display the Custom Menu.

# LCD monitor (Shooting)

You can use the LCD monitor to view the subject while shooting.




	ernal temperature warnin	
	•••	
	/ Mode	
③ Sh	nooting mode	. 🕼 P. 10, 37-40
④ Fla	ash mode	🕼 P. 62
5 IS	O sensitivity	🕼 P. 46
6 Me	etering mode	🕼 P. 42
⑦ AF	mode	🕼 P. 49
8 Fa	ce detection 🕒	🕼 P. 55, 101
	ash intensity control Iper FP flash FP	
Au	E Lock AEL Ito bracket BKT K ultiple exposure E	PP. 45, 47, 64, 71 🕼 P. 47
11 Sh	utter speed	🕼 P. 37-40
12 Ap	erture value	🕼 P. 37-40
	ash (blinks: charging in p hts up: charging complet	ed)

(1) Internal temperature warning

14)	Battery check
	Lit up (green) (ready for use)
	Blinks (red) (charging required)
15	AF confirmation mark ISP P. 12
16	Picture mode Picture P. 72 Art filter/scene Picture P. 11
17	White balance ISP P. 68
18	Sequential shooting ISP P. 56 Self-timer ISP P. 57
19	Image stabilizer IS11S21S3 ISP P. 57
20	Aspect ratio ISP P. 59
21)	Record mode 📭 P. 65
22	Number of storable still pictures I P. 139 Available recording time
23	Exposure compensation value IN P. 43
24)	Histogram Dig P. 23

#### Switching the information display

You can switch the information displayed on the monitor by pressing the **INFO** button repeatedly or by turning the main dial while pressing the **INFO** button.

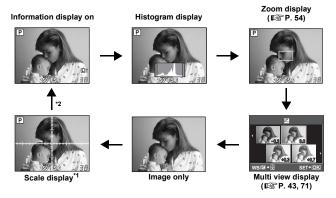

#### 🖻 TIPS

#### To quickly switch to the frequently used display:

 $\rightarrow$  You can hide the information display for all modes except "Information display on". Its "INFO SETTING" (P. 101)

#### Understanding the histogram (brightness distribution) display:

 $\rightarrow$  The following shows you how to read the histogram display easily.

If the graph has many peaks around here, the image will appear mostly black.




If the graph has many peaks around here, the image will appear mostly white.

The part indicated in green in the histogram shows the luminance distribution within the spot metering area.

# LCD monitor (Playback)

You can switch the monitor display using the **INFO** button.

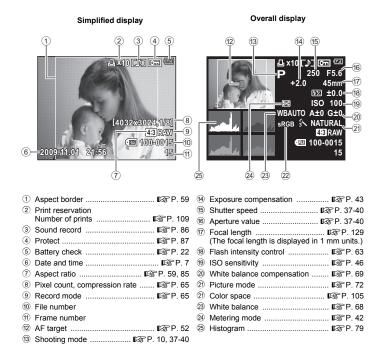

#### Indications used in this manual

- The operation button icons on the body of the camera are used to indicate the operation buttons in this manual. "Names of parts and functions" (I P. 8) See.
- In this manual, **(**) indicates turning the main dial.
- In this manual, 😴 indicates turning the sub dial.
- The following symbols are used throughout this manual.

Notes	Important information on factors which may lead to a malfunction or operational problems. Also warns of operations that should be absolutely avoided.
E TIPS	Useful information and hints that will help you get the most out of your camera.
R <sup>a</sup>	Reference pages describing details or related information.

#### Descriptions in this manual

The operating instructions of the direct buttons, live control, super control panel and menu are described as follows in this manual.

- "+" indicates operations performed at the same time.
- " " indicates you should proceed to the next step.
- e.g.: When setting the White balance

Direct button	WB
	$\rightarrow$ Press the <b>WB</b> button.
Live control	⊛ <b>▶ (</b> ©: [WB]
	$\rightarrow$ Press the $\odot$ button, and turn the main dial to select <b>[WB]</b> .
Super control panel	⊛ ▶ INFO ▶ ००००० [WB]
	→ Press the  ext{ button and then the INFO button, and select [WB] using the arrow pad.
Menu	MENU ▶ [♣] ▶ [] ▶ [WB]
	→ Press the <b>MENU</b> button, and select [♣] and then [ு] to select [WB].

## **Basic guide**

Identifies the camera part names and describes the basic steps for shooting and playback.

Preparations for shooting	2
Unpack the box contents	2
Preparing the Camera	
Attaching a lens to the camera	
Power on	
Setting the date/time	7
Names of parts and functions	
Camera	
Basic operations	
Mode dial	
Shooting	
Playback/Erasing	
Direct buttons	
Live control	
Super control panel	
Menu	
LCD monitor (Shooting)	22
LCD monitor (Playback)	24

### 1 Exposure

Describes functions related to exposure, which is important for shooting. These functions are for determining the aperture value, shutter speed, and other settings by measuring the brightness in the picture.

Program shooting	37
Aperture priority shooting	38
Shutter priority shooting	
Manual shooting	
Bulb shooting	41
Preview function	
Changing the metering mode	42
Exposure compensation	
Taking a picture while comparing the effect of exposure compensation	43
AE lock	44
AE bracketing	45
ISO sensitivity setting	
ISO bracketing	47
Multiple exposure	

#### 37

#### 2

## 2 Focusing and shooting functions

Describes the optimal focusing methods according to the subject and shooting conditions.

AF mode selection	49
S-AF (single AF)	49
C-AF (continuous AF)	
MF (manual focus)	
Simultaneous use of S-AF mode and MF mode (S-AF+MF)	51
C-AF+TR (AF TRACKING)	51
AF target selection	
Registering an AF target mode	53
Enlarged display operation	
Using the face detection function	55
Sequential shooting	
Self-timer shooting	
Image stabilizer	57
Setting the image aspect	59
Panorama shooting	60
Flash shooting	61
Flash mode setting	62
Flash intensity control	63
Flash bracketing	64

#### **3** Record mode, white balance, and picture mode

65

Describes image adjustment functions specific to digital cameras.

Selecting the record mode	65
Recording formats	65
Selecting the record mode	66
Selecting the white balance	
Setting the auto/preset/custom white balance	69
WB compensation	69
Setting the one-touch white balance	70
Taking a picture while comparing the effect of white balance	71
WB bracketing	71
Picture mode	
Gradation	73

Describes movie recording method and functions.

Movie recording	74
Changing the settings for movie recording	75
Adding effects to a movie	75
Selecting the record mode	76
Recording Audio when Recording Movie	76
Taking still picture automatically when movie recording ends	76

## 5 Playback functions

Describes the functions for image playback.

Single-frame/Close-up playback	77
Index display/Calendar display	
Information display	
Slideshow	
Rotating images	
Movie playback	
Playback on TV	
Editing still images	
Image overlay	
Protecting images	
Erasing images	

## 6 Setup functions

Describes the basic settings for using the camera.

Setup Menu	90
. (Date/time setting)	
€ 🗐 (Changing the display language)	90
III (Monitor brightness adjustment)	90
REC VIEW	91
Sector Se	91
FIRMWARE	91
Resetting the camera settings	92

## 77

90

## 7 Customizing your camera

Describes how to customize the camera's settings.

AF/MF	
AF MODE	
AF AREA	
[•••] SET UP	
RESET LENS	
BULB FOCUSING	
FOCUS RING	
MF ASSIST	
BUTTON/DIAL	
DIAL FUNCTION	
DIAL DIRECTION	
AEL/AFL	
AEL/AFL MEMO	
Fn FUNCTION	
MY MODE SETUP	
BUTTON TIMER	
鷽≠回	
E FUNCTION	
RELEASE	
RLS PRIORITY S/RLS PRIORITY C	
DISP/■))/PC	
HDMI	
VIDEO OUT	
■)])	
SLEEP	
USB MODE	
LIVE VIEW BOOST	
FACE DETECT	
INFO SETTING	
VOLUME	
LEVEL GAUGE	101
MOVIE	
EVF ADJUST	

🛍 EXP/📖/ISO	
EV STEP	
METERING	
AELMetering	
ISO	
ISO STEP	
ISO-AUTO SET	
ISO-AUTO	
BULB TIMER	
ANTI-SHOCK [ • ]	
BRACKETING	
CUSTOM	
FLASH MODE	
鉉	
<b>↓</b> X-SYNC	
SLOW LIMIT	
₩+	
tiene de la constant	
NOISE REDUCT.	
NOISE FILTER	
WB	
ALL WB2/	
COLOR SPACE	105
SHADING COMP	
<b>€</b> - SET	
PIXEL COUNT	
RECORD/ERASE	
QUICK ERASE	
RAW+JPEG ERASE	
FILE NAME	
EDIT FILENAME	
PRIORITY SET	
dpi SETTING	
PIXEL MAPPING	
EXPOSURE SHIFT	
WARNING LEVEL	
LEVEL ADJUST	

## 8 Printing

Describes how to print your pictures.

Print reservation (DPOF)	
Print reservation	
Single-frame reservation	110
All-frame reservation	111
Resetting the print reservation data	111
Direct printing (PictBridge)	112
Connecting the camera to a printer	
Easy printing	113
Making prints using different print options	113

## 9 Using the OLYMPUS Master software

#### 116

12

Describes how to transfer and store your camera images to a computer.

Flowchart	116
Using the provided OLYMPUS Master software	116
What is OLYMPUS Master?	116
Connecting the camera to a computer	
Start up the OLYMPUS Master software	118
Displaying camera images on a computer	118
Downloading and saving images	
Disconnecting the camera from your computer	119
Viewing still images	
Transferring images to your computer without using OLYMPUS Master	

## 10 Shooting tips and maintenance

Refer to this section for troubleshooting and camera maintenance information.

Shooting tips and information	121
Error codes	123
Camera maintenance	125
Cleaning and storing the camera	125
Pixel mapping — Checking the image processing functions	126

## 11 Information

Refer to this section for information on optional accessories, camera specifications, and other useful shooting information.

Card basics	127
Usable cards	127
Formatting the card	127
Battery and charger	128
Using your charger abroad	128
Interchangeable lenses	
M.ZUIKO DIGITAL interchangeable lenses	129
System Chart	
M.ZUIKO DIGITAL lens specifications	132
Using the electronic viewfinder (sold separately)	
Program line diagram (P mode)	
Flash synchronization and shutter speed	
Exposure warning display	
Flash modes that can be set by shooting mode	
White balance color temperature	
Record mode and file size/number of storable still pictures	139
Functions that can be registered with My Mode and Custom Reset Setting	
Menu directory	
Specifications	
SAFETY PRECAUTIONS	
Index	

## **Quick reference**

Shooting		
Taking pictures with automatic settings	Set the mode dial to <b>FAUTO</b> and start taking pictures.	P. 10
Correct focus cannot be obtained	Use focus lock.	P. 50
	Select the AF target and take the picture.	P. 52
	The minimum shooting distance varies depending on the lens. Move to the minimum shooting distance of the lens from the subject and take a picture.	P. 129
	The camera may be having difficulty focusing on the subject with auto focus. Lock the focus at the position of the subject in advance or use MF to fix the distance of the focus.	P. 50, P. 122
Focusing on one area	Select the AF target and take the picture using the desired AF target.	P. 52
	Check focus and adjust the image using MF in an enlarged image.	P. 54
	Use MF. It may be helpful to focus while using live view with an enlarged image.	P. 50, P. 54
Checking set effect before taking a picture	You can take a picture while using the live multi view display to compare the effect of white balance or exposure compensation.	P. 43
	You can use the preview function to check the depth of field at a selected aperture value.	P. 41
	You can use <b>[TEST PICTURE]</b> to check the image on the LCD monitor without recording the image to a card.	P. 97
Extending the useful life of the battery	Pressing the shutter button halfway and playing back images over a long period of time consumes considerable battery power. Limiting these actions will help extend the useful life of the battery.	_
	Set <b>[SLEEP]</b> so that the camera enters sleep mode faster.	P. 100
Increasing the number of pictures that can be taken	Reduce the pixel count and compression rate settings.	P. 65, P. 106
Taking pictures in low light situations without using the flash	Increase the ISO sensitivity.	P. 46

Taking pictures without white subjects appearing too white or black subjects appearing too dark	Take a picture while checking the histogram.	P. 23
	Take a picture while checking the shutter speed and aperture value displays. If either is blinking, the optimal exposure is not obtained.	P. 37-39, P. 136
	Set the gradation setting to <b>[AUTO]</b> . Subjects with areas of large contrast are adjusted automatically.	P. 73
	Adjust the exposure compensation.	P. 43
	Set [PICTURE MODE] to [MONOTONE]. You can take monotone pictures in black and white, sepia tones, purplish tones, bluish tones, and greenish tones.	P. 72
Taking monotone pictures	Recorded images can be edited into black-and-white or sepia-toned images.	P. 85
	Set the art filter to [GRAINY FILM].	P. 11
	Set the gradation setting to [AUTO].	P. 73
Taking pictures of a subject against backlight	Use spot metering to measure the exposure of the subject in the center of the picture. If the subject is not in the center of the picture, use AE lock to lock the exposure, and then change the composition and take the picture.	P. 42, P. 44
Brightening a dark backlit image	You can adjust the image using [SHADOW ADJ] of [JPEG EDIT].	P. 85
Taking pictures with a blurred background	Use <b>A</b> (aperture priority) mode to decrease the aperture value as much as possible. You can blur the background more by shooting up close to the subject.	P. 38
Taking pictures that stop the subject in motion or convey a sense of motion	Use the $\boldsymbol{S}$ (shutter priority) mode to take the picture.	P. 39
	Set the white balance according to the light source. You can also make fine changes to the settings.	P. 68
Taking pictures with the correct color	With WB bracket shooting, you can capture 3 to 9 images with different white balance settings for each picture taken. This enables you to take pictures with the desired white balance without having to make fine changes to the settings.	P. 71
Taking pictures so that	Set the spot metering for highlight or shadow control. If the subject is not in the center of the picture, use AE lock to lock the exposure, and then change the composition	P. 42, P. 44
Taking pictures so that	and take the picture.	
Taking pictures so that whites come out white and blacks come out black		P. 43, P. 45
whites come out white and	and take the picture. Adjust the exposure compensation. It may be helpful to use AE bracketing if you are not sure about the	

Taking pictures without noise	Set [NOISE REDUCT.] to [AUTO] or [ON].	P. 104
	To take pictures in a dark location, set <b>[NOISE FILTER]</b> to <b>[HIGH]</b> .	P. 105
	You can adjust the brightness of the LCD monitor.	P. 90
Optimizing the LCD monitor	During live view, set [LIVE VIEW BOOST] to [ON] to make the subject easier to see without the exposure reflecting on the LCD monitor.	P. 101
	Set this to turn off the LCD monitor when using the optical viewfinder (sold separately: VF-1).	P. 97
Reducing camera shake	Set the image stabilizer function.	P. 57
	Hold the camera firmly when pressing the shutter button. When using a slow shutter speed, be sure to stabilize the camera by using a tripod or similar method.	P. 13
	Use the external flashes.	P. 61
	Set the scene mode to [DIS MODE].	P. 11
	Increase the ISO sensitivity. When using the [AUTO] setting, set the upper limit of [AUTO] to a higher value.	P. 46, P. 103
	Using the self-timer can reduce camera shake that occurs when the shutter button is pressed.	P. 57
Taking pictures while checking the level of the camera	You can display the level gauge to check whether the camera is level.	P. 101
	Display the ruled lines in live view. Compose the shot so that the subject and ruled lines are horizontally and vertically aligned.	P. 23

Playback		
Displaying the image after the picture is taken	Set <b>[REC VIEW]</b> . You can set the number of seconds that the image is displayed.	P. 91
Displaying the image after the picture is taken and deleting unneeded images	Set <b>[REC VIEW]</b> to <b>[AUTO ]</b> . After you take a picture, the camera switches to playback mode automatically, allowing you to delete the image.	P. 91
Checking whether the subject is in focus	Use close-up playback to check whether the subject is in focus.	P. 77
Quickly searching for the	Use index display to search from a index of between 4 and 100 frames.	P. 78
desired image	Use calendar display to search by the date the picture was taken.	P. 78
Viewing images on a TV	Use the AV cable or HDMI mini-cable (commercially available) to play back recorded images on your TV. You can also view the images as a slideshow.	P. 83
Settings		
Saving the settings	You can register two camera settings in <b>[CUSTOM</b> <b>RESET]</b> . Even if the settings are changed, they can be returned to their registered settings by resetting the settings.	P. 92
	You can register up to two current camera settings in <b>[MY MODE SETUP]</b> . Assign My Mode to the $\mathbf{Fn}$ button so that you can easily use that function during shooting.	P. 98
Changing the menu display language	You can change the display language.	P. 90
Not all the functions are reset to the factory default settings by [RESET]	The following functions are not returned to the factory default settings by <b>[RESET]</b> . Use the menu to change the respective settings. You can check the default settings in the "Menu directory" (ISP P. 141). RESET1, RESET2 (Custom reset)/PICTURE MODE/ ○) ( ) () () () () () () () () () () () (	P. 92, P. 140


**Exposure** 


# Program shooting

The camera sets the optimum aperture value and shutter speed automatically according to the subject brightness.

#### Set the mode dial to P.

The shutter speed and aperture are displayed.

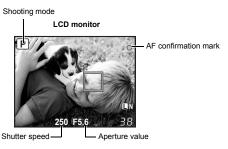

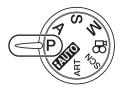

#### Program shift (Ps)

By turning the main dial (or sub dial) in the **P** mode, you can change the combination of aperture and shutter speed while maintaining the optimum exposure. I Program line diagram (**P** mode)" (P. 135)

- The program shift setting will not be cancelled after shooting. To cancel the settings, turn the main dial (or sub dial) until the shooting mode indication Ps of the LCD monitor changes to P. Alternatively, turn off the power.
- · Program shift is not available when you are using a flash.

Program shift



#### TIPS

#### The shutter speed and aperture value are blinking:

→ The optimum exposure cannot be obtained. For details, see "Exposure warning display" (IBP P. 136).

# Aperture priority shooting

The camera sets the optimum shutter speed automatically for the aperture value you have selected. When you open the aperture (decrease the aperture value), the camera will focus within a shorter range (shallow depth of field) and produce a picture with a blurred background. When you close the aperture (increase the aperture value), the camera will focus within a longer range. Use this mode when you wish to add changes to the background representation.

1


When the aperture value (f-number) is decreased





When the aperture value (f-number) is increased

#### Set the mode dial to **A** and turn the main dial (or sub dial) to set the aperture value.

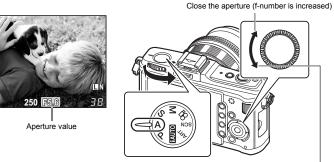

Open the aperture (f-number is decreased)

#### 🖹 TIPS

#### To check the depth of field with the selected aperture value:

- $\rightarrow$  See "Preview function" (IPP P. 41).
- To change the exposure adjustment interval:
- → This can be set in 1/3 EV, 1/2 EV or 1 EV increments. IS "EV STEP" (P. 102)

#### Shutter speed is blinking:

→ The optimum exposure cannot be obtained. For details, see "Exposure warning display" (LSP P. 136).

A

The camera sets the optimum aperture value automatically for the shutter speed you have selected. Set the shutter speed depending on the type of effect you want. A higher shutter speed allows you to capture a fast-moving subject without blur, and a slower shutter speed blurs a moving subject, creating a feeling of speed or motion. Set the shutter speed depending on the type of effect you want.

A fast shutter speed can freeze a fast action scene without any blur.






A slow shutter speed will blur a fast action scene. This blurring will give the impression of dynamic motion.

#### Set the mode dial to ${\bm S}$ and turn the main dial (or sub dial) to set the shutter speed.



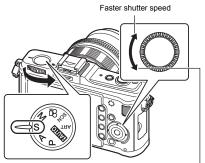

Slower shutter speed

#### TIPS

#### The picture looks blurred:

- → The possibility of camera shake spoiling your picture increases greatly during macro or ultratelephoto shooting. Raise the shutter speed or use a monopod or tripod to stabilize the camera.
- → When the shutter speed is slow, camera shake is more likely to occur. You can reduce camera shake by using the image stabilizer. IS "Image stabilizer" (P. 57)

#### To change the exposure adjustment interval:

 $\rightarrow$  This can be set in 1/3 EV, 1/2 EV or 1 EV increments. IS "EV STEP" (P. 102)

#### The aperture value is blinking:

→ The optimum exposure cannot be obtained. For details, see "Exposure warning display" (ISP P. 136).

# Manual shooting

Allows you to set the aperture and shutter speed manually. You can check how much it differs from the appropriate exposure by using the exposure level indicator. This mode gives you more creative control, allowing you to make whatever settings you like, regardless of the correct exposure.


#### Set the mode dial to M and turn the dial to set the value.

Aperture value: Turn the sub dial to set the value.

Shutter speed: Turn the main dial to set the value.





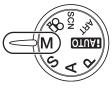

- The range of aperture values available varies with the lens type.
- The shutter speed can be set to 1/4000 60 sec. or [BULB].

#### Noise in images

While shooting at slow shutter speeds, noise may appear on-screen. These phenomena are caused when current is generated in those sections of the image pickup device that are not normally exposed to light, resulting in a rise in temperature in the image pickup device or image pickup device drive circuit. This can also occur when shooting with a high ISO setting in a high-temperature environment. To reduce this noise, the camera activates the noise reduction function.

NOISE REDUCT." (P. 104)

#### TIPS

#### The picture looks blurred:

- → The use of a monopod or tripod is recommended when taking a picture at slow shutter speed.
- → When the shutter speed is slow, camera shake is more likely to occur. You can reduce camera shake by using the image stabilizer. IS "Image stabilizer" (P. 57)

#### To change the exposure adjustment interval:

→ This can be set in 1/3 EV, 1/2 EV or 1 EV increments. IS "EV STEP" (P. 102)

#### To switch the operations of the main dial and sub dial:

 $\rightarrow$  You can switch the functions that are set with the main dial and sub dial.  $\mathbb{R}^{\infty}$  "DIAL FUNCTION" (P. 95)

# Notes

• Exposure compensation is not available in **M** mode.

#### **Bulb shooting**

You can take a picture with a bulb exposure time in which the shutter stays open as long as you hold down the shutter button.

#### In M mode, set the shutter speed to [BULB].

· [BULB] is displayed.

#### 🖹 TIPS

To automatically end bulb shooting after a specified period of time:

→ You can set the maximum time for bulb shooting. IS "BULB TIMER" (P. 103)

#### To fix the focus during manual focus shooting:

→ You can fix the focus so the focus does not change even if the focus ring is turned during exposure. II results FOCUSING" (P. 94)

#### Notes

 The following functions are not available during bulb shooting. Sequential shooing/self-timer shooting/AE bracket shooting/image stabilizer/flash bracketing


# **Preview function**

You can check the focused area (depth of field) with the selected aperture value on the LCD monitor.

For the preview function to work by pressing the **Fn** button, it is necessary to set the function of the **Fn** button on the menu beforehand. Is "Fn FUNCTION" (P. 97)

#### Press the Fn button to use the preview function.

Fn button

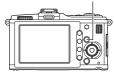

# Changing the metering mode

There are 5 ways to measure the subject brightness: Digital ESP metering, Center weighted averaging metering, and 3 types of spot metering. Select the most suitable mode for the shooting conditions.

Live control

Menu

→ (○: [METERING]

> MENU → [\*。] → [2] → [METERING]





#### Digital ESP metering

The camera measures the light levels and calculates the light level differences in 324 separate areas of the image. This mode is recommended for general use.

#### Center weighted averaging metering

This metering mode provides the average metering between the subject and the background lighting, placing more weight on the subject at the center. Use this mode when you do not want the light level of the background to affect the exposure value.

#### [-]Spot metering

The camera meters a very small area around the center of the subject, defined by the spot metering area mark on the LCD monitor. Use this mode when there is very strong backlight.

#### •HI Spot metering - highlight control


When the overall background is bright, white areas of the image will come out gray if you use the camera's automatic exposure. Using this mode enables the camera to shift to over-exposure, allowing accurate white reproduction.

Metering area is the same as spot metering.

#### SH Spot metering - shadow control

When the overall background is dark, black areas of the image will come out gray if you use the camera's automatic exposure. Using this mode enables the camera to shift to under-exposure, allowing accurate black reproduction. Metering area is the same as spot metering.



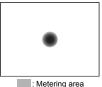

# Exposure compensation

In some situations, you may get better results if you manually compensate (adjust) the exposure value set automatically by the camera. In many cases, bright subjects (such as snow) will turn out darker than their natural colors. Adjusting toward + makes these subjects closer to their real shades. For the same reason, adjust toward - when shooting dark subjects. You can use value in the range ±3.0 EV to suit the other exposure compensation function.



Direct button

🖬 + 🜔 / 😇

#### 🖹 TIPS

#### To change the exposure adjustment interval:

 $\rightarrow$  This can be set in 1/3 EV, 1/2 EV or 1 EV increments. EV STEP" (P. 102)

#### To adjust the exposure using only the dial:

- → You can set the exposure compensation value without pressing 🔀 button. DIAL FUNCTION" (P. 95)
- 🛃 button Adjust toward -Adjust toward +

Notes

Notes

 Exposure compensation is not available in M and SCN modes

#### Taking a picture while comparing the effect of exposure compensation

You can take a picture while comparing the effect of exposure compensation on a 4-split screen

1 Press the INFO button repeatedly to display the multi view display.

Switching the information display" (P. 23)

- To switch to the exposure compensation comparison screen when the white balance comparison screen is displayed, press  $\triangle$ . Press  $\triangle \nabla$  to switch the screen.
- $\textbf{2} \quad \textbf{Use } \triangleleft \vartriangleright \text{ or the dial to select the setting value,} \\$ then press the is button.

 Exposure compensation is not available in M mode. This function cannot be used in HAULO, ART or SCN modes.

You can take the picture using the set value.



Exposure

# AE lock


AEL

The metered exposure value can be locked with the **AEL/AFL** button (AE lock). Use AE lock when you want a different exposure setting from the one that would normally apply under the current shooting conditions.

Normally, pressing the shutter button halfway locks both AF (auto focus) and AE (automatic exposure), but you can lock the exposure alone by pressing the **AEL/AFL** button.

Press the **AEL/AFL** button at the position where you wish to lock the metering values and the exposure will be locked. The exposure is locked while the **AEL/AFL** button is pressed. Now press the shutter button.

• Releasing the AEL/AFL button cancels AE lock.

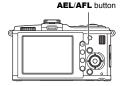



AE lock

*≣ TIPS* 

#### To lock the exposure:

→ You can lock the metering result so that it is not cancelled when the AEL/AFL button is released. ISP "AEL/AFL MEMO" (P. 96)

#### To activate AE lock with a set metering mode:

→ You can set the metering mode for locking the exposure with the AE lock.

Ker "AELMetering" (P. 102)

# AE bracketing

The camera automatically shoots a number of pictures at different exposure values for each frame. Even in conditions where correct exposure is difficult to obtain (such as a backlit subject or a scene at dusk), you can pick the picture you prefer from a selected number of frames with a variety of different exposure settings (exposure and compensation values). The pictures are taken in the following order: Picture with optimum exposure, picture adjusted in – direction, and picture adjusted in + direction.

e.g.) When BKT is set to [3F 1.0EV]



#### Compensation value: 0.3, 0.7 or 1.0

• The compensation value will change if the EV step is changed. It "EV STEP" (P. 102)


#### Number of frames: 3

Menu

#### MENU → [%] → [2] → [BRACKETING] → [AE BKT]

#### Start shooting.

- In single-frame shooting, the exposure changes every time the shutter button is pressed.
- In sequential shooting, hold down the shutter button until the selected number of frames are taken.
- Releasing the shutter button stops bracketing shooting. When it stops, **EKT** is displayed in green.

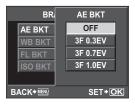

#### How AE bracketing compensates exposure in each shooting mode

Depending on the selected shooting mode, exposure is compensated in the following way:

- **P** mode : Aperture value and shutter speed
- A mode : Shutter speed
- S mode : Aperture value
- M mode : Shutter speed

#### TIPS

#### To apply AE bracketing to the exposure value you have compensated:

→ Compensate the exposure value, then use the AE bracketing feature. AE bracketing is applied to the exposure value you have compensated.

# ISO sensitivity setting

IS

The larger the ISO value, the darker the location in which you can shoot. However, increasing the ISO value leads to increased noise (graininess) in the picture. ISO200, which gives optimal noise and gradation balance, is recommended for normal use.

For a slower shutter speed or when you want to open the aperture, use ISO100.

Direct butto	n	ISO
Live control	1	⊛ <b>▶ (</b> ©: [ISO]
Super contr	ol panel	⊛ → INFO → 💠: [ISO]
Menu		MENU ▶ [%] ▶ [] ▶ [ISO]
[AUTO]	: The sensit	ivity is set automatically

according to the shooting conditions. For [ISO-AUTO SET], you can set the default (value normally used when the optimal exposure can be obtained) and upper limit (upper limit of ISO that automatically changes). ISO-AUTO SET" (P. 103) [100-6400] : Fixed ISO sensitivity [ISO STEP] can be changed to 1/3 EV or 1EV increments. ISO STEP" (P. 103)





#### 🖹 TIPS

#### To automatically set the optimal ISO in M mode:

 $\rightarrow$  Normally, the AUTO setting is not available in **M** mode, but you can set it for use in all shooting modes. ISO-AUTO" (P. 103)

# **ISO bracketing**

The camera automatically takes pictures at a different ISO sensitivity with the shutter speed and aperture value fixed. 3 images with different exposures are recorded in the order of the set ISO sensitivity (optimum exposure when set to **[AUTO]**), exposure in the – direction, and exposure in the + direction.

#### Compensation value: 0.3, 0.7 or 1.0

• The compensation value is set in 1/3 EV increments regardless of the ISO step setting.

#### Number of frames: 3

Menu

MENU → [%] → [2] → [BRACKETING] → [ISO BKT]

# Notes

· Bracketing is performed regardless of the upper limit set with [ISO-AUTO SET].

# **Multiple exposure**

This overlays multiple frame images and saves the result as a single image. The image is saved with the record mode set at the time the image is saved.

You can overlay an image while taking a picture or overlay a recorded image in playback mode.

#### MULTIPLE EXPOSURE

In shooting mode, 2 frames of pictures taken can be overlaid and saved as a single image. You can also select a stored RAW image and shoot multiple exposures to create an overlay image.

[FRAME]	: Select [2F].
[AUTO GAIN]	: When set to [ON], the brightness of each frame is set to 1/2 and the
	images are overlaid. When set to [OFF], the images are overlaid with
	the original brightness of each frame.
[OVERLAY]	: Then set to <b>[ON]</b> , a RAW image recorded on a card can be overlaid with multiple exposures and stored as a separate image. The number
	of pictures taken is one.

#### IMAGE OVERLAY

In playback mode, up to 3 frames of RAW images can be overlaid and saved as a single image. Image overlay" (P. 87)

#### Menu

MENU ▶ [♣2] ▶ [MULTIPLE EXPOSURE]

#### Setting display

• When multiple exposure is set, 🖬 is displayed. After the first frame is shot, 🖬 is displayed in green.

MULTIPLE EXP	OSURE
FRAME	OFF
AUTO GAIN	OFF  >
OVERLAY	OFF >
BACK+ 💷 🔤 🗛 🕨	SET+OK

#### TIPS

#### To cancel the image during shooting:

 $\rightarrow$  Pressing the  $\mathbf{\tilde{m}}$  button cancels the last picture taken.


- To shoot multiple exposures while checking the composition for each frame:
- → The overlay images are displayed semi-transparently so you can shoot while checking the position of the image overlay.

#### Notes

- · When multiple exposure is set, [SLEEP] is set to [OFF] automatically.
- RAW images taken with another camera cannot be used for the overlay image.
- When [OVERLAY] is set to [ON], the images displayed when a RAW image is selected are developed with the settings at the time of shooting.
- To set the shooting functions, cancel multiple exposure shooting first. Some functions cannot be set.
- Multiple exposure is cancelled automatically from the first picture in the following situations. The camera is turned off/The button is pressed/The MENU button is pressed/The shooting mode is set to a mode other than P, A, S, M/The lens release button is pressed/ The battery power runs out/The USB cable, AV cable and/or HDMI mini-cable is inserted/ Switching between the LCD monitor and electronic viewfinder
- The information for the first frame during multiple exposure shooting is displayed as the shooting information.
- When a RAW image is selected using **[OVERLAY]**, the JPEG image for the image recorded in JPEG+RAW is displayed.
- When shooting multiple exposures using bracketing, priority is given to multiple exposure shooting. While the overlay image is being saved, bracketing is reset to the factory default setting.

# AF mode selection

The three focus modes S-AF, C-AF, and MF are available with this camera. You can take pictures by combining the S-AF mode with MF mode, and the C-AF mode with AF TRACKING.

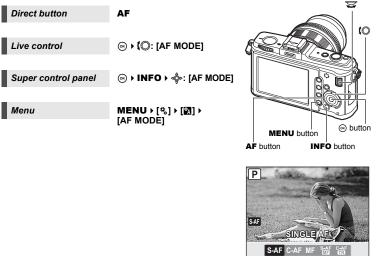

# S-AF (single AF)

Focusing is performed once when the shutter button is pressed halfway. If focusing fails, release your finger from the shutter button and press it halfway again. This mode is suitable for taking pictures of still subjects or subjects with limited movement.

#### Press the shutter button halfway.

- When the focus is locked, the AF confirmation mark lights up on the LCD monitor.
- · A beep sound is outputted when the subject is in focus.

#### *≣ TIPS*

#### When you want to quickly switch from AF mode to MF:

→ By registering [MF] to the Fn button, you can press the Fn button to switch to MF mode. IS "; FUNCTION" (P. 97)

#### When you want to be able to shoot even if the subject is not in focus:

→ See "RLS PRIORITY S/RLS PRIORITY C" (IBP P. 99).

AF

#### Composing and taking a picture after locking the focus (focus lock)

Compose the picture with focus locked and press the shutter button to take the picture.

- When the focusing mark blinks, this indicates that the picture is out of focus. Try again.
- e.g.) The camera focuses using the center AF target.



# C-AF (continuous AF)

The camera repeats focusing while the shutter button remains pressed halfway. Even if the subject moves or you change the composition of the picture, the camera continues trying to focus.

#### Press the shutter button halfway and keep it in this position.

- · When the subject is in focus and locked, the AF confirmation mark lights up.
- The AF target does not light up, even when the subject is in focus.
- The camera repeats focusing. Even if the subject moves or even if you change the composition of the picture, focusing is tried continuously.
- A beep sound is outputted when the subject is in focus. The beep sound is not outputted after the third continuous AF operation, even when the subject is in focus.
- Four thirds system lenses operate in the S-AF mode.

#### MF (manual focus)

This function allows you to manually focus on any subject.

#### Adjust the focus using the focus ring.

 Turn the focus ring and the view will switch to zoom display automatically. You can disallow zoom display. IS "MF ASSIST" (P. 94)

#### 🖹 TIPS

# To change the rotational direction of the focus ring:

→ You can select the rotational direction of the focus ring to suit your preference for how the lens adjusts to the focusing point. IS "FOCUS RING" (P. 94)



This function allows you to fine-adjust the focus manually by turning the focus ring after AF is performed in the S-AF mode.

 Press the shutter button halfway. After AF is confirmed, rotate the focus ring to fine-adjust the focus.

# Notes

If the shutter button is pressed again after fine-adjusting the focus with the focus ring, the AF
is activated and your adjustments are cancelled.

# C-AF+TR (AF TRACKING)

The subject is repeatedly focused and tracked by pressing the shutter button halfway to track the auto-focused subject. This is suitable for taking fast-moving action.

#### Press the shutter button halfway and keep it in this position.

- · When the subject is in focus and locked, the AF confirmation mark lights up.
- The camera holds the focus, and focus is tracked even if the subject moves or you alter the
  picture composition.
- Four thirds system lenses operate in the S-AF mode.
- When [@FACE DETECT] is set to [ON], tracking centers on the subject's face (All target AF mode).

#### TIPS

#### When tracking of the subject is lost:

→ When you have lost sight of the tracking subject, the AF target will be displayed in red. Release the shutter button, focus on the subject again and press the shutter button halfway.

# AF target selection


This camera has 11 AF targets for focusing on the subject with auto focus. Select the optimal AF target mode according to your subject and the composition.

There are two AF target modes: All target AF mode, which uses AF at all AF targets, and Single target AF mode, which uses AF centering around one selected AF target.

#### [::::] All target AF mode

[ · ] Single target AF mode

The camera focuses automatically on one of the 11 AF targets. Use this feature when you wish to leave focusing to the camera.

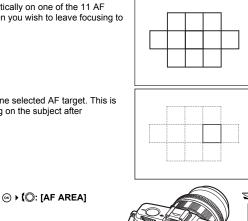


The camera focuses using one selected AF target. This is useful for accurately focusing on the subject after composing the shot.

Live control


Menu

Super control panel

MENU ▶ [♣] ▶ [] ▶ [AF AREA]

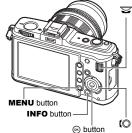


· The currently selected AF target lights. When [ · ] is set, you can select the AF target to be used at that point. For operation, refer to Step 2 in "Selecting the AF target mode and position" (IPP P. 53) in the next section.

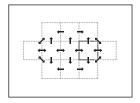

#### Selecting the AF target mode and position

Select the AF target mode or select the AF target to use with Single target AF mode.

- 1 Using [AF AREA] select [ · ] to enable selection of the AF target mode and position.
- 2 Use the main dial and sub dial or arrow pad to select the AF target.

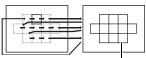



Selecting the position of the AF target with the arrow pad.

→ The position of the AF target can be changed by pressing the arrow pad. I r FUNCTION" (P. 99)



#### Registering an AF target mode

You can register a frequently used AF target mode and the position of that AF target. You can then quickly load that registered setting ("home position") and use it when shooting.

#### Registering

1 In the screen of Step 2 of "Selecting the AF target mode and position" (IS P. 53), press the Fn button and ☑ button at the same time.

- The home position is registered at the time the buttons are pressed.
- The home position cannot be registered when operated from a menu.



Indicates that the AF target is being registered.

#### Shooting


To use this function, you must assign the **[[•••]HOME]** function to the **Fn** button in advance.

## 1 Press the Fn button.

The registered home position is selected. Press this button again to switch to the original AF target mode.

# Enlarged display operation

You can enlarge subjects and display them. Enlarging the image is convenient for checking focus and adjusting the image by MF.

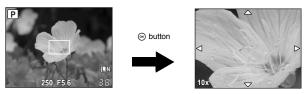

#### Press the INFO button repeatedly to display the zoom display.

Switching the information display" (P. 23)

- The enlargement frame will be displayed.
- In this state, press the shutter button halfway, and focus using the enlargement frame regardless of the AF target setting.

#### 2 Use ♣ to move the frame and press the ⊛ button.

- The area of the frame is displayed enlarged.
- In this state, press the shutter button halfway to focus while zoomed.
- Press and hold the 
   button to return the enlargement frame to the center after it was
   moved.

#### Turn the sub dial to change the magnification (7×/10×).

1

3

# Using the face detection function

By setting [ FACE DETECT] to [ON], the camera will detect people's faces in the frame and adjust the focus and metering automatically.

Direct button	Fn (The setting changes each time the button is pressed.)
Live control	⊛ ▶ (〇: [● FACE DETECT]
Super control panel	⊛ → INFO → 🤹 → [❹ FACE DETECT]
Menu	MENU ▶ [♣] ▶ [闡] ▶ [❹ FACE DETECT]

- In order to use the Fn button, [Fn FACE DETECT ] needs to be set up in the menu in advance. IS "; FUNCTION" (P. 97)
- After setting [ FACE DETECT] to [ON] while using the Fn button, the following functions are automatically set to the best settings for taking pictures of people.
  - METERING: 🗑 ..... 📭 P. 42
  - GRADATION: AUTO ...... B P. 73
  - AF MODE: S-AF ..... 📭 P. 49
  - AF AREA: [::::] ..... 📭 P. 52
- 1 If the camera detects a face, a frame will be displayed in that location.
  - When you press the shutter button, the camera will focus on the position of the face detection frame (When [ • ] is selected in [AF AREA] the camera will focus on that position).

#### Notes

- During sequential shooting, face detection will work only at the first shot.
- Depending on the subject, the camera may not be able to correctly detect the face.



# Sequential shooting

Single-frame shooting Shoots 1 frame at a time when the shutter button is pressed

Sequential shooting

(normal shooting mode).

Shoots at approximately 3 frames/sec. for as long as the shutter button is pressed (during S-AF, MF).

- Press the shutter button fully and keep it pressed. The camera will take pictures in sequence until you release the button.
- · Focus, exposure, and white balance are locked at the first frame (during S-AF, MF).


#### Notes

· During sequential shooting, if the battery check blinks due to low battery, the camera stops shooting and starts saving the pictures you have taken on the card. The camera may not save all of the pictures depending on how much battery power remains.

are

Direct button	90
Live control	@ ▶ ((:[□])
Super control panel	⊛ ▸ INFO ኑ 🌼: [및))
When ANTI-SHOC displayed with the	K is set, ঔ, ⊒₁ and 🗔 an ♦ symbol

CS "ANTI-SHOCK z" (P. 103)

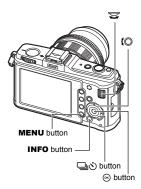



# Self-timer shooting

This function lets you take pictures using the self-timer. You can set the camera to release the shutter after either 12 or 2 seconds. Fix the camera securely on a tripod for self-timer shooting.

For the setting method, see "Sequential shooting" (IPP. 56).

#### Press the shutter button all the way.

- When 12s is selected: First, the self-timer lamp lights up for approximately 10 seconds, then it blinks for approximately 2 seconds and the picture is taken.
- When 32s is selected : The self-timer lamp blinks for approximately 2 seconds, and then the picture is taken.
- To cancel the activated self-timer, press the ⊒i ob button.



 Do not press the shutter button while standing in front of the camera; this could result in the subject being out of focus since focusing is performed when the shutter button is pressed halfway.



# Image stabilizer

You can reduce the amount of camera shake that can occur when shooting in low light situations or shooting with high magnification.

- OFF Image stabilizer is off.
- I.S. 1 Image stabilizer is on.
- I.S. 2 This is used for panning with the camera in the horizontal direction to achieve a blurred background. The horizontal image stabilizer is turned off, and only the vertical image stabilizer is activated.
- I.S. 3 This is used for panning with the camera in the vertical direction to achieve a blurred background (tilting). The vertical image stabilizer is turned off, and only the horizontal image stabilizer is activated.

Live control	⊛ ▶ (©: [IMAGE STABILIZER]
Super control panel	⊛ ▶ INFO ▶ ∰: [IMAGE STABILIZER]
Menu	MENU ▶ [♣] ▶ [IMAGE STABILIZER]



#### Setting the focal length

By setting the focal length of the lens in advance, you can use the image stabilizer function with lenses other than Micro Four Thirds/Four Thirds system lenses. This setting is deactivated when a Micro Four Thirds/Four Thirds system lens is attached.

# 1 Press the ≱ button when the image stabilizer is turned on.

 $\begin{array}{c} \textbf{2} \quad \text{Use the sub dial to set the focal length and press}\\ \textcircled{\otimes}. \end{array}$ 

#### Focal lengths that can be set



• If the focal length of the lens you are using is not listed, select the closest value.


#### Notes

- The image stabilizer cannot correct excessive camera shake or camera shake that occurs when the shutter speed is set to the slowest speed. In these cases, it is recommended that you use a tripod.
- When using a tripod, set [IMAGE STABILIZER] to [OFF].
- When using a lens with an image stabilization function, turn off the image stabilizer function of either the lens or the camera.
- If [IMAGE STABILIZER] is set to [I.S.1], [I.S.2] or [I.S.3] and you turn off the camera, the camera will vibrate. This is due to the camera initializing the image stabilizer mechanism.
- You may notice an operating sound or vibration when the image stabilizer is activated.
- If the image stabilizer icon blinks in red on the monitor, it indicates a failure of the image stabilizer function. If you take a picture as is, the composition may be off. Consult your Olympus Authorized Service Center.
- The image stabilizer will not activate at shutter speeds of over 2 seconds.
- If the internal temperature of the camera exceeds the specified temperature, the image stabilizer is deactivated and the image stabilizer icon lights red on the monitor.



# Setting the image aspect

You can change the aspect ratio (horizontal-to-vertical ratio) when taking pictures using live view. Depending on your preference, you can set the aspect ratio to [4:3] (standard), [16:9], [3:2], or [6:6]. JPEG images are trimmed and saved according to the aspect ratio.

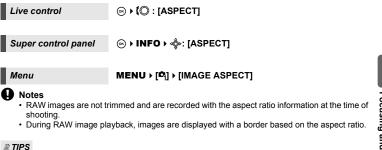

#### To change the aspect ratio of recorded images:

 $\rightarrow$  You can only change the aspect ratio when the aspect ratio of the image is set to [4:3].  $\mathbb{R}^{\infty}$  "Editing still images" (P. 85)

#### To trim recorded images:

→ You can only trim images when the aspect ratio of the image is set to [4:3]. ISP "Editing still images" (P. 85)

# Panorama shooting

You can enjoy panorama shooting easily. Using OLYMPUS Master (provided CD-ROM) to join images where the subject's edges overlap, you can create a single panorama composite image.

Panorama shooting is possible up to a maximum of 10 images.



Try your best to include common parts of the overlapping images when shooting the subject.

#### Set the mode. I "Setting the art filter/scene" (P. 11)

- Use rightarrow to specify the direction for joining, then shoot the subject with the edges overlapping.
  - $\triangleright$  : Joins the next image to the right.
  - $\triangleleft$  : Joins the next image to the left.
  - $\Delta\,$  : Joins the next image to the top.
  - $\nabla$  : Joins the next image to the bottom.
  - Shoot while changing the composition such that the subject overlaps.
  - · The focus, exposure, etc. will be determined at the first shot.
  - The 🛅 (warning) mark will be displayed after you have finished taking 10 shots.
  - Pressing the 
     button before shooting the first frame returns to the scene mode selection
     menu.
  - Pressing the 
     button in the midst of shooting ends the sequence of panorama shooting, and allows you to continue with the next one.

#### Notes

 During panorama shooting, the image previously taken for position alignment will not be retained. With the frames or other markers for display in the images as a guide, set the composition such that the edges of the overlapping images overlap within the frames.



1

ż

# Flash shooting

This camera does not have a built-in flash. A separately sold external flash unit is required for flash shooting.

Refer to the external flash's manual as well.

#### Functions available with external flash units

Optional flash	FL-50R	FL-36R	FL-20	FL-14	RF-11	TF-22
Flash control mode	TTL-AUTO, AUTO, MANUAL, FP TTL AUTO, FP MANUAL		TTL-AUTO, AUTO, MANUAL		TTL-AUTO, MANUAL	
GN (Guide number) (ISO100)	GN50 (85 mm <sup>*</sup> ) GN28 (24 mm <sup>*</sup> )	GN36 (85 mm <sup>*</sup> ) GN20 (24 mm <sup>*</sup> )	GN20 (35 mm <sup>*</sup> )	GN14 (28 mm <sup>*</sup> )	GN11	GN22

\* The focal length of the lens that can be used (Calculated based on 35 mm film camera)

#### Using the external electronic flash

Be sure to attach the flash to the camera before turning on the flash's power.

# 1 Remove the hot shoe cover by sliding it in the direction indicated by the arrow in the illustration.

- Keep the shoe cover in a safe place to avoid losing it, and put it back on the camera after flash shooting.
- 2 Attach the electronic flash to the hot shoe on the camera.

# **3** Turn on the flash.

- When the charge lamp on the flash lights up, charging is complete.
- The flash will be synchronized with the camera at a speed of 1/180 sec. or less.

# 4 Select a flash mode.


Filash mode setting" (P. 62)

- 5 Select the flash control mode.
  - TTL-AUTO is recommended for normal use.

# 6 Press the shutter button halfway.

- Shooting information such as ISO sensitivity, aperture value, and shutter speed is communicated between the camera and flash.
- 7 Press the shutter button all the way.

Hot shoe cover

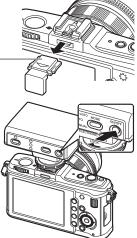

#### Super FP flash

Super FP flash is available with the FL-50R or FL-36R. You can use the Super FP flash even where normal flashes cannot be used with high shutter speed. Fill-in flash shooting with the aperture open (such as in outdoor portrait shooting) is also possible with Super FP flash. For details, refer to the external flash's manual.

#### Flash mode setting 4

The camera sets the flash mode according to various factors such as firing pattern and flash timing. Available flash modes depend on the exposure mode.

#### Auto flash AUTO

The flash fires automatically in low light or backlight conditions.

- To shoot a subject with backlighting, position the AF target over the subject.
- Flash synchronization speed/Slow limit

Shutter speed can be changed when the flash fires. IS "#X-SYNC." (P. 104), "#SLOW LIMIT" (P. 104)

#### Red-eye reduction flash 🔘/👁 🕏

In the red-eye reduction flash mode, a series of pre-flashes are emitted just before the regular flash fires. This helps accustom the subject's eyes to the bright light and minimizes the red-eye phenomenon. In S/M mode, the flash always fires.

#### Notes

- After the pre-flashes, it takes about 1 second before the shutter is released. Hold the camera firmly to avoid camera shake.
- Effectiveness may be limited if the subject is not looking directly at pre-flashes, or if the shooting range is too far. Individual physical characteristics may also limit effectiveness.

#### Slow synchronization (1st curtain) \$SLOW

The slow synchronization flash is designed for slow shutter speeds. Normally, when shooting with a flash, shutter speeds cannot go below a certain level to prevent camera shake. But when shooting a subject against a night scene, fast shutter speeds can make the background too dark. Slow synchronization allows you to capture both the background and the subject. Since the shutter speed is slow, be sure to stabilize the camera by using a tripod so as not to cause the picture to be blurred.

#### Slow synchronization (2nd curtain) \$SLOW2/2nd CURTAIN

Usually, the flash fires the moment (immediately after) the shutter opens (1st curtain). In this mode, however, the flash fires immediately before the shutter closes. 2nd curtain flash fires just before the shutter closes. Changing the flash timing can create interesting effects in your picture, such as expressing the movement of a car by showing the tail-lights streaming backwards. The slower the shutter speed, the better the effects turn out. In **S/M** mode, the flash always fires.

#### Slow synchronization (1st curtain)/Red-eye reduction flash OSLOW

While using slow synchronization with flash shooting, you can also use this function to achieve red-eye reduction.

#### Fill-in flash 💈

The flash fires regardless of the light conditions. This mode is useful for eliminating shadows on the subject's face (such as shadows from tree leaves), in a backlight situation, or for correcting the color shift produced by artificial lighting (especially fluorescent light).

#### Notes

 When the flash fires, the shutter speed is set to 1/180 sec. or less. When shooting a subject against a bright background with the fill-in flash, the background may be overexposed. In this case, use the optional FL-50R external flash or a similar flash and shoot in the Super FP flash mode. IST "Super FP flash" (P. 62)


#### Flash off 🕃

The flash does not fire.

#### Flash intensity control

The flash intensity can be adjusted from +3 to -3.

In some situations (e.g., when shooting small subjects, distant backgrounds, etc.), you may get better results by adjusting the amount of light emitted by the flash ("flash intensity"). It is useful when you intend to increase the contrast (distinction between light and dark) of images to make the images more vivid.

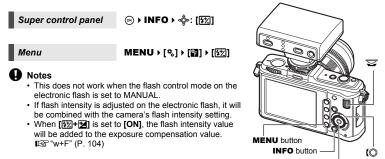

( button

+3

SET+OK

钗

BACK+ MENL

#### Flash bracketing

The camera shoots multiple frames, changing the amount of light emitted by the flash for each shot. The camera shoots 3 frames at a time with the following amount of light: optimum light, light adjusted in the – direction, and light adjusted in the + direction.

#### Menu

#### MENU → [%] → [2] → [BRACKETING] → [FL BKT]

- The compensation value will change according to the EV step. IS "EV STEP" (P. 102)
- In single-frame shooting, the amount of light emitted by the flash changes every time the shutter button is pressed.
- In sequential shooting, hold down the shutter button until the selected number of frames are taken.
- Releasing the shutter button stops bracketing shooting. When it stops, **EKT** is displayed in green.

BR	FL BKT
AE BKT	OFF
WB BKT	3F 0.3EV
FL BKT	3F 0.7EV
ISO BKT	3F 1.0EV
	SET+OK

# Selecting the record mode

You can select a record mode in which to take pictures. Choose the record mode that is best for your purpose (printing, editing on a PC, website editing, etc.).

## Recording formats

#### JPEG

3

For JPEG images, select a combination of image size (**I**, **M**, **S**) and compression rate (SF, F, N, B). An image consists of pixels (dots). When you enlarge an image with a low pixel count, it will be displayed as a mosaic. If an image has a high pixel count, the file size (amount of data) will be larger and the number of storable still pictures will be lower. The higher the compression, the smaller the file size. However, the image will have less clarity when played back.

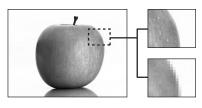


Image with a high pixel count

Image with a low pixel count

				<u> </u>			
				Compression rate			
	Application	Number of pixels	Pixel count	SF (Super Fine) 1/2.7	F (Fine) 1/4	N (Normal) 1/8	B (Basic) 1/12
se se		(Large)	4032 × 3024	SF	<b>D</b> F	١N	B
ğ 🖡	Select for the print size	🛾 (Middle)	3200 × 2400	MSF	MF	⊠N	₿В
5			2560 × 1920				
			1600 × 1200				
ē			1280 × 960				
ciq.			1024 × 768				
Number of pixels	For small- sized prints and use on a web site	S (Small)	640 × 480	SF	₿F	<b>S</b> N	<b>S</b> B

#### Image becomes clearer

#### RAW

This is unprocessed data that has not undergone changes in white balance, sharpness, contrast or color. To display as an image on the computer, use OLYMPUS Master. RAW data cannot be displayed on a different camera or by using common software, and it cannot be selected for print reservation. RAW files are assigned an ".ORF" file extension. RAW mages can be edited with this camera and saved as JPEG data. If "Editing still images" (P. 85)

#### Selecting the record mode

#### JPEG

#### JPEG+RAW

Records both a JPEG and RAW image at the same time each time you take a picture.

#### RAW

Records the image in RAW data format.

e.g.) The following 9 record modes are available when **I**F/**I**N/**I**N/**S**N are registered

RAW : RAW

JPEG : OF/ON/ON/SN

JPEG+RAW: **I**F+RAW/**I**N+RAW/**I**N+RAW/**I**N+RAW

3

Live control

⊛ **) (**©: [**∢**∺]

Super control panel

⊛ ▶ INFO ▶ أي: [♦:

Menu

MENU ▶ [♣] ▶ [♣:·] ▶ [STILL PICTURE]

#### TIPS

#### To quickly set the record mode:

→ By setting [RAW €:-] to the Fn button, you can turn the main dial while pressing the Fn button to change the record mode.

Each time you press the **Fn** button, you can easily switch between JPEG data only and JPEG and RAW data.

To find out the file size/number of storable still pictures for each record mode:

→ "Record mode and file size/number of storable still pictures" (IP P. 139)

P/				
<b>*</b>				
ISO	WB	A±0	3 NA	TURAL
AUTO	AUTO	G±0	®±0	©±0
4			RGB ±0	8 NORM
AUTO	S-AF	[ ]	OFF	sRGB
⊠±0.0	Small	4:3	LIV	
IS1	Super Fine		LIV	
	250	F5.6		_ 38



# Selecting the white balance

Color reproduction differs depending on light conditions. For instance, when daylight or tungsten lighting is reflected on white paper, the shade of white produced will be slightly different for each. With a digital camera, white color can be adjusted to reproduce more natural white with a digital processor. This is called white balance. There are 4 options for setting the WB with this camera.

#### Auto white balance [AUTO]

This function enables the camera to automatically detect white in images and adjust the color balance accordingly. Use this mode for general use.

#### Preset white balance [※][介][①][念][崇][崇][崇][⊮]

8 different color temperatures are preset according to the light source. For example, use preset WB when you want to reproduce more red in the picture of a sunset, or capture a warmer artistic effect under artificial lighting.

#### Custom white balance [CWB]


You can set the color temperature from 2000K to 14000K. For details on color temperature, refer to "White balance color temperature" (ISP P. 138).

#### One-touch white balance [

You can set the optimum white balance for the shooting conditions by pointing the camera at a white object like a sheet of white paper. The white balance achieved with this setting is saved as one of the preset WB settings.

WB mode	Light conditions
Αυτο	Used for most light conditions (when there is a white portion framed on the LCD monitor). Use this mode for general use.
<b>淤 5300K</b>	For shooting outdoors on a clear day, or to capture the reds in a sunset or the colors in a fireworks display
<b>☆</b> 7500K	For shooting outdoors in the shadows on a clear day
යා 6000K	For shooting outdoors on a cloudy day
- <u>ਐ</u> - 3000K	For shooting under a tungsten light
∰ 4000K	For shooting under white fluorescent lighting
₩2 4500K	For shooting under a neutral white fluorescent lamp
∰3 6600K	For shooting under a daylight fluorescent lamp
WB\$ 5500K	For flash shooting
Ŋ	Color temperature set by one-touch WB. IS "Setting the one-touch white balance" (P. 70)
CWB	Color temperature set in custom white balance menu. This can be set from 2000K to 14000K. When the value has not been set, it is set to 5400K.

You can adjust the white balance by selecting the appropriate color temperature for the light conditions.

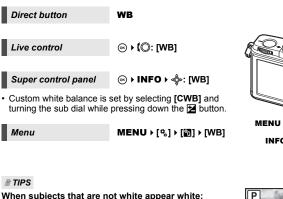

→ In the auto WB setting, if there is no near-white color in the image framed in the screen, the white balance will not be correctly determined. In such a case, try preset WB or onetouch WB settings.



#### WB compensation

This function lets you make fine changes to the auto WB and preset WB settings.

Super control panel

⊛ → INFO → أي: [<u>WB½</u>]

Menu

MENU ▶ [卷] ▶ [] ▶ [WB]

Select the white balance to adjust and press ▷.



3

Record mode, white balance, and picture mode

#### Adjusting the white balance in the A direction (Amber-Blue)

Depending on the original WB conditions, the image will become more amber when adjusted toward +, and bluer when adjusted toward –.

#### Adjusting the white balance in the G direction (Green-Magenta)

Depending on the original WB conditions, the image will become greener when adjusted toward +, and magenta when adjusted toward –.

• The white balance can be adjusted in 7 increments in each direction.

#### TIPS

#### Checking the white balance you have adjusted:

→ After setting the compensation value, point the camera at the subject to take test shots. When the AEL/AFL button is pressed, sample images that have been taken with the current WB settings are displayed.

#### Adjusting all WB mode settings at once:

→ See "ALL WB" ( I P. 105).

#### Setting the one-touch white balance

This function is useful when you need a more precise white balance than preset WB can provide. Point the camera at a sheet of white paper under the light source you want to use to determine the white balance. The optimum white balance for the current shooting conditions can be saved in the camera. This is useful when shooting a subject under natural light, as well as under various light sources with different color temperatures.


Set [Fn FUNCTION] to [,] beforehand. (I P. 97)

#### Point the camera at a sheet of white paper.

- · Position the paper to fill the screen and unshadowed.
- While holding down the Fn button, press the shutter button.
  - · The one-touch white balance screen appears.

# 3 Select [YES] and press the ⊛ button.

- The white balance is registered.
- The registered white balance will be stored in the camera as a preset WB setting. Turning the power off does not erase the data.

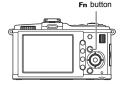

#### ITIPS

#### After pressing the shutter button, [WB NG RETRY] is displayed:

→ When there is not enough white in the image, or when the image is too bright, too dark or the colors look unnatural, you cannot register the white balance. Change the aperture and shutter speed settings, then repeat the procedure from Step 1.



1

2

# Taking a picture while comparing the effect of white balance

You can take a picture while comparing the effect of white balance on a 4-split screen.

1 Press the INFO button repeatedly to display the multi view display.

Switching the information display" (P. 23)

- To switch to the white balance comparison screen when the exposure compensation comparison screen is displayed, press △. Press △ ▽ to switch the screen.
- 2 Select white balance by  $\triangleleft \triangleright$  or the dial, and press the  $\circledast$  button.
  - The camera is now ready to take pictures using the selected white balance.



# Notes

• This function cannot be used in **FAUTO**, **ART** or **SCN** modes.

# WB bracketing

Three images with different white balances (adjusted in specified color directions) are automatically created from one shot. One image has the specified white balance, while the others are the same image adjusted in different color directions.

#### Menu

#### MENU → [%] → [2] → [BRACKETING] → [WB BKT]

- Select from [OFF]/[3F 2STEP]/[3F 4STEP], or [3F 6STEP] for the EV step for both the A-B (amber-blue) direction and the G-M (green-magenta) direction.
- When the shutter button is pressed down all the way, 3 images adjusted in specified color directions are automatically created.



#### TIPS

#### To apply WB bracketing to the white balance:

→ Adjust white balance manually, then use the WB bracketing feature. WB bracketing is applied to the white balance you have adjusted.

# Notes

 During WB bracketing, the camera cannot shoot the pictures if there is not enough memory in the camera and card for storing at least the selected number of frames.

# Picture mode

You can select image tone to create unique image effects. You can also fine-adjust image parameters such as contrast and sharpness for each mode. The adjusted parameters are recorded in each picture effect mode.

[ <sub>1</sub> , i- ENHANCE]	: Produces more impressive-looking pictures matched to the scene
	mode.
[₂∖VIVID]	: Produces vivid colors.
[₃∖NATURAL]	: Produces natural colors.
[₄∖MUTED]	: Produces flat tones.
[s PORTRAIT]	: Produces beautiful skin tones.
[MONOTONE]	: Produces black and white tone.
[CUSTOM]	: Select one picture mode, set the parameters, and register the setting.
	You can also register the gradation to [CUSTOM]. This setting is
	stored separately from [GRADATION] in the menu.
	Gradation" (P. 73)

Live control

Menu

Super control panel

MENU ▶ [¤] ▶
[PICTURE MODE]

[PICTURE MODE]

The adjustable parameters vary according to the picture modes.

The individual parameters are as follows.

• •	nction between light and dark
[SHARPNESS] : Sharp	oness of the image
[SATURATION]: Vividi	ness of the color
[EFECT] : Sets	the extent that the effect will be
applie	ed. (i-ENHANCE)
[B&W FILTER] : Creat	tes a black and white image. The
filter	color is brightened and the
	elementary color is darkened.
(MOI)	NOTONE
[N: NEUTRAL]	: Creates a normal black and
	white image.
[Ye: YELLOW]	: Reproduces clearly defined
	white cloud with natural blue sky.
[Or: ORANGE]	: Slightly emphasizes colors in
	blue skies and sunsets.
[R: RED]	: Strongly emphasizes colors in blue



**NATURAL** 

PICTURE MODE

入i-ENHANCE

ৎVIVID

**3∕NATURAL** 

余FLAT 灸PORTRAIT

■ SET+OK

©±0

S±0

RGB±0

Ø<sub>1</sub>

PICTURE

BACK+ MENU

CONTRAST

SHARPNESS

SATURATION

R: RED]	: Strongly emphasizes colors in blue skies and brightness of crimson
	foliage.

[G: GREEN] : Strongly emphasizes colors in red lips and green leaves.

[PICT. TONE] : Colors the black and white image. (MONOTONE)

[N: NEUTRAL] : Creates a normal black and white image.

- [S: SEPIA] : Sepia
- [B: BLUE] : Bluish
- [P: PURPLE] : Purplish
- [G: GREEN] : Greenish

# Gradation

In addition to the **[NORMAL]** gradation setting, you can select from 3 other gradation settings. **[HIGH KEY]**: Gradation for a bright subject.

[LOW KEY] : Gradation for a dark subject.

- [AUTO] : Divides the image into detailed regions and adjusts the brightness separately for each region. This is effective for images with areas of large contrast in which the whites appear too bright or the blacks appear too dark.
- [NORMAL] : Use [NORMAL] mode for general uses.



HIGH KEY Suitable for a subject that is mostly highlighted.



LOW KEY Suitable for a subject that is mostly shadowed.

Super control panel

⊛ ▶ 🔹: [GRADATION]

Menu

# MENU → [P<sub>1</sub>] → [GRADATION]

# Notes

· Contrast adjustment does not work when set to [HIGH KEY], [LOW KEY], or [AUTO].

# **Movie recording**

You can record high-definition movies. Stereo sound is recorded simultaneously. In addition to automatic exposure, you can change the aperture to suit your preference, and manually set both the aperture and shutter speed and use art filtering effects to enrich the expressiveness of your movies.

**1** Set the mode dial to  $\mathfrak{A}$ .



ရှ

2 Press the shutter button halfway down and focus on what you wish record.

Focusing is achieved by autofocus, and the AF confirmation mark lights up.



Available recording time

Lights up in red during recording



Total recording time

# **3** Press the shutter button all the way to begin recording.

 Sound recording begins simultaneously (when [MOVIE ]) is set to [ON]).

Recording Audio when Recording Movie" (P. 76)

# 4 Press the shutter button all the way to end recording.

#### TIPS

#### Autofocus is not working properly:

- $\rightarrow$  Press the AEL/AFL button for AF operation.
  - · The sound of the lens triggering will be recorded.

# Notes

- When recording a movie, you cannot change the settings for exposure compensation, aperture value or shutter speed.
- In movie mode, [IMAGE STABILIZER] provides electronic stabilization. When you use this function, the recorded image is enlarged by a small amount. Also, [I.S.1] will operate regardless of the settings for [I.S.1], [I.S.2] and [I.S.3].
- · Stabilization is not possible when the camera shake is excessive.
- When using a lens with an image stabilization function, turn off the image stabilizer function of either the lens or the camera.
- You cannot use [ FACE DETECT] in movie mode.
- With some types of card, you cannot record to the end of the available time and recording is canceled automatically during operation. Also, the size of any given file is limited to 2 GB.
- When the inside of the camera becomes hot, shooting is automatically stopped to protect the camera.
- You cannot make a further recording while the card access lamp is blinking at the end of a recording.
- · It is recommended to use a SD speed class 6 compatible card for movie shooting.

# Changing the settings for movie recording

# Adding effects to a movie

Live control

# Solution → (○ → [MOVIE AE MODE]

Menu

# MENU → [□2] → [MOVIE AE MODE]

• Select using  $\Delta \nabla$ , then press the  $\circledast$  button.

- [P] Optimal aperture is set automatically according to the brightness of the subject.
- [A] Depiction of background is changed by setting the aperture. Turn the sub dial to set the aperture.
   [M] Set the aperture and shutter speed.

Set the aperture and shutter speed. Turn the sub dial to set the aperture, and turn the main dial to set the shutter speed. You can set shutter speeds from



1/30 seconds to 1/4000 seconds. ISO settings 200 to 1600 are manually set only.

[ART1]~[ART8] Take a movie using art filtering effects.

# Notes

When recording movies in the art filter mode, the total recording time that is displayed sometimes varies with the actual time.

With **[ART7]** (DIORAMA) images are played back at high speed, so the recording time display is matched to the actual time elapsed during playback, resulting in slower time progression.

Live control	⊛
Menu	MENU → [邙] → [◀:-] → [MOVIE]

#### Movie Record Mode

Record mode	Application		
HD	The number of pixels is 1280 × 720. You can record high-definition movies.		
SD	The number of pixels is 640 × 480.		

# **Recording Audio when Recording Movie**

Set to [ON] to record sound simultaneously when movie recording begins.

Live control

# **Recording Movies**

4

# Menu MENU ▶ [🗊] ▶ [MOVIE 🌵]

Select using  $\Delta \nabla$ , then press the  $\odot$  button.

# Notes

- When recording sound in a movie, the sound of the lens triggering and camera operating may be recorded. If desired, you can reduce these sounds by shooting with [AF MODE] set to [S-AF], or by limiting the amount of times you press the buttons.
- With [ART7] (DIORAMA), sound cannot be recorded.


# Taking still picture automatically when movie recording ends

Set to **[ON]** to take a still picture when you perform the operation to end recording of a movie. This feature is useful when you want to record a still picture as well as the movie.

## Menu

# MENU → [□2] → [MOVIE+STILL]

• Select using  $\Delta \nabla$ , then press the B button.

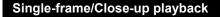

- · The last recorded image appears.
- The sound recorded when taking the picture is played back simultaneously.
- The LCD monitor turns off after more than 1 minute if no operations are performed.
- 2 Use ⊲or to select images you want to view. You can also turn the sub dial to switch to Q for close-up playback.



Fn button





(Single-frame playback)



- $\Delta\,$  : Displays the frame that is stored 10 frames back
- $\nabla$ : Displays the frame that is stored 10 frames ahead
- Displays the next frame
- I : Displays the previous frame

#### Press the Fn button

- Plays back the image at a 10× magnified close-up position.
- To exit the playback mode, press the button again.
- Pressing the shutter button halfway resumes the shooting mode.



Press or to change the close-up position.

Press 🚸 to move the

display of the close-up position.

When [ FACE DETECT] ( P. 55) is set to [ON], a

frame is displayed around a

detected face. Press ( to

move the frame to another

face

(Close-up position playback)



Press the INFO button

(Close-up frame-by-frame playback)



Press  $\triangleleft \triangleright$  to view frameby-frame close-ups. When [**\textcircled{O}** FACE DETECT] is set to [ON], press  $\triangle \bigtriangledown$ to move to another face in close-up position.

 Press the INFO button to return to close-up playback.


# Index display/Calendar display

This function lets you show several images at the same time. This is useful when you want to quickly search a number of pictures to find a particular image.

During single-frame playback, each time you turn the sub dial toward **[1]**, the number of images shown changes between 4, 9, 16, 25, 49 and 100 pictures.

- $\triangleleft$  :Moves to the previous frame
- ▷ :Moves to the next frame
- $\Delta$  :Moves to the upper frame
- ☑ :Moves to the lower frame
- To return to single-frame playback, turn the sub dial to  $\mathbf{Q}_{\cdot}$



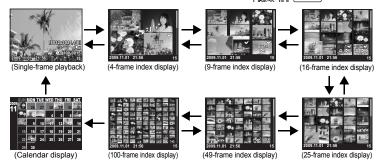

#### Calendar display

With the calendar, you can display images recorded on the card by date. If more than one image was taken on a single date, the image shot first on that date is displayed. Use ♣ to select a date and press the button to play back images for the selected date in single-frame display.

# Information display


This allows you to display detailed information about the image.

Luminance information can also be displayed with histogram and highlight graphs.

# Each press of the INFO button switches the display.

• This setting is stored and will be shown the next time the information display is called up.

INFO button

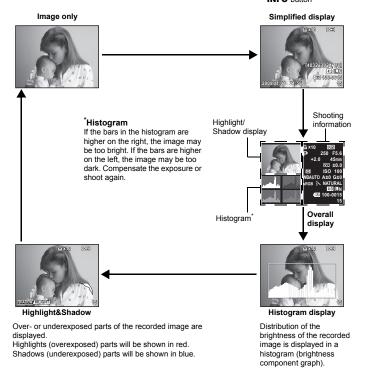

## *≣ TIPS*

#### To quickly switch to the frequently used display:

→ You can hide the information display for all modes except "Simplified display". IS "INFO SETTING" (P. 101)




# Slideshow

This function displays images stored on the card one after another. The images are played back in order, starting with the displayed image.

#### 1 MENU → [▶] → [止]

Press the 
 button during playback to select slideshow.



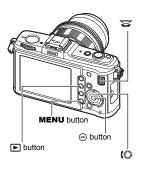

#### 2 Perform slideshow settings.

- [START] : Perform slideshow using current settings.
- [BGM1 : Set BGM (5 types) or turn BGM [OFF].
- [SLIDE] : Set type of slideshow to execute.

#### [SLIDE INTERVAL] :

Sets interval at which to switch images from 2-10 seconds.

#### **IMOVIE INTERVAL1**:

When playing a movie, select [FULL] to play the entire move, or [SHORT] to play to a section part-way through.

#### 3 Select [START] and press the button.

· The slideshow will start.

#### 4 Press the (iii) button to stop the slideshow.

#### Operations during slideshow

- Turn the main dial to adjust the overall volume (only when playing back sound using the camera speaker).
- Turn the sub dial to adjust the balance between BGM and recorded sound.



# Notes

• If the slideshow is left running for about 30 minutes, the camera will turn off automatically.

# **Rotating images**

This function lets you rotate images and display them vertically on the monitor during singleframe playback. This is useful when taking pictures with the camera held vertically. The images will automatically be displayed in the correct direction even if the camera is rotated.

# 1 MENU → [▶] → [宀]

- When set to [ON], images shot vertically will be automatically rotated and displayed during playback. You can also press the 2 button to rotate and display the image.
- The rotated image will be recorded on the card in that position.
- Rotating playback is not available for movies.



button

Original image before rotating



# Movie playback

- 1 Select a movie, and press the ⊛ button.
- 2 Select [MOVIE PLAY] and press the 🛞 button.
  - Playback will start.



# Operations during movie playback

- Volume: Turn the main dial to adjust the volume of the sound from the camera speaker.
- Rewind/Fast-forward: Select using  $\triangleleft \triangleright$ .





Playing time/total recording time



· Playback functions

5

- On pressing the button to pause the movie, you can perform movie operations using the arrow pad.
  - $\Delta$ : Displays first frame.
  - $\nabla$ : Displays last frame.
  - ▷ : Continues playback while pressed.
  - I : Continues reverse playback while pressed.


To stop playback Press the **MENU** button.

# Playback on TV

Use the AV cable provided with the camera to playback recorded images on your TV. You can playback high-definition images on a high-definition TV by connecting it to the camera using a commercially available HDMI mini-cable.

#### Connection via AV cable

· Be sure to turn off the camera and the TV before connecting the AV cable.

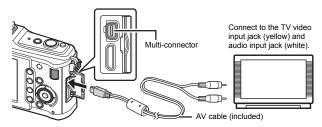


- 1 Use the camera to select the video signal format that matches that of the connected TV ([NTSC]/[PAL]). I "VIDEO OUT" (P. 100)
- 23 Turn off the camera.
- Connect the TV and camera.
- 4 Turn on TV, and change [INPUT] to [VIDEO (an input jack connected to the camera)].
- 5 Turn on the camera and press the **button**.

# Notes

- The camera's monitor turns off automatically when the AV cable is connected to the camera.
- · For details on changing the input source of the TV, refer to the TV's instruction manual.
- Depending on the TV's settings, the displayed images and information may become cropped.

#### Connection via HDMI mini-cable

· Be sure to turn off the camera and the TV before connecting the mini-cable.

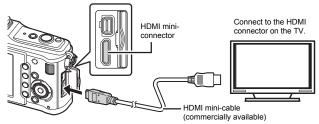

- 1 Use the camera to select the video signal format that matches that of the connected TV ([NTSC]/[PAL]). IN "VIDEO OUT" (P. 100)
  - Turn off the camera.
- 2345 Connect the TV and camera.
  - Turn on the TV and switch [INPUT] to [HDMI INPUT].
  - Turn on the camera.

## Notes

- · For details on changing the input source of the TV, refer to the TV's instruction manual.
- Use an HDMI mini-cable that matches the HDMI mini connector on the camera and the HDMI connector on the TV.
- When the camera and TV are connected by both an AV cable and an HDMI mini-cable. HDMI will take priority.
- Depending on the TV's settings, the displayed images and information may become cropped.
- When you connect to a TV via an HDMI mini-cable, you can select the format of the digital video signal. "HDMI" (
- · You cannot shoot pictures or movies when the HDMI cable is connected.
- Do not connect the camera to other HDMI output devices. Doing so may damage the camera.
- HDMI output is not performed while connected via USB to a computer or printer.

# Using the TV remote control

The camera can be operated by a TV remote control when connected to a TV that supports HDMI control.

#### 1 MENU → [%] → [10] → [HDMI] → [HDMI CONTROL]

Set to IONI.

# 2 Operate the camera by using the TV remote control.

- · You can operate the camera by following the operation guide displayed on the TV.
- · During single-frame playback, you can display or hide the information display by pressing the [Red] button, and display or hide the index display by pressing the [Green] button.
- · Some functions may be unavailable, even if displayed, depending on the TV.

# Editing still images

Recorded images can be edited and saved as new images. Available editing functions depend on the image format (image record mode).

A JPEG file can be printed as is without modification. A RAW file, on the other hand cannot be printed as is. To print a RAW file, use the RAW edit function to convert the RAW data format to JPEG.

## Editing images recorded in RAW data format

The camera performs image processing (such as white balance, sharpness, and art filter) on images in the RAW data format, then saves the data as an image in the JPEG format. While checking recorded images, you can edit them to your liking.

Image processing is performed based on the current camera settings. Change the camera settings to suit your preferences before editing.

#### Editing images recorded in JPEG data format

[SHADOW ADJ]	Brightens a dark backlit subject.
[REDEYE FIX]	Reduces the red-eye phenomenon during flash shooting.
[#]	Set the trimming size with the main dial and the trimming position with the arrow pad.



[ASPECT]	Changes the aspect ratio of images
	from 4:3 (standard) to [3:2], [16:9], or [6:6]. After changing the aspect
	ratio, use the arrow pad to specify the trimming position.
[BLACK & WHITE]	Creates black and white images.
[SEPIA]	Creates sepia-toned images.
[SATURATION]	Sets the color depth. Adjust the color saturation checking the picture on
	the screen.
[]	Converts the image file size to 1280 × 960, 640 × 480, or 320 × 240.
	Images with an aspect ratio other than 4:3 (standard) are converted to
	the closest image file size.
[e-PORTRAIT]	Makes skin look smooth and translucent.
	<ul> <li>You may not be able to compensate depending on the image if face detection fails.</li> </ul>

# 1 MENU → [▶] → [EDIT] → [SEL. IMAGE]

- Selection is also possible during playback by pressing the button.
- 2 Use  $\triangleleft \triangleright$  to select an image, then press the button.
  - The camera recognizes the image data format.
  - For images recorded in JPEG+RAW, a selection screen will appear, asking you which data to edit.
  - · You cannot edit movies.

Confirm the data format from here.



**3** The setting screen varies with the image data format. Select the item you want to edit and do the following steps.





- The edited image is saved as another image, apart from the original image.
- To exit the edit mode, press the MENU button.

## Notes

- Red-eye correction may not work depending on the image. Red-eye correction may affect other parts of the image, as well as the eyes.
- Editing of a JPEG image is not possible in the following cases: When an image is recorded in RAW, when an image is processed on a PC, when there is not enough space in the card memory, when an image is recorded on another camera.
- When resizing ([]) an image, you cannot select a larger number of pixels than was originally recorded.
- [] and [ASPECT] can only be used to edit images with an aspect ratio of 4:3 (standard).

# Adding sound to still pictures

When playing back still pictures, a maximum of 30 seconds of sound can be added (recorded) and this can be added as a memo after shooting pictures.

# 1 MENU → [▶] → [EDIT] → [SEL. IMAGE] → [♥]

- Selection is also possible during playback by pressing the  $\circledcirc$  button.
- **2** Select using  $\triangle \nabla$ , then press the  $\circledast$  button.
  - [NO] : No sound is recorded.
  - [ START] : Audio recording starts.
  - [YES] : Erases added sound.

# Notes

- · You cannot record sound for protected images.
- To stop recording part-way through, press the 
   button.

# Image overlay

Up to 3 frames of RAW images taken with the camera can be overlaid and saved as a separate image. The image is saved with the record mode set at the time the image is saved.

#### 1 **MENU** → [▶] → [EDIT] → [IMAGE OVERLAY]

- Selection is also possible during playback by pressing the ( button.
- Select the number of frames to overlav and press the (a) button.
- 2 3 Use ⊲o to select a frame and press the ⊛ button.
  - Repeatedly select images only for the number of frames selected in Step 2.
  - To cancel your selection, press the 
     button again.

4 Use  $\triangleleft \triangleright$  to select an image, then use  $\triangle \bigtriangledown$  to

· The displayed image changes as the brightness is

Use  $\triangle \nabla$  to select [YES], then press the  $\bigotimes$ 

select the brightness for each image. Press the ด





5 Playback functions

# Notes

5

button.

button.

adjusted.

- When the record mode is set to [RAW], the overlay image is saved as [IN+RAW].
- When selecting a frame to overlay, the JPEG images for images recorded in JPEG+RAW are displayed.

# Protecting images

Select from 0.1 to 2.0

Protect images you do not want to erase. Protected images cannot be erased by the singleframe or all-frame erase function.

#### Single-frame protect

#### Play back the image you want to protect and press the On button.

• On (protect mark) is displayed on the top right corner of the screen.

#### To cancel the protection

Display the images that are protected and press the On button.



During index display you can select multiple images and protect them all at the same time.

- 1 During index display, select the images you want to protect using ♣, then press the ⊕ button.

  - To cancel your selection, press the ⊛ button again.
- $\mathbf{2}$  Press  $\mathbf{D}$  to select the next images you want to protect, then press the  $\mathbf{D}$  button.
- **3** After you have selected the images to protect, press the O<sub>TT</sub> button.

#### Canceling all protections

This function lets you cancel the protection of several images at one time.

# 1 MENU → [] → [RESET PROTECT]

#### 2 Use $riangle abla \ abla$ to select [YES], then press the $\ ensuremath{\otimes}$ button.

# Notes

- Formatting the card erases all images even if they have been protected.
- Protected images cannot be rotated even when the button is pressed.

# **Erasing images**

Lets you erase recorded images. You can select single-frame erase, which erases only the currently displayed image; all-frame erase, which erases all the images stored on the card; or selected frame erase, which erases only the frames selected.

# Notes

- When you perform all-frame or selected frame erase on images recorded using RAW+JPEG, both the RAW and JPEG images are erased. When using single-frame erase, you can select whether to erase the JPEG, RAW, or both RAW and JPEG images. IS "RAW+JPEG ERASE" (P. 106)
- · Protected images cannot be erased. Cancel protected images, then erase them.
- You cannot restore images which have been erased. Be careful not to erase important data.
   Protecting images" (P. 87)

- 1 Display the images you want to erase and press the m button.
- 2 Use  $\triangle \nabla$  to select [YES], then press the  $\bigotimes$  button.



#### Erasing selected frames

During index display, you can select multiple images and erase them all at the same time.

- 1 Select the images you wish to erase on the index display, then press .
  - The selected images will be shown with
  - To cancel your selection, press the 
     button again.
- 2 3 Press 🐵 to select the next images you want to protect, then press the 🛞 button.
- After you have selected the images to erase, press the imbutton.
- 4 Use  $\Delta \nabla$  to select [YES], then press the  $\odot$  button.

#### All-frame erase

- 1 MENU → [P<sub>1</sub>] → [CARD SETUP]
- 2 3 Use  $\triangle \nabla$  to select [ALL ERASE], then press the  $\bigcirc$  button.
- Use  $\triangle \nabla$  to select [YES], then press the  $\odot$  button.
  - All frames will be erased

#### TIPS

#### To erase immediately:

- → If you have set "QUICK ERASE" (IS P. 106) to [ON], pressing the in button will erase an image immediately.
- → You can set the initial position of the cursor to [YES]. IS "PRIORITY SET" (P. 107)

# Setup Menu

Use the Setup Menu to set the basic camera functions.



Use  $\triangle \nabla$  to select **[f]**, then press  $\triangleright$ .



Use  $\Delta \nabla$  to select a function, then press  $\triangleright$ .

For details on using the menu lists, see "Menu" (IRP P. 20).

# (Date/time setting)

เชิ P. 7

Set the date and time. The date and time is saved with each image to a card, and file names are assigned based on this date and time information.

## Changing the display language)

You can change the language used for the on-screen display and error messages from ENGLISH to another language.

# (Monitor brightness adjustment)

You can adjust the brightness and color temperature of the monitor. Color temperature adjustment will affect only the LCD monitor display during playback.

Use  $\triangleleft \triangleright$  to switch between  $\mathbb{B}^{:}$  (color temperature) and  $\overset{\circ}{x}$  (brightness), and use  $\triangle \nabla$  to adjust the value between [+7] - [-7].

 To adjust the electronic viewfinder, see "EVF ADJUST" (ISP P. 102).



6

#### **REC VIEW**

You can display the picture you have just taken while it is being recorded to the card, and to select how long the picture is displayed. This is useful for making a brief check of the picture you have just taken. Pressing the shutter button halfway while checking the picture lets you resume shooting immediately.

[1SEC]-[20SEC]	Selects the number of seconds to display each picture. Can be set in
	units of 1 second.
[OFF]	The picture being recorded to the card is not displayed.
[AUTO]	Displays the image being recorded, and then switches to playback mode. This is useful for erasing a picture after checking it.

#### **% MENU DISPLAY**

🕼 P. 21

When this item is set to **[ON]**, a custom menu is added so that you can customize various settings and operations to your particular liking.

#### FIRMWARE

Your productis firmware version will be displayed.

When you make inquiries about your camera or accessories or when you want to download software, you will need to state which version of each of the products you are using.

# Resetting the camera settings

In **P**, **A**, **S**, **M** or **P** mode, current camera settings (including any changes you have made) are retained when the power is turned off. To reset the camera to the factory default settings, set **[RESET]**.

# Registering [RESET1]/[RESET2]

For details on the registered functions, refer to "Functions that can be registered with My Mode and Custom Reset Setting" (ISP P. 140).

#### MENU → [P<sub>1</sub>] → [CUSTOM RESET]

- Select either [RESET1]/[RESET2] to register and press ▷.
  - If settings have already been registered, [SET] is displayed next to [RESET1]/[RESET2]. Selecting [SET] again overwrites the registered setting.
  - To cancel the registration, select [RESET].
- 2 Select [SET] and press the ⊛ button.

#### Using reset settings

This resets the camera to the factory default settings. You can also reset the camera to the [RESET1] or [RESET2] setting. [RESET1] Resets to the factory default settings. For the default settings, see

Resets to the factory default settings. For the default settings, see "Menu directory" (ISP P. 141).

[RESET1]/[RESET2] Resets to the registered settings.

Menu

#### MENU → [□] → [CUSTOM RESET]

- 1 Select [RESET], [RESET1], or [RESET2] and press the ☺ button.
- **2** Use  $\triangle \nabla$  to select [YES], then press the  $\bigotimes$  button.

RESET1	
YES	
NO	
	_
	SET+OK

Use the Custom Menu to customize the shooting functions. The Custom Menu has 9 tabs (Mato a functions) that are divided according to the functions to be set.

In the default setting, the Custom Menu is not displayed. To customize the functions, set [\* MENU DISPLAY] in the Setup Menu to [ON] to display the Custom Menu. (I P P. 21)



<sup>≉</sup> A	DIAL FUNCTION	
*в	DIAL DIRECTION	×
*C	AEL/AFL	S1/C2/M1
₽́D	AEL/AFL MEMO	OFF
ΨE	Fn FUNCTION	- 🙂 - I
₩ <sub>F</sub>	✓ FUNCTION	
BA		SET+OK

Use  $\triangle \nabla$  to select tab  $\square$  to  $\square$ , then press  $\triangleright$ .

🖄 DIAL FU	AEL/AFL
B DIAL DIF	S-AF
C AEL/AFL	C-AF
D AEL/AFL	MF
🛍 🖻 FUNC	
F FUNC	
BACK+ MENU	SET+OK

Use  $\triangle \nabla$  to select a function, then press  $\triangleright$ .

Use  $\triangle \nabla$  to select [\*], then press  $\triangleright$ .

For details on using the menu lists, see "Menu" (IPP P. 20).

# 🕅 AF/MF

## AF MODE

Select the focus mode to suit the subject.

The **[S-AF]** mode is suitable for still objects and slow-moving subjects, the **[C-AF]** mode is suitable for subjects that constantly move close to and away from the camera, the **[MF]** mode is for manually focusing on subjects, the **[S-AF+MF]** mode is for automatically focusing on subjects and fine-adjusting with the focus ring, and the **[C-AF+TR]** mode is for focusing on subjects while tracking their movement.

#### AF AREA

Select either [::::] (all target AF mode) for performing AF using all AF targets or [ • ] (single target AF mode) for performing AF centering around a selected point.

# IS ₽. 52

ISP P. 49

# [····] SET UP


Selects the operations of dials or arrow pad when selecting the AF target.

[OFF] Stops after moving to the AF target on the end.

[LOOP] After moving to the AF target on the end, moves to the AF target on the opposite end of the same row or column. Selects all AF targets before moving to the AF target on the opposite end, and [AF AREA] is set to [::::].

[SPIRAL] After moving to the AF target on the end, moves to the AF target on the opposite end of the next row or column. Selects all AF targets before moving to the AF target on the opposite end, and [AF AREA] is set to [::::].

e.g.) When moving from the top left AF target to the right

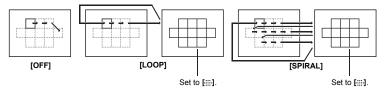

## RESET LENS

When set to [ON], this resets the focus of the lens (infinity) each time the power is turned off.

#### **BULB FOCUSING**

You can set the camera to enable focus adjustments during bulb shooting with MF.

- **[ON]** During exposure, you can turn the focus ring and adjust the focus.
- [OFF] The focus is locked during exposure.

# FOCUS RING

You can customize how the lens adjusts to the focal point by selecting the rotational direction of the focus ring.




# MF ASSIST


When [AFMODE] is set to [S-AF+MF] or [MF], turn the focus ring for automatic zoom display.

## DIAL FUNCTION

In **P**, **A**, **S**, or **M** mode, you can assign functions other than the default functions to the main dial and sub dial. You can also switch the operations of the main dial and sub dial for menu operations with the default operations.



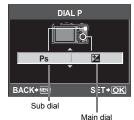

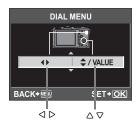

#### DIAL DIRECTION

The rotational direction of the dial, the incrementing direction of shutter speed/aperture and the movement direction of menu and live control cursors can be changed.

#### EXPOSURE

Setting	安八〇 (rotational direction of the dial)	ت (rotational direction of the dial)	
DIAL1	<ul> <li>Slower shutter speed</li> <li>Open the aperture (f-number is decreased)</li> </ul>	<ul> <li>Faster shutter speed</li> <li>Close the aperture (f-number is increased)</li> </ul>	
DIAL2 • Faster shutter speed • Close the aperture (f-number is increased)		<ul> <li>Slower shutter speed</li> <li>Open the aperture (f-number is decreased)</li> </ul>	

#### MENU

Setting	ل© (rotational direction of the dial)	tᢕ (rotational direction of the dial)	
DIAL1 Vertical direction:Move down.		Vertical direction:Move up.	
DIAL2	Vertical direction:Move up.	Vertical direction:Move down.	

You can use the **AEL/AFL** button to perform AF or metering operations instead of using the shutter button.

Select the function of the button to match the operation when the shutter button is pressed. Select [mode1] to [mode4] in each focus mode. (You can only select [mode4] in C-AF mode.)

		Shutter button function			AEL/AFL button function			
Mode	Half-	oress	Full press		When holding down AEL/AFL			
	Focus	Exposure	Focus	Exposure	Focus	Exposure		
[S-AF]	[S-AF]							
mode1	S-AF	Locked	—	_	—	Locked		
mode2	S-AF	_	—	Locked	—	Locked		
mode3	_	Locked	—	_	S-AF	—		
[C-AF]								
mode1	C-AF start	Locked	Locked		—	Locked		
mode2	C-AF start		Locked	Locked	—	Locked		
mode3		Locked	Locked	-	C-AF start	—		
mode4	_	_	Locked	Locked	C-AF start	_		
[MF]								
mode1	_	Locked	_		_	Locked		
mode2	_		_	Locked	_	Locked		
mode3	—	Locked	_	_	S-AF	_		

#### Basic operations

[mode1] For determining the metered exposure while focusing. AE lock is activated while pressing the **AEL/AFL** button, allowing you to adjust the focus and determine the exposure separately.

[mode2] For determining the exposure when you press the shutter button fully. This is useful for shooting scenes with significant changes in lighting, such as on a stage.

[mode3] For focusing with the AEL/AFL button instead of the shutter button.

[mode4] Press the **AEL/AFL** button to focus, and press the shutter button fully to determine the exposure.

# AEL/AFL MEMO

You can lock and maintain the exposure by pressing the AEL/AFL button.

- [ON] Press the **AEL/AFL** button to lock and maintain the exposure. Press again to cancel the maintaining of the exposure.
- [OFF] The exposure will be locked only while the AEL/AFL button is pressed.

You can assign a function to the Fn button.

#### [Fn FACE DETECT]

Using the **Fn** button, set [**OFACE DETECT**] to **[ON]**, and settings ideal for portrait shooting are set. Pressing this button again sets this feature to **[OFF]**.

IS "Using the face detection function" (P. 55), "● FACE DETECT" (P. 101)

#### [PREVIEW] (electronic)

While holding down the Fn button, you can use the preview function.

Preview function" (P. 41)

# []

Press the Fn button to acquire the WB value.

Setting the one-touch white balance" (P. 70)

#### [[···] HOME]

Press the **Fn** button to switch to the registered AF home position. Press the button again to switch to the original AF target mode. If you turn off the camera while it is set to the AF home position, the original position will not be stored.

Registering an AF target mode" (P. 53)

#### [MF]

Press the **Fn** button to switch AF mode to **[MF]**. Press the button again to switch to the original AF mode.

#### [RAW **€**..]

Press the **Fn** button to switch from JPEG to JPEG+RAW or from JPEG+RAW to JPEG for the record mode.

You can change the record mode by turning the sub dial while holding down the  $\ensuremath{\mathbf{Fn}}$  button.

#### [TEST PICTURE]

Pressing the shutter button while pressing the **Fn** button enables you to check the picture you have just taken on the monitor without having to record the picture to the card. This is useful when you want to see how a picture turned out without saving it.

#### [MY MODE]

While holding down the **Fn** button, you can take pictures using the camera settings registered in the **[MY MODE SETUP]**.

🔊 "MY MODE SETUP" (P. 98)

#### [BACKLIT LCD]

Press the  $\mathbf{Fn}$  button to turn the LCD monitor off. This function is useful when you are using the optional optical viewfinder. Press the  $\mathbf{Fn}$  button again to turn the LCD monitor on.

This function does not work when the electronic viewfinder is attached.

#### [OFF]

Does not allow function allocation.

# FUNCTION

Other functions can be assigned to the () button. [AF MODE] IS "AF mode selection" (P. 49) [METERING] IS "Changing the metering mode" (P. 42) [FLASH MODE] IS "Flash shooting" (P. 61) [BACKLIT LCD] IS "Fn FUNCTION" (P. 97) [IMAGE STABILIZER] IS "Image stabilizer" (P. 57)

## MY MODE SETUP

You can store two frequently used settings as My Mode. You can select which My Mode setting to use in advance by following the steps under "Executing" below. To use My Mode, set [**Fn** FUNCTION] to **[MY MODE]** and hold down the **Fn** button while shooting. **I**  $\otimes$  "**Fn** FUNCTION" (P. 97)

#### Registering

1) Select [MY MODE1] or [MY MODE2] and press ▷.

- 2) Select [SET] and press the 
  button.
  - The current settings are registered in the camera. For details on the functions that can be registered to My Mode, refer to "Functions that can be registered with My Mode and Custom Reset Setting" (ISP P. 140).
  - · To cancel the registration, select [RESET].

#### Executing

1) Select [MY MODE1] or [MY MODE2] and press the 
button.

- 2) Select [YES] and press the ( button.
  - · The selected My Mode is set.
  - When shooting, press the shutter button while holding down the Fn button.

# BUTTON TIMER

The direct button may remain selected even after it is released.

 [OFF]
 Do not retain selection.

 [3SEC]/[5SEC]/[8SEC]
 The button remains selected during the number of seconds indicated.

 [HOLD]
 The button remains selected until you press it again.

• Buttons that can be set with [BUTTON TIMER] ISO, ☑, ₩B, AF, ⊒\(S) You can switch the functions of the **AEL/AFL** button and the **Fn** button. When you select **[ON]**, the **AEL/AFL** button will function as the **Fn** button, and the **Fn** button will function as the **AEL/AFL** button.

#### E FUNCTION

You can set the function of the arrow pad.

- [OFF] To prevent malfunction, the functions assigned to the arrow pad will not be activated when the button is pressed.
- [ON] The functions assigned to the arrow pad will be activated.
- [[••]] You can use the arrow pad to select the position of the AF target. S<sup>3</sup> "Selecting the AF target mode and position" (P. 53)

# RELEASE

#### RLS PRIORITY S/RLS PRIORITY C

In this camera, the shutter does usually not work during AF. However, by applying this setting you can work the shutter before AF is completed. If you want to release the shutter without waiting until these operations have completed, use the setting below. You can set the release priority individually in AF mode.

 RLS PRIORITY S
 Sets release priority for S-AF mode (IPP . 49).

 RLS PRIORITY C
 Sets release priority for C-AF mode (IPP . 50).

# DISP/=>))/PC

#### HDMI

Set this when the camera is connected to a TV via an HDMI mini-cable.

#### HDMI OUT

Selecting the digital video signal format for connecting to a TV via an HDMI mini-cable.

[1080i]	Play back in 1080i format.
[720p]	Play back in 720p format.
[480p/576p]	Play back in 480p/576p format (when [VIDEO OUT] is set to [PAL], play
	back in 576p format).

# Notes

 When set to [1080i], 1080i format takes priority for HDMI output. However, if this setting does not match the input setting of the TV, the resolution is changed first to 720p and then to 480p.
 For details on changing the input setting of the TV, refer to the TV's instruction manual.

#### HDMI CONTROL

When **[ON]** is selected, the camera can be operated by a TV remote control when it is connected to the TV via an HDMI mini-cable.

#### VIDEO OUT

You can select NTSC or PAL according to your TV's video signal type.

You will need to set this when you want to connect the camera to a TV and play back images in a foreign country. Make sure the correct video signal type is selected before connecting the video cable. If you use the wrong video signal type, recorded pictures will not play back properly on your TV.

#### TV video signal types in major countries and regions

Check the video signal type before connecting the camera to your TV.

NTSC	North America, Japan, Taiwan, Korea
PAL	European countries, China

#### ■)))

When set to **[OFF]**, you can turn off the beep sound that is emitted when the focus locks by pressing the shutter button.

#### SLEEP

After a specified period of time elapses with no operations being performed, the camera enters the sleep mode (stand-by) to save battery power. [SLEEP] lets you select sleep timer from [1MIN], [3MIN], [5MIN], or [10MIN]. [OFF] cancels the sleep mode.

The camera activates again as soon as you touch any button (the shutter button, **b** button, etc.).

#### USB MODE

If you specify the device you are connecting to beforehand, you can skip the USB connection setting procedure normally required every time you connect the cable to the camera. For details on how to connect the camera to either device, refer to "Connecting the camera to a printer" (ISP P. 112) and "Connecting the camera to a computer" (ISP P. 117).

#### [AUTO]

The selection screen for the USB connection will be displayed every time you connect the cable to a computer or printer.

#### [STORAGE]

Allows you to transfer images to a computer. Also, select to use the OLYMPUS Master software via PC connection.

#### [MTP]

 $\bar{S}et$  this to transfer images in Windows Vista/7 without using the OLYMPUS Master software.

#### [PRINT]

Can be set when connecting the camera to a PictBridge-compatible printer. You can print out pictures with set number of prints, print paper and other settings. Connecting the camera to a printer" (P. 112)

#### LIVE VIEW BOOST

During live view shooting, you can brighten the monitor for easier confirmation on the subject. [OFF]

The subject is displayed on the monitor with the brightness level that is adjusted according to the exposure being set. You can shoot while confirming through the monitor in advance to get a picture that is to your liking.

[ON]

The camera automatically adjusts the brightness level and displays the subject for easier confirmation. The effect of the exposure compensation adjustments is not reflected on the monitor.

# FACE DETECT

When set to **[ON]**, the camera will detect people's faces and automatically adjust the focus there. **I**S "Using the face detection function" (P. 55)

You can play back close-up images focusing on the subject's face. I "S" "Single-frame/Close-up playback" (P. 77)

#### INFO SETTING

Select the information displayed when the **INFO** button is pressed during live view or playback.

[► INFO] Sets whether to display or hide [IMAGE ONLY], [OVERALL], [,], [HIGHLIGHT&SHADOW] during playback. IS "Information display" (P. 79) Sets whether to display or hide [,], [ZOOM], [MULTI VIEW], [IMAGE ONLY], []], []], or []] during live view. IS "Switching the information display" (P. 23)

#### VOLUME

You can adjust the speaker volume from 0 to 5.

#### LEVEL GAUGE

Detect titling horizontally and in the forward and backward direction when **[LEVEL GAUGE]** is set to **[ON]**. Use this as a guide in situations where you cannot determine whether the camera is level, such as when you cannot see the horizon or skyline on the screen or when the screen is dark while shooting night scenes.

#### Monitor indication:

Press the **INFO** button repeatedly to display the level gauge. It "Switching the information display" (P. 23)

## TIPS

#### To calibrate the level gauge:

→ I TEVEL ADJUST" (P. 108)

# Notes

 If the camera is tilted forward or backward to a large degree, the error of the horizontal titling increases.

# MOVIE 🍨

Set to [ON] to record sound when shooting movies.

# EVF ADJUST

You can adjust the brightness and color temperature of the electronic viewfinder. To do so, attach the electronic viewfinder, and switch the display to the electronic viewfinder.

The color temperature after adjustment is applied only in the display during playback. Switch the  $\mathbb{J}^{\mathbb{F}}$  (color temperature) and  $\overset{\infty}{\Leftrightarrow}$  (brightness) by  $\triangleleft \heartsuit$ , and adjust within the range [+7] to [-7] by  $\bigtriangleup \bigtriangledown$ .

 To adjust the camera body monitor, see "I (Monitor brightness adjustment)" (I P. 90).

# EXP/ COM/ISO

# EV STEP

You can select the EV step for exposure parameter setting, such as shutter speed, aperture value, or exposure compensation value, from [1/3EV], [1/2EV], or [1EV].

# METERING

Customizing your camera

Select the metering method to suit the scene you are shooting.

# AELMetering

You can set the metering mode when pressing the AEL/AFL button to lock the exposure.

[AUTO] performs metering in the mode selected under [METERING].

#### ISO

Select either [AUTO] for automatically altering the ISO setting or select within the range [100] to [6400].





🕼 P. 76

🕼 P. 42

IST P. 46



You can select the EV step of the ISO sensitivity from [1/3EV] or [1EV].

## ISO-AUTO SET

You can set the upper limit and default ISO values when ISO is set to [AUTO].

#### [HIGH LIMIT]

This sets the upper limit of the ISO value that automatically changes. The upper limit can be set from 200 to 6400 in 1/3 EV increments.

#### [DEFAULT]

This sets the value to be normally used when the optimum exposure can be obtained. The value can be set from 200 to 6400 in 1/3 EV increments.

#### ISO-AUTO

You can set the shooting mode in which the ISO [AUTO] setting is activated.

#### [P/A/S]

The **[AUTO]** setting is activated in all shooting modes except **M** mode. When **[AUTO]** is selected in M mode, ISO 200 is set.

[ALL]

The **[AUTO]** setting is activated for all shooting modes. The ISO is automatically selected to obtain the optimal ISO even in **M** mode.

#### BULB TIMER

You can select the maximum time (in minutes) for bulb shooting.

#### ANTI-SHOCK [+]

You can select the interval between fully pressing the shutter button and releasing the shutter to be anywhere from 1/8 to 30 seconds.

This diminishes camera shake caused by vibrations. This feature is useful in situations such as microscope photography and astrophotography.

# Notes

 Anti-shock is added to the shooting functions individually (single-frame shooting, sequential shooting and self-timer shooting). Is "Sequential shooting" (P. 56)

#### BRACKETING

The camera automatically shoots a number of pictures at different exposure values for each frame.

[AE BKT] 12 P. 45 [WB BKT] 12 P. 71 [FL BKT] 12 P. 64 [ISO BKT] 12 P. 47

# 🖬 🕹 CUSTOM

# FLASH MODE

Select the firing pattern, timing and other parameters for when the external flash unit is used. Available flash modes vary according to the exposure mode.

#### 铋

ISP P. 63

Adjust the flash firing strength with the range [+3] to [-3].

# 4 X-SYNC.

You can set the shutter speed that will be used when the flash fires. The speed can be set from 1/60 to 1/180 in 1/3 EV increments

# SLOW LIMIT

You can set the slow limit of the shutter speed that will be used when the flash fires. The speed can be set from 1/30 to 1/180 in 1/3 EV increments.

# <u>57</u>+12

When set to **[ON]**, it will be added to the exposure compensation value and flash intensity control will be performed.

# In €:-/COLOR/WB

#### NOISE REDUCT.

This function reduces the noise that is generated during long exposures. When shooting night scenes, shutter speeds are slower and noise tends to appear in images. With [NOISE **REDUCT.**], you can let the camera reduce noise automatically to produce clearer images. When set to [AUTO], noise reduction will be activated only when the shutter speed is slow. When set to [ON], noise reduction will always be activated.

When set to [OFF]





When set to [ON] or [AUTO]

- While noise reduction is activated, it takes about twice the usual time to take a picture.
- The noise-reduction process is activated after shooting.
- During processing the card access lamp blinks. You cannot take more pictures until the card access lamp turns off.



- · During sequential shooting, [NOISE REDUCT.] is [OFF] automatically.
- · This function may not work effectively with some shooting conditions or subjects.

#### NOISE FILTER

You can select the noise processing level. Use [STANDARD] for general use. [HIGH] is recommended during high sensitivity shooting.

#### wв

🕼 P. 68

Select the white balance to suit the light source. Other than custom white balance [CWB], adjust in the A direction (red - blue) and G direction (green - reddish purple) within the range [+7] to [-7].

#### ALL WB1/2

You can apply the same compensation value to all the white balance modes at once.

 [ALL SET]
 The same compensation value applies to all WB modes.

 [ALL RESET]
 The WB compensation value settings applied to each WB mode are all cleared at once

#### If you select [ALL SET]

 Use <I>▷ to select the color direction. Toward A: Amber-Blue/Toward G: Green-Magenta

2) Use △ ▽ to set the compensation value. IS "WB compensation" (P. 69) Releasing the AEL/AFL button takes a sample image. You can check the white balance you have adjusted.

#### If you select [ALL RESET]

1) Use  $\triangle \nabla$  to select **[YES]**.

#### COLOR SPACE

You can select how colors are reproduced on the monitor or printer. The first character in image file names indicates the current color space.

Pmdd0000.jpg P : sRGB : Adobe RGB

[sRGB] [Adobe RGB] B Standardized color space for Windows. Color space that can be set with Adobe Photoshop.

#### SHADING COMP.

In some cases, the edges of the image may be shadowed due to the properties of the lens. The shading compensation function compensates by increasing brightness at the dark edge of the image. This function is especially useful when a wide-angle lens is used.



#### Notes


- This function is not available when a teleconverter or an extension tube is attached to the camera.
- · At higher ISO settings, noise in image edges may be conspicuous.

#### €÷ SET

You can combine 3 image sizes and 4 compression rates and register 4 combinations. Select the registered setting with [4-].

Selecting the record mode" (P. 65)

Register 4 different combinations of image settings.

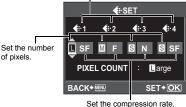

#### PIXEL COUNT

You can set the pixel size for the image size [1] and [3]. Select [3200 × 2400], [2560 × 1920], or [1600 × 1200]. [Middle] [Small] Select [1280 × 960], [1024 × 768], or [640 × 480].

# RECORD/ERASE

#### QUICK ERASE

You can erase the picture you have just taken immediately using the m button.

When the in button is pressed, the confirmation screen appears, asking you if [OFF] you want to erase the picture.

of pixels.

Pressing the m button erases the picture immediately. [ON]

# RAW+JPEG ERASE

You can select the method to erase images recorded in RAW+JPEG. This function can only be used to erase one frame.


[JPEG]	Erases all JPEG image files, leaving only the RAW image files.
[RAW] [RAW+JPEG]	Erases all RAW image files, leaving only the JPEG image files. Erases both image file types.

#### Notes

· This function is effective only if deleting one frame. For all-frame erase or erasing selected frames, both RAW and JPEG will be erased regardless of this setting.

#### FILE NAME

When you take a picture, the camera assigns it a unique file name and saves it in a folder. File names are assigned as shown in the illustration below.

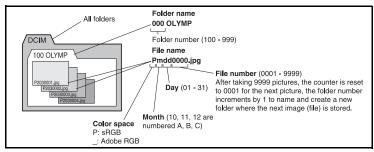

#### [AUTO]

Even when a new card is inserted, the folder numbers are retained from the previous card. If the new card contains an image file whose file number coincides with one saved on the previous card, the new card's file numbers start at the number following the highest number on the previous card.

#### [RESET]

When you insert a new card, the folder numbers starts at 100 and the file name starts at 0001. If a card containing images is inserted, the file numbers start at the number following the highest file number on the card.

## EDIT FILENAME

You can rename image files to make them easier to identify and organize. The portion of the filename that can be changed depends on the color space. IS "COLOR SPACE" (P. 105)



#### PRIORITY SET

You can customize the initial position of the cursor ([YES] or [NO]) on the Erasing images or Formatting the card screen.

#### dpi SETTING

You can set the resolution for printing images in advance. The set value is recorded on the card with the images.

[AUTO] Automatically set according to the image size.

**[CUSTOM]** You can make the desired setting. Press  $\triangleright$  to display the setting screen.

# 🖬 📩 UTILITY

#### PIXEL MAPPING

🕼 P. 126

The pixel mapping feature allows the camera to simultaneously adjust the image pickup device and image processing functions.

#### EXPOSURE SHIFT

You can adjust the default value for optimal exposure for each metering mode according to your preference. This can be set in 1/6 EV increments ranging from -1.0 EV to +1.0 EV.

# Notes

- The exposure compensation can be set from -3.0 EV to +3.0 EV. Setting [EXPOSURE SHIFT] reduces the range of the direction in which the default value is adjusted.
- You cannot check the exposure shift value during shooting. To make normal adjustments to the exposure, perform exposure compensation. If a "Exposure compensation" (P. 43)

#### WARNING LEVEL

You can change the timing when **C** is displayed (lights up). Normally, there is no need to change this.

LCD monitor (Shooting)" (P. 22)

# Notes

The battery check display is not a warning that the battery needs to be charged. When 
blinks, charge the battery.

# LEVEL ADJUST

You can calibrate the level gauge.

[RESET] Resets to the factory default adjustment value.

[ADJUST] Sets the current camera position as the zero point.

## Notes

Set [ADJUST] only when the camera is secured in a horizontal position. If the camera is not
in a stable position, you may not be able to calibrate the level gauge as desired.

# Print reservation (DPOF)

### Print reservation

Print reservation allows you to save printing data (the number of prints and the date/time information) with the pictures stored on the card.

Pictures set with print reservation can be printed using the following methods.

#### **DPOF (Digital Print Order Format)**

This is for saving desired print settings on digital cameras. By entering which images to print and the number of copies of each, the user can easily have the desired images printed by a printer or print lab that supports the DPOF format.

#### Printing using a DPOF-compatible photo lab

You can print the pictures using the print reservation data.

#### Printing using a DPOF-compatible printer


Pictures can be printed directly from a dedicated printer without using a PC. For more details, refer to the printer's manual. A PC card adapter may also be necessary.

# Notes

- DPOF reservations set by another device cannot be changed by this camera. Make changes
  using the original device. Moreover, setting new DPOF reservations using this camera will
  erase the previous reservations set by another device.
- · Not all functions may be available on all printers or at all photo labs.
- · Print reservation is not available for RAW data.
- Print reservation is not available for movie images.

### Single-frame reservation

Follow the operation guide to set print reservation for a picture.

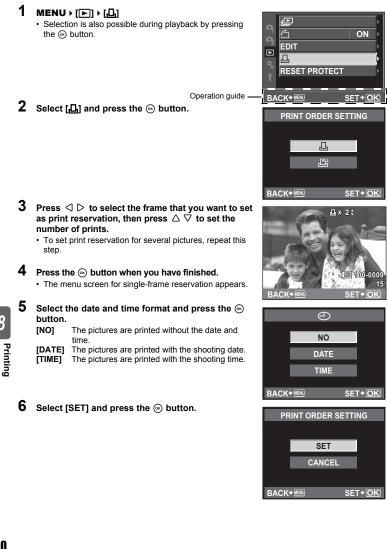

8

110 EN

### All-frame reservation

Applies print reservation to all the pictures stored in the card. The number of prints is fixed at 1.

- 1 MENU > [下] > [凸]
- 2 Select [∄] and press the ⊛ button.
- Select the date and time format and press the @ button. [NO] The pictures are printed without the date and time. [DATE] The pictures are printed with the shooting date. [TIME] The pictures are printed with the shooting time.
- 4 Select [SET] and press the @ button.

### Resetting the print reservation data

You can reset all print reservation data or just the data for selected pictures.

#### 1 MENU > IPI > IAI

#### Resetting the print reservation data for all pictures

- 2 Select [♣] or [♣] and press the ⊛ button.
- 3 Select [RESET] and press the @ button.



#### Resetting the print reservation data for a selected picture

- 2 3 Select [1] and press the is button.
- Select [KEEP] and press the is button.
- 4 Use  $\triangleleft \triangleright$  to select the frame with print reservation data you want to reset, then press  $\nabla$  to set the number of prints to 0.
- 5 Press the ( button when you have finished.
- 6 Select the date and time format and press the (a) button. This setting is applied to all frames with print reservation data.
- 7 Select [SET] and press the ( button.

# Direct printing (PictBridge)

By connecting the camera to a PictBridge-compatible printer with the USB cable, you can print out recorded pictures directly. To find out if your printer is compatible with PictBridge, refer to the printer's manual.

#### PictBridge

The standard that enables digital cameras and printers made by different manufacturers to be connected, and also allows pictures to be printed directly from the camera.

### STANDARD

All printers that support PictBridge have standard print settings. By selecting [L] STANDARD] on the settings screens (ISP P. 114), you can print pictures according to these settings. For details on your printer's standard settings, refer to the printer's manual or contact the printer manufacturer.

- The available print modes and settings such as paper size vary with the type of printer. For details, refer to the printer's manual.
- · For details on printing paper types, ink cassettes, etc., refer to the printer's manual.

# Notes


- · Use a fully charged battery for printing.
- · Images recorded in RAW data cannot be printed.
- · You cannot print movie images.
- · The camera will not enter sleep mode while it is connected to the USB cable.

### Connecting the camera to a printer

Use the provided USB cable to connect the camera to a PictBridge-compatible printer.

1 Turn the printer on and connect the camera's multi-connector to the printer's USB port with the USB cable.

 For details on how to turn the printer on and the position of the USB port, refer to the printer's manual.

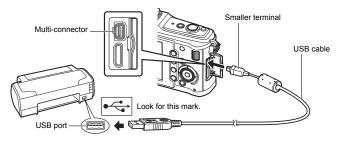

凸

# 2 Turn on the camera.

• The selection screen for the USB connection is displayed.

### Use riangle abla to select [PRINT].

• [ONE MOMENT] is displayed and the camera and printer are connected. Go to "Making prints using different print options" (IISP P. 113).

# Notes

3

• If the screen is not displayed after a few minutes, disconnect the USB Cable and start again from Step 1.

# Easy printing

# **1** Use $\lhd \triangleright$ to display the pictures you want to print on the camera.

- Display the image you want to print on the camera and connect the camera with a printer using a USB cable. The screen on the right appears shortly.
- **2** Press ▷.
  - The picture selection screen appears when printing is completed. To print another picture, use ⊲ ▷ to select the image and press the button.
  - To exit, unplug the USB cable from the camera while the picture selection screen is displayed.

# Making prints using different print options

## **1** Follow the operation guide to set a print option.


#### Selecting the print mode

Select the type of printing (print mode). The available print modes are as shown below.

[PRINT]	Prints selected pictures.
[ALL PRINT]	Prints all the pictures stored in the
	card and makes one print for each
	picture.
[MULTI PRINT]	Prints multiple copies of one image in
	separate frames on a single sheet.
[ALL INDEX]	Prints an index of all the pictures
	stored in the card.
[PRINT ORDER]	Prints according to the print
	reservation you made. If there is no

picture with print reservation, this is not available. (IPP P. 110)



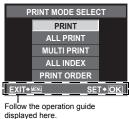





#### Setting the print paper items

[PICS/SHEET]


This setting varies with the type of printer. If only the printer's STANDARD setting is available, vou cannot change the setting. [SIZE]

Sets the paper size that the printer supports.

Selects the number of pictures per

sheet. Displayed when you have selected [MULTI PRINT].

[BORDERLESS] Selects whether the picture is printed on the entire page or inside a blank frame

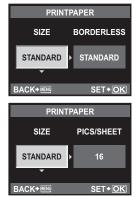

#### Selecting pictures you want to print

Select pictures you want to print. The selected pictures can be printed later (single-frame reservation) or the picture you are displaying can be printed right away. [PRINT] (OK)

Prints the currently displayed picture. If there is a picture that [SINGLE PRINT] reservation has already been applied to, only that reserved picture will be printed.

[SINGLE PRINT] ( Applies print reservation to the currently displayed picture. If you want to apply reservation to other pictures after applying [SINGLE PRINT], use  $\triangleleft \triangleright$  to select them.



[MORE] ( ) Sets the number of prints and other items for the currently displayed picture, and whether or not to print it.

For operation, refer to "Setting printing data" ( section

#### Setting printing data

Select whether to print printing data such as the date and time or file name on the picture when printing. When the print mode is set to **[ALL PRINT]** and **[OPTION SET]** is selected, the following screen appears.

[凸×]	Sets	the	number	of	prints.

[DATE]	Prints the date and time recorded on the
	picture.

- [FILE NAME] Prints the file name recorded on the picture.


PRINT INFO				
Ŀ	Լx		1	
D	ATE		WITHOUT	
F	ILE NAM	E   \	WITHOUT	•
4	<del></del>			Þ
BA		≣*•[	SET+	OK

- - [PRINT] Transfers images you print to the printer.
    [CANCEL] Resets the settings. All print reservation data will be lost. If you want to keep the print reservation data and make other settings, press the MENU button. This returns you to the previous setting.



- To stop and cancel printing, press the  $\circledast$  button.

[CONTINUE]	Continues printing.
[CANCEL]	Cancels printing. All print reservation data
	will be lost.

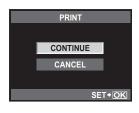

8 Printing

# Flowchart

Just connect the camera to a computer with the USB cable and you can easily transfer images stored on the card to the computer with the provided OLYMPUS Master software.

#### Things to prepare

- OLYMPUS Master 2 CD-ROM
- USB cable

 Computer that fulfills the operating environment (For the required operating environment, refer to the OLYMPUS Master installation guide.)

(ICP P. 118)

(ICFP. 118)

(ICP P. 119)

Installing OLYMPUS Master (Refer to the installation guide included with the OLYMPUS Master)

Connecting the camera with your computer using the provided USB cable (ISP. 117)

Starting OLYMPUS Master

Saving pictures to your computer

Disconnecting the camera from your computer

# Using the provided OLYMPUS Master software

# What is OLYMPUS Master?

OLYMPUS Master is an image management program with viewing and editing features for pictures taken with your digital camera. Once installed on your computer, you can take advantage of the following.


- Transferring images from the camera or removable media to your computer
- Viewing images You can also enjoy slideshows and sound playback.
- Grouping and organizing images You can organize images into albums or folders. Transferred images are automatically organized by shooting date, allowing you to quickly find the particular images you want.
- Correcting images using filter and correction functions
- Editing images You can rotate, trim or change the image size.
- A variety of printing formats You can easily make prints of your pictures.
- Updating the camera firmware
- Developing RAW images

For information about OLYMPUS Master's other features, as well as for details on how to use the software, refer to "Help" in OLYMPUS Master software.

# Connecting the camera to a computer

Connect the camera to your computer with the provided USB cable.

- Use the provided USB cable to connect the computer's USB port to the camera's multi-connector.
  - The location of the USB port varies with the computer. For details, refer to your computer's manual.

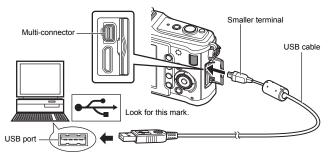

# 2 Turn on the camera.

- The selection screen for the USB connection is displayed.
- **3** Press  $\triangle \nabla$  to select [STORAGE]. Press the button.
- 4 The computer recognizes the camera as a new device.

#### Windows

 When you connect the camera to the computer for the first time, the computer automatically recognizes the camera. Click "OK" when the message saying that the installation is completed appears.
 The computer recognizes the camera as a "Removable Disk \_\_\_\_\_".

#### Macintosh

 iPhoto is the default image management application for Mac OS. When you connect your Olympus digital camera for the first time, iPhoto will start up automatically. Close iPhoto and start OLYMPUS Master.

#### Notes

· When the camera is connected to the computer, none of the camera buttons are functional.

USB	
STORAGE	
MTP	
PRINT	
EXIT	
s	ET+OK

# Start up the OLYMPUS Master software

#### Windows

1 Double-click the "OLYMPUS Master 2" icon so on the desktop.

### Macintosh

- 1 Double-click the "OLYMPUS Master 2" icon 1 in the "OLYMPUS Master 2" folder.
  - · The browse window is displayed.
  - When OLYMPUS Master is started up for the first time after installation, the OLYMPUS Master initial setting screen and user registration screen are displayed before the browse window. Follow the on-screen instructions.

#### To exit OLYMPUS Master

- 1 Click "Exit" 🗵 on any window.
  - · OLYMPUS Master is exited.

# Displaying camera images on a computer

### Downloading and saving images

- Click "Transfer Images" 🝻 on the browse window, and then click "From Camera" 💽 .
  - The window for selecting the pictures you want to transfer from the camera is displayed. All the images in the camera are displayed.



### Select "New Album" and enter an album name. Select the image files and click "Transfer Images".

• A window indicating that the download is complete is displayed.



### 4 Click "Browse images now".

• The downloaded images are displayed in the browse window.

g

1

### Disconnecting the camera from your computer

1 Make sure that the card access lamp has stopped blinking.





2 Prepare to remove the USB cable.

#### Windows

- 1) In the system tray, click the "Unplug or Eject Hardware" icon 📓
- Click on the pop-up message.
- 3) Click "OK" on the "Safe to Remove Hardware" window.



#### Macintosh

1) The trash icon changes to the eject icon when the "Untitled" or "NO NAME" icon on the desktop is dragged. Drag and drop it on the eject icon.

9

Unplug the USB cable from the camera.

### Notes

· For Windows users:

When you click "Unplug or Eject Hardware", a warning message may be displayed. In such case, make sure that no image data is being downloaded from the camera, and that there are no applications open that were accessing the camera image files. Close any such applications and click "Unplug or Eject Hardware" again and then remove the cable.

# Viewing still images

# 1 Click the "Album" tab on the browse window and select the album that you want to view.

- The selected album image is displayed in the thumbnail area.
- 2 Double-click the still picture thumbnail that you want to view.
  - OLYMPUS Master switches to the image edit window and the picture is enlarged.
  - Click "Back" (a) to return to the browse window.

Thumbnail





# Transferring images to your computer without using OLYMPUS Master

Your camera supports the USB Mass Storage Class. You can transfer images to a computer by connecting the camera to the computer with the provided USB cable. This can be done even without using OLYMPUS Master. The following operating systems are compatible with the USB connection:

Windows : 2000 Professional/XP Home Edition/XP Professional/Vista/7 Macintosh : Mac OS X v10.3 or later

### Notes

- If your computer is running Windows Vista, select [MTP] in Step 3 on page 117 to use Windows Photo Gallery.
- Data transfer is not guaranteed in the following environments, even if your computer is equipped with a USB port.
  - · Computers with a USB port added by means of an extension card, etc.
  - · Computers without a factory-installed OS and home-built computers

# Shooting tips and information

#### The camera does not turn on even when a battery is loaded

#### The battery is not fully charged

· Charge the battery with the charger.

#### The battery is temporarily unable to function because of the cold

 Battery performance declines in low temperatures, and the charge may not be sufficient to turn on the camera. Remove the battery and warm it by putting it in your pocket for a while.

#### No picture is taken when the shutter button is pressed

#### The camera has turned off automatically

 To save battery power, if there is no operation, the camera goes into sleep mode after a fixed period of time and the camera stops operating. The camera activates again when you touch the shutter button or any other button. IS "SLEEP" (P. 100)

After a further fixed period of time has elapsed, the camera power turns off.

#### The flash is charging

 On the LCD monitor, the \$ mark blinks when charging is in progress. Wait for the blinking to stop, then press the shutter button.

#### Unable to focus

 When the AF confirmation mark on the LCD monitor is blinking, it indicates that the camera is unable to focus using AF. Press the shutter button again.

#### Noise reduction is activated

 When shooting night scenes, shutter speeds are slower and noise tends to appear in images. The camera activates the noise-reduction process after shooting at slow shutter speeds. During which, shooting is not allowed. You can set [NOISE REDUCT.] to [OFF].
 MOISE REDUCT." (P. 104)

#### The date and time has not been set

#### The camera is used with the settings at the time of purchase

• The date and time of the camera is not set when purchased. Set the date and time before using the camera. Its "Setting the date/time" (P. 7)

#### The battery has been removed from the camera

 The date and time settings will be returned to the factory default settings if the camera is left without the battery for approximately 1 day. The settings will be cancelled more quickly if the battery was only loaded in the camera for a short time before being removed. Before taking important pictures, check that the date and time settings are correct.

#### Subjects that are difficult to focus on

It may be difficult to focus with auto focus in the following situations.

AF confirmation mark is blinking. These subjects are not focused.

AF confirmation mark lights up but the subject is not focused.



Subject with low contrast

Excessively bright light in

center of frame



Object with no vertical lines



Subjects at different distances Fast-moving subject

Subject not inside AF area

In any situation, focus on something with high contrast that is at the same distance as the subject, determine the composition and shoot the picture. If "Composing and taking a picture after locking the focus (focus lock)" (P. 50)

#### Image taken appears whitish

This may occur when the picture is taken in backlight or semi-backlight conditions. This is due to a phenomenon called flare or ghosting. As far as possible, consider a composition where strong light source is not taken in the picture. Flare may occur even when a light source is not present in the picture. Use a lens hood to shade the lens from the light source. If a lens hood does not have effect, use your hand to shade the lens from the light.

#### Unknown bright dot(s) appear on the subject in the picture taken

This may be due to stuck pixel (s) on the image pickup device. Perform **[PIXEL MAPPING]**. If the problem persists, repeat pixel mapping a few times. **I** This mapping k Checking the image processing functions" (P. 126)

#### Functions that cannot be selected from menus

Some items may not be selectable from the menus when using the arrow pad.

- · Items that cannot be set with the current shooting mode
- Items that cannot be set because of an item that has already been set: Combination of []] and [NOISE REDUCT.], etc.

#### Camera vibration when the power is turned off

This is due to the camera initializing the image stabilizer mechanism. Without this initialization, the image stabilizer may not be able to achieve the proper effect.

#### Set functions are restored to their factory default settings

When you rotate the mode dial or turn off the power in a shooting mode other than **P**, **A**, **S**, **M** or **P** functions with changes made to their settings are restored to the factory default settings.

# Error codes

Monitor indication	Possible cause	Corrective action
NO CARD	The card is not inserted, or it cannot be recognized.	Insert a card or insert a different card.
CARD ERROR	There is a problem with the card.	Insert the card again. If the problem persists, format the card. If the card cannot be formatted, it cannot be used.
WRITE PROTECT	Writing to the card is prohibited.	The card write-protect switch is set to the <b>[LOCK]</b> side. Release the switch.
CARD FULL	The card is full. No more pictures can be taken or no more information such as print reservation can be recorded.	Replace the card or erase unwanted pictures. Before erasing, download important images to a PC.
CARD FULL	There is no space in the card and print reservation or new images cannot be recorded.	Replace the card or erase unwanted pictures. Before erasing, download important images to a PC.
CARD SETUP Clean the contact area of the card with a dry colds. CLEAN CARDON FORMAT SET + OKI	Card cannot be read. Card may not have been formatted.	<ul> <li>Select [CLEAN CARD], press the          <ul> <li>button and turn off the camera. Remove the card and wipe dry the metallic surface with a soft, dry cloth.</li> <li>Select [FORMAT] ► [YES], and then press the</li></ul></li></ul>
NO PICTURE	There are no pictures on the card.	The card contains no pictures. Record pictures and play back.
	The selected picture cannot be displayed for playback due to a problem with this picture. Or the picture cannot be used for playback on this camera.	Use image processing software to view the picture on a PC. If that cannot be done, the image file is damaged.
THE IMAGE CANNOT BE EDITED	Pictures taken with another camera cannot be edited on this camera.	Use image processing software to edit the picture.

Monitor indication	Possible cause	Corrective action
₽°C/°F	The internal temperature of the camera has risen due to	Turn off the camera and wait for the internal temperature to cool.
Internal camera temperature is too high. Please wait for cooling before camera use.	continuous use, for example.	Wait a moment for the camera to turn off automatically. Allow the internal temperature of the camera to cool before resuming operations.
BATTERY EMPTY	The battery is drained.	Charge the battery.
	The camera is not connected to the computer or printer correctly.	Disconnect the camera and connect it again correctly.
NO PAPER	There is no paper in the printer.	Load some paper in the printer.
NO INK	The printer has run out of ink.	Replace the ink cartridge in the printer.
	The paper is jammed.	Remove the jammed paper.
SETTINGS CHANGED	The printer's paper cassette has been removed or the printer has been manipulated while making settings on the camera.	Do not manipulate the printer while making settings on the camera.
	There is a problem with the printer and/or camera.	Turn off camera and printer. Check the printer and remedy any problems before turning the power on again.
CANNOT PRINT	Pictures recorded on other cameras may not be printed on this camera.	Use a personal computer to print.
The lens is locked. Please extend the lens.	The lens of the retractable lens stays retracted.	Extend the lens.
Please check the status of a lens.	An abnormality has occurred between the camera and the lens.	Turn off the camera, check the connection with the lens, and turn the power on again.

Shooting tips and maintenance

#### Cleaning and storing the camera

#### Cleaning the camera

Turn off the camera and remove the battery before cleaning the camera.

#### Exterior:

 Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and well wrung.

#### LCD monitor:

- Wipe gently with a soft cloth.
- Lens:
- Blow dust off the lens with a commercially available blower. For the lens, wipe gently with a lens cleaning paper.

#### Storage

- When not using the camera for a prolonged period, remove the battery and card. Store the camera in a cool, dry place that is well ventilated.
- · Insert the battery periodically and test the camera's functions.

#### Cleaning and checking the image pickup device

This camera incorporates a dust reduction function to keep dust from getting on the image pickup device and to remove any dust or dirt from the image pickup device surface with ultrasonic vibrations. The dust reduction function operates when the camera is turned on. The dust reduction function operates at the same time as the pixel mapping, which checks the image pickup device and image processing circuitry. Since dust reduction is activated every time the camera's power is turned on, the camera should be held upright for the dust reduction function to be effective. The SSWF indicator blinks while dust reduction is working. IG<sup>®</sup> "Dust reduction function operation" (P. 6)

### Notes

- Do not use strong solvents such as benzene or alcohol, or a chemically treated cloth.
- Avoid storing the camera in places where chemicals are treated, in order to protect the camera from corrosion.
- · Mold may form on the lens surface if the lens is left dirty.
- Check each part of the camera before use if it has not been used for a long time. Before taking important pictures, be sure to take a test shot and check that the camera works properly.

## Pixel mapping — Checking the image processing functions

The pixel mapping feature allows the camera to check and adjust the image pickup device and image processing functions. After using the monitor or taking continuous shots, wait for at least one minute before using the pixel mapping function to ensure that it operates correctly.



### MENU → [\*] → [1] → [PIXEL MAPPING]

### Press arDisplay , then press the $\circledast$ button.

 The [BUSY] bar is displayed when pixel mapping is in progress. When pixel mapping is finished, the menu is restored.

### Notes

• If you accidentally turn the camera off during pixel mapping, start again from Step 1.

# **Card basics**

### Usable cards

"Card" in this manual refers to a recording medium. The only cards usable with this camera are SD memory cards and SDHC memory cards (sold separately) which conform to the SD standard. For the latest information, please visit the Olympus website.

#### SD card write protect switch

The SD card body has a write protect switch. If you set the switch to the "LOCK" side, you will not be able to write to the card, delete data or format. Return the switch to enable writing.

#### Notes

 The data in the card will not be erased completely even after formatting the card or deleting the data. When discarding, destroy the card to prevent leakage of personal information.

### Formatting the card

Cards formatted on a computer or other camera must be formatted with the camera before they can be used.

All data stored on the card, including protected images, is erased when the card is formatted. When formatting a used card, confirm there are no images that you still want to keep on the card.

# 1 MENU → [♣] → [CARD SETUP]

- $\begin{array}{c} \textbf{2} \quad \text{Use } \bigtriangleup \nabla \text{ to select [FORMAT]. Press the } \circledast \\ \text{button.} \end{array}$
- 3 Use △ ▽ to select [YES]. Press the ⊛ button. • Formatting is performed.









# Battery and charger

- Use the single Olympus lithium-ion battery (BLS-1). Other batteries cannot be used.
- The camera's power consumption varies widely with usage and other conditions.
- As the following consume a lot of power even without shooting, the battery will be drained quickly.
  - · Performing auto focus repeatedly by pressing the shutter button halfway in shooting mode.
  - Displaying images on the LCD monitor for a prolonged period.
  - · When connected to a computer or printer.
- When using a drained battery, the camera may turn off without the low battery warning being displayed.
- The battery will not be fully charged at the time of purchase. Charge the battery using the provided charger (BCS-1) before use.
- The normal charging time using the provided charger is approximately 3 hours 30 minutes (estimated).
- Do not use chargers other than the one designated.

### Notes

There is a risk of explosion if the battery is replaced with the incorrect battery type. Dispose of the used battery following the instructions. "Battery Handling Precautions" (IS P. 150)

# Using your charger abroad

- The charger can be used in most home electrical sources within the range of 100V to 240 V AC (50/60 Hz) around the world. However, depending on the country or area you are in, the AC wall outlet may be shaped differently and the charger may require a plug adapter to match the wall outlet. For details, ask at your local electrical shop or travel agent.
- Do not use commercially available travel adaptors as the charger may malfunction.

# Interchangeable lenses

Select the lens that you want to shoot with.

Use a specified lens (Micro Four Thirds mount). To use the "Four Thirds System Lens", an adapter (sold separately) is required. An adapter to allow use of an OM system lens is also available (sold separately).

### M.ZUIKO DIGITAL interchangeable lenses

This is an interchangeable lens specifically for use with the "Micro Four Thirds system" which is a smaller, thinner version of the "Four Thirds system".

Micro Four Thirds system lenses and Micro Four Thirds system cameras have the mark shown to the right .



#### Focal length and depth of field of Micro Four Thirds system lenses

When compared to 35-mm cameras, Micro Four Thirds system cameras achieve different effects at the same focal length and aperture.

#### Focal length

At the same focal length of a 35-mm camera, a Four Thirds system camera can achieve a focal length equivalent to twice that of a 35-mm camera. This enables the design of compact telephoto lenses. For instance, a Micro Four Thirds system lens 14-42 mm is equivalent to a 28-84 mm lens for a 35-mm camera.

 When the image angle of a Micro Four Thirds system lens is converted to that of a 35-mm camera, the perspective is the same as that of a 35-mm camera.

#### Depth of Field

A Micro Four Thirds system camera can achieve a depth of field equivalent to two times deeper than that of a 35-mm camera. A Micro Four Thirds system lens with f2.8 brightness, for example, is equivalent to f5.6 when converted to the aperture of a 35-mm camera.

 You can achieve the same amount of background blur as if you were using a 35-mm camera.

# Notes

- When you attach or remove the body cap and lens from the camera, keep the lens mount on the camera pointed downward. This helps prevent dust and other foreign matter from getting inside the camera.
- · Do not remove the body cap or attach the lens in dusty places.
- Do not point the lens attached to the camera toward the sun. This may cause the camera to
  malfunction or even ignite due to the magnifying effect of sunlight focusing through the lens.
- Be careful not to lose the body cap and rear cap.
- Attach the body cap to the camera to prevent dust from getting inside when no lens is attached.

# OLYMPUS C-P2 SYSTEM CHART



\*1 Not all lenses can be used with adapter. For details, refer to the Olympus Official Web Site. Also, please note that manufacture of OM System Lenses has been discontinued.


Information



<u>-</u> 11

#### Names of parts

- ① Filter mount thread
- 2 Zoom ring
- ③ Focus ring
- ④ Mount index
- (5) Electrical contacts
- 6 Front cap
- ⑦ Rear cap

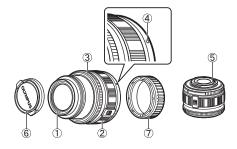

#### Lens and camera combinations

Lens	Camera	Attachment	AF	Metering
Micro Four Thirds system lens		Yes	Yes	Yes
Four Thirds system lens	Micro Four Thirds system camera	Attachment possible with	Yes*1	Yes
OM System lenses		mount adapter	No	Yes <sup>*2</sup>
Micro Four Thirds system lens	Four Thirds System Camera	No	No	No

\*1 [C-AF] and [C-AF+TR] of [AF MODE] cannot be used.

\*2 Accurate metering not possible.



#### Main Specifications

Items	14-42 mm	17 mm	
Mount	Micro Four Thirds mount		
Focal length	14-42 mm	17 mm	
Max. aperture	f3.5 - 5.6	f2.8	
Image angle	75.4 -28.9	64.9	
	8 groups, 9 lenses	4 groups, 6 lenses	
Lens configuration	Multilayer film coating		
Iris control	f3.5 - 22	f2.8 - 22	
Shooting range	0.25 m - ∞	0.2 m - ∞	
Focus adjustment	AF/MF s	witching	
Weight (excluding hood and cap)	150 g	71 g	
Dimensions (Max. diameter × overall length)	ø62 × 43.5 mm	ø57 × 22 mm	
Filter mount thread diameter	40.5 mm	37 mm	

#### Storage Precautions

- Clean the lens after use. Remove dust and dirt on the surface of the lens with a blower brush or brush. Use commercially available lens cleaning paper to remove the dirt on the lens. Do not use organic solvents.
- Always cap the lens and store it when it is not used.
- · Do not store in an area with insect repellent.

#### Notes on Shooting

• Edges of pictures may be cut off if more than one filter is used or if a thick filter is used.

# Using the electronic viewfinder (sold separately)

If you use the electronic viewfinder (sold separately: VF-2), you can view the shooting screen in the finder. This is convenient when you are in a very bright location, such as under direct sunlight, where it is difficult to view the monitor or are using the camera at a low angle. Also refer to the electronic viewfinder's manual.

- 1 Turn off the camera.
- 2 Slide off the hot shoe cover.
  - · Keep the shoe cover in a safe place to avoid losing it.
- **3** Remove the connector cover from the electronic viewfinder.
- 4 Align the electronic viewfinder with the hot shoe on the camera body, and slide it in until it stops.
  - Insert the electronic viewfinder by pushing on its lower part.
- 5 Turn on the camera.
- 6 Each press of the |O| button switches between the monitor display and electronic viewfinder display.
- Accessory port
- You can adjust the brightness and color temperature of the electronic viewfinder. IS "EVF ADJUST" (P. 102)
- 7 Turn the diopter adjustment ring to a position where the image on the viewfinder can be seen clearly.
- 8 Adjust the viewfinder to your preferred angle (up to 90 degrees).






Diopter adjustment ring

### Notes on looking after the viewfinder

- · You cannot use an external flash and the electronic viewfinder at the same time.
- When carrying the camera, do not hold it by the electronic viewfinder. The camera may separate from the electronic viewfinder and drop.
- Do not leave the camera with the electronic viewfinder attached in a location subject to direct sunlight.

# Program line diagram (P mode)

In the **P** mode, the camera is programmed such that the aperture value and shutter speed are automatically selected according to the subject's brightness as shown below. The program line diagram varies with the type of lens mounted.

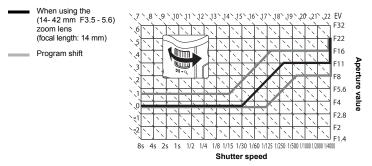

# Flash synchronization and shutter speed

Shooting mode			Fixed timing when flash fires <sup>*2</sup>
Р	1/ (lens focal length × 2) or synchronization		1/60
Α	timing, whichever is slower	1/180	
S			
M			_

\*1 Can be changed using menu:1/60-1/180 📭 "\$X-SYNC." (P. 104)

\*2 Can be changed using menu:1/30-1/180 🕼 \* SLOW LIMIT" (P. 104)

# Exposure warning display

If the optimum exposure cannot be obtained when pressing the shutter button halfway, the display will blink on the LCD monitor.

Shooting mode	Warning display example (blinking)	Status	Action
Р	ヽ  / ヽ   / - 60 <sup>™</sup> F2.8 - /   \ /   \	The subject is too dark.	<ul><li>Increase the ISO sensitivity.</li><li>Use the flash.</li></ul>
F	_ 1 / 1 / - 4000 F22 - /   \/   \	The subject is too bright.	<ul> <li>Decrease the ISO sensitivity.</li> <li>Use a commercially available ND filter (for adjusting the amount of light).</li> </ul>
	ヽl <i>ヽ</i> ー30型 F5.6 / <sub>I</sub> ヽ	The subject is underexposured.	<ul> <li>Decrease the aperture value.</li> <li>Increase the ISO sensitivity.</li> </ul>
A	- 4000 <del>- 7</del> 5.6	The subject is overexposured.	<ul> <li>Increase the aperture value.</li> <li>Decrease the ISO sensitivity or use a commercially available ND filter (for adjusting the amount of light).</li> </ul>
	<pre>\ \ 1 / 4000€ F2.8 - /   \</pre>	The subject is underexposured.	<ul> <li>Set the shutter speed slower.</li> <li>Increase the ISO sensitivity.</li> </ul>
S	40000 F222 -	The subject is overexposured.	<ul> <li>Set the shutter speed faster.</li> <li>Decrease the ISO sensitivity or use a commercially available ND filter (for adjusting the amount of light).</li> </ul>

\* The aperture value at the moment when its indication blinks varies with the lens type and focal length of the lens.

# Flash modes that can be set by shooting mode

Shooting Mode	Super control panel	Flash Mode	Flash timing	Conditions for firing the flash	Shutter speed limit	
	<b>\$</b> AUTO	Auto flash		Fires automatically in		
	۲	Auto flash (red-eye reduction)	1st curtain	dark/backlit <sup>*1</sup> conditions	1/30 sec 1/180 sec.	
	\$	Fill-in flash		Always fires		
Р	٤	Flash off	_	—	—	
A	© SLOW \$ SLOW	Slow synchronization (red-eye reduction)	1st curtain	Fires		
		Slow synchronization (1st curtain)	curtain	automatically in dark/backlit <sup>*1</sup> conditions	60 sec 1/180 sec.	
	<b>\$</b> SLOW2	Slow synchronization (2nd curtain)	2nd curtain			
	4	Fill-in flash				
s	©\$	Fill-in flash (red-eye reduction)	1st curtain	Always fires	60 sec 1/180 sec.	
м	۲	Flash off	_	_	_	
	2nd CURTAIN	Fill-in flash/Slow synchronization (2nd curtain)	2nd curtain	Always fires	60 sec 1/180 sec.	


\*1 When the flash is set to the Super FP mode, it detects backlight with longer duration than for normal flash before emitting light. It refers "Super FP flash" (P. 62)

• AUTO, ③ can be set in MUTO mode.

Information

# White balance color temperature

The higher the color temperature, the richer the light in bluish tones and the poorer in reddish; the lower the color temperature, the richer the light in reddish tones and the poorer in bluish. The spectral balance of different white light sources is rated numerically by color temperature - concept of physics expressed using the Kelvin (K) temperature scale. The color of sunlight and other natural light sources and the color of a light bulb and other artificial light sources can be expressed in terms of color temperature.

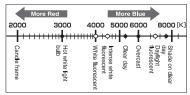

• The color temperatures for each light source indicated in the above scale are approximate.

It follows, then, that the color temperatures of fluorescent lights make them unsuitable as artificial light sources. There are gaps in the hues from the color temperatures of fluorescent light. If these differences in hue are small, they can be calculated with color temperature and this is called correlated color temperature.

This camera is preset with correlated color temperatures of 4,000k, 4,500K and 6,600k. Strictly speaking, these are not color temperatures. Use these settings for shooting conditions under fluorescent lights.

# Record mode and file size/number of storable still pictures

Record mode	Number of pixels (PIXEL COUNT)	Compression	File format	File size (MB)	Number of storable still picture (with 1GB SD/SDHC card)
RAW		Loss-less compression	ORF	Approx. 14	54
SF		1/2.7		Approx. 8.4	101
0 F	4032 × 3024	1/4		Approx. 5.9	145
<b>N</b>		1/8		Approx. 2.7	320
B		1/12		Approx. 1.8	477
MSF		1/2.7		Approx. 5.6	154
MIF	2200 2400	1/4		Approx. 3.4	255
MN	3200 × 2400	1/8		Approx. 1.7	504
MB		1/12		Approx. 1.2	747
MSF		1/2.7		Approx. 3.2	269
MF	2560 × 1920	1/4		Approx. 2.2	395
MN		1/8		Approx. 1.1	776
MB		1/12		Approx. 0.8	1143
MSF		1/2.7		Approx. 1.3	673
MIF	1600 × 1200	1/4	JPEG	Approx. 0.9	993
MN	1600 × 1200	1/8		Approx. 0.5	1893
MB		1/12		Approx. 0.4	2753
SSF		1/2.7		Approx. 0.9	1044
SF	1280 × 960	1/4		Approx. 0.6	1514
<b>S</b> N	1200 ~ 900	1/8		Approx. 0.3	2884
SB		1/12		Approx. 0.3	4038
SF		1/2.7		Approx. 0.6	1594
SF	1024 × 768	1/4		Approx. 0.4	2243
<b>S</b> N		1/8		Approx. 0.3	4038
<b>S</b> B		1/12		Approx. 0.2	5507
SF		1/2.7		Approx. 0.3	3563
<b>S</b> F	640 × 480	1/4		Approx. 0.2	5048
<b>S</b> N		1/8		Approx. 0.2	8654
<b>S</b> B		1/12		Approx. 0.1	10096

The file size in the table is approximate for files with a 4:3 aspect ratio.

#### Notes

- The number of remaining pictures may change according to the subject, whether or not print
  reservations have been made, and other factors. In certain instances, the number of
  remaining pictures displayed will not change even when you take pictures or erase stored
  images.
- The actual file size varies according to the subject.
- · The maximum number of storable still pictures displayed is 9999.
- · For the available recording time for movies, see the Olympus homepage.

# Functions that can be registered with My Mode and Custom Reset Setting

Function		My Mode registration	Custom resetsetting registration	Function	My Mode registration	Custom reset setting registration
	Z	✓	✓	SLEEP	_	✓
Image	stabilizer	~	✓	USB MODE	_	_
	<u>ان</u> *	✓	✓	LIVE VIEW BOOST	✓	✓
Flash	n mode	~	✓	FACE DETECT	_	_
PICTUR	RE MODE	~	✓	INFO SETTING	_	✓
GRAD	DATION	✓	✓	EV STEP	✓	✓
	STILL	1	1	METERING	✓	✓
<b>*</b>	PICTURE	•	•	AELMetering	—	✓
	MOVIE	_	✓	ISO	✓	✓
-	ASPECT	~	✓	ISO STEP	✓	✓
	<u>\$7</u>	~	✓	ISO-AUTO SET	_	✓
	BKT	~	✓	ISO-AUTO	_	~
	3 BKT	~	✓	BULB TIMER	_	✓
FL	BKT	~	~	ANTI-SHOCK [+]	✓	✓
ISC	) BKT	~	✓	X-SYNC.	~	~
MULTIPLE	EXPOSURE	-	_	SLOW LIMIT	✓	✓
	■1))	-	✓			✓
(	Ð		_	NOISE REDUCT. ✓		~
e		-	_	NOISE FILTER ✓		✓
			_	WB	✓	~
REC	VIEW	—	✓	WBŻ	✓	✓
🗞 MENU	J DISPLAY	_	_	ALL WB	_	
FIRM	IWARE	-	_	COLOR SPACE	✓	✓
AF	STILL	~	~	SHADING COMP.	√	~
MODE	PICTURE			<ul> <li>SET</li> </ul>	_	✓
	MOVIE		✓	PIXEL COUNT	_	~
	AREA	~	<ul> <li>✓</li> </ul>	QUICK ERASE	_	✓
	IS RING	_	✓	RAW+JPEG ERASE	_	~
	UNCTION		✓	FILE NAME	_	_
	RECTION		✓	PRIORITY SET	_	_
	L/AFL		✓	dpi SETTING	_	_
	L MEMO		<ul> <li>✓</li> </ul>	EDIT FILENAME	_	_
Fn FUNCTION		_	~	PIXEL MAPPING	_	_
MY MODE SETUP		—	_	EXPOSURE SHIFT	✓	~
BUTTON TIMER			—	MF ASSIST	_	~
	<b>≑</b> En		~	LEVEL GAUGE	_	√ 
_	JNCTION	_	✓	HDMI	_	_
_	NCTION		~	MOVIE+STILL	_	✓
-	RIORITY S	~	~	MOVIE U	_	✓
-	RIORITY C	✓	~	· 1		1
VIDEO OUT		_	—			

✓: Can be registered. —: Cannot be registered

\* Includes anti-shock.

Information

# Menu directory

### Shooting Menu

Tab	Function	Setti	Setting				
D	CARD SETUP	ALL ERASE/FORMAT	P. 89 P. 127				
-		RESET					
	CUSTOM RESET	RESET1 SET/RESET		P. 92			
		RESET2	SET/RESET				
	PICTURE MODE	☆i-FINISH/₂ VIVID/₃ NATUR ₃ PORTRAIT/MONOTONE		P. 72			
	GRADATION	AUTO/NORMAL <sup>*</sup> /HIGH KEY/L	P. 73				
	<b>4</b> :	STILL RAW/∎F/∎N <sup>*</sup> /⊠N PICTURE ⊠N+RAW/§N+RA	/SN/IIF+RAW/IIN+RAW/	P. 65			
		MOVIE HD*/SD		P. 76			
	IMAGE ASPECT	4:3*/16:9/3:2/6:6		P. 59			
	MOVIE AE MODE	P*/A/M/P3/294/294/294/294/294/294		P. 75			
2	MOVIE+STILL	OFF*/ON		P. 76			
	<b>_</b> 0	_*/ౖ/ల్మి,/ల్మి,/♦ల్మి,/♦ల్మి,/♦్	P. 56- P. 57				
	IMAGE STABILIZER	OFF*/I.S. 1/I.S. 2/I.S. 3	P. 57				
		FRAME	OFF <sup>*</sup> /2F				
	MULTIPLE EXPOSURE	AUTO GAIN	OFF <sup>*</sup> /ON	P. 47			
	* England defende antiling	OVERLAY	OFF <sup>*</sup> /ON				

\* Factory default setting

### Playback Menu

Tab	Function		Setting				
		START					
		BGM		MELANCHOLY*/NOSTALGIC/ LOVE/JOY/COOL/OFF			
		SLIDE		ALL*/STILL PICTURE/MOVIE	P. 80		
	SLIDE INTERVAL 2 SEC - 10 SEC (3 SEC*)		2 SEC - 10 SEC (3 SEC*)	1			
		MOVIE INTERVAL		FULL/SHORT*			
	<b>É</b>	OFF/ON <sup>*</sup>			P. 81		
			RAW DATA EDIT		P. 85		
	EDIT	SEL. IMAGE	JPEG EDIT	SHADOW ADJ/REDEYE FIX/₽ੈ/ ASPECT/BLACK & WHITE/SEPIA/ SATURATION//e-PORTRAIT	P. 85		
			Ŷ	NO/& START/YES	P. 86		
		IMAGE OVERLAY 2IMAGES MERGE/3IMAGES MERGE			P. 87		
	<u>ـ</u>	<b>凸/</b> 凸			P. 109		
	RESET PROTECT	YES/NO	YES/NO				

\* Factory default setting

## Setup Menu

Tab	Function	Setting	Ref. page
Ý	Ð	_	P. 7
U	e 🗉	*1	P. 90
		ال <sup>≝</sup> -7 - +7 ☆ -7 - +7 (ا <sup>≝</sup> ±0, ☆ ±0 <sup>*</sup> )	P. 90
	REC VIEW	OFF/AUTO /1SEC - 20 SEC (5 SEC <sup>*</sup> )	P. 91
	♣ MENU DISPLAY	OFF*/ON	P. 21
	FIRMWARE		P. 91

\* Factory default setting \*<sup>1</sup> Settings differ depending on the region where the camera is purchased.

### **Custom Menu**

Custo	* <sup>1</sup> S		ig on the region v	where the camera is purchased.	
Та	b	Function		Setting	Ref. page
Ŏ.	₽Ă	AF/MF			P. 9
÷		AF MODE	STILL PICTURE MOVIE	S-AF <sup>*</sup> /C-AF/MF/S-AF+MF/C-AF+TR	P. 4
		AF AREA	[::::]*/[ • ]	-	P. 5
		[···] SET UP	OFF/LOOP/S	PIRAL*	P. 9
		RESET LENS	OFF/ON*		P. 9
		BULB FOCUSING	OFF/ON*		P. 9
		FOCUS RING	C,,S		P. 9
		MF ASSIST	OFF/ON*		P. 9

142 ΕN

	ab	Function		:	Setting	Ref. page	
₽,	₿	BUTTON/DIAL				P. 95	
Ö			Р				
			Α	FNo.*/	*	]	
			S	SHUTTER*/2/52			
		DIAL FUNCTION	Main dial: SHUTTER*/FNo.			P. 95	
					HUTTER/FNo.*		
			MENU		(▶/\$ / VALUE*		
			EXPOSURE	Sub dial:	▶*/\$ / VALUE		
		DIAL DIRECTION	EXPOSURE MENU	DIAL1*/DIA		P. 95	
			-		ode2/mode3		
		AEL/AFL	S-AF*		le2*/mode3/mode4	D 00	
		AEL/AFL	C-AF MF		ode2/mode3	P. 96	
		AEL/AFL MEMO	OFF*/ON	mode i /me	Jaczinioaes	D 00	
						P. 96	
		Fn FUNCTION	RAW <b>∢</b> ⊷/TES	T PICTURE	/MY MODE/BACKLIT LCD/OFF	P. 97	
		<b>I</b> FUNCTION	AF MODE*/M IMAGE STAB		LASH MODE/BACKLIT LCD/	P. 98	
		MY MODE SETUP	MY MODE1/ MY MODE2				
	BUTTON TIMER 3SEC/5SEC/8SEC*/HOLD/OFF		D/OFF	P. 98			
		靡≑雨	OFF*/ON			P. 99	
		6월 FUNCTION OFF/ON*/[···]					
	<sup>e</sup> c	RELEASE					
	_	RLS PRIORITY S	OFF*/ON				
		RLS PRIORITY C	OFF/ON*				
	<sup>e</sup> D	DISP/=))/PC				P. 99 P. 99	
	-		HDMI OUT 1080i* / 720p / 480p/576p HDMI CONTROL OFF*/ON		1080i* / 720p / 480p/576p	1.00	
		HDMI				P. 99	
		VIDEO OUT	*1				
		■)))	OFF/ON*				
		" SLEEP	OFF/1MIN*/3MIN/5MIN/10MIN			P. 100 P. 100	
		USB MODE	AUTO*/STORAGE/MTP/PRINT				
		LIVE VIEW BOOST	OFF*/ON				
						P. 101	
		FACE DETECT	OFF*/ON			P. 55 P. 101	
		INFO SETTING	► INFO IMAGE ONLY/OVERALL///////////////////////////////////		P. 101		
			LV-INFO	LV-INFO			
		VOLUME	0-5 (3*)			P. 101	
		LEVEL GAUGE	OFF <sup>*</sup> /ON			P. 101	
		MOVIE I	OFF/ON*			P. 76 P. 102	
		EVF ADJUST	0: 7 .7 .4. 7	1 17 (0:10)	** • • • •		
		EVF ADJUST	JE-7-+7 ☆-7	-+/(⊌-±0,	Q:±0")	P. 102	

\* Factory default setting \*<sup>1</sup>Settings differ depending on the region where the camera is purchased.

Information

Tab		Function		Setting			Ref. page
₽,	т <mark>о</mark>	EXP/ MISO					P. 102
Ŧ		EV STEP	1/3EV*/1/2E\	//1EV			P. 102
			0	ଡ • •ାଧ			
		METERING	)				
			● HI ● SH				
		AELMetering	AUTO*/@/	•/ <b>•</b> HI/		SH	P. 102
		ISO		AUTO*/100 - 6400		P. 102	
		ISO STEP	1/3EV*/1EV				P. 103
			HIGH LIMIT	200 - 64	400	(1600*)	F. 105
	ISO-AUTO SET DEFAULT 200 - 6400 (200*)			P. 103			
		ISO-AUTO	P/A/S <sup>*</sup> /ALL			P. 103	
		BULB TIMER	1MIN - 30MIN (8 MIN*)			P. 103	
		ANTI-SHOCK [+]	OFF*/1/8 SE	C - 30 SE	С		P. 103
			AE BKT	OFF*/3 3F 1.0E		3EV/3F 0.7EV/	P. 45
		BRACKETING	WB BKT	A-B G-M		OFF <sup>*</sup> /3F 2STEP/3F 4STEP/3F 6STEP	P. 71
		BRACKETING	FL BKT	3F 1.0E	V	8EV/3F 0.7EV/	P. 64
			ISO BKT	OFF*/3F 3F 1.0E		3EV/3F 0.7EV/	P. 47
	0 <sup>44</sup>	\$ CUSTOM					P. 104
		FLASH MODE	AUTO*/@/@\$/\$/\$/@SLOW/\$SLOW/\$SLOW \$2nd CURTAIN			SLOW/\$SLOW/\$SLOW 2/	P. 62
		-3.0 - 0.0* - +3.0				3.0	
		X-SYNC.	1/60 - 1/180 (	(1/180 <sup>*</sup> )			P. 104
		SLOW LIMIT	1/30 - 1/180 (	(1/60*)			P. 104
		122+Z	OFF <sup>*</sup> /ON				P. 104

Tab		Function	Setting		Ref. page
\$*	°G	<b>€:</b> -/COLOR/WB			P. 104
÷.		NOISE REDUCT.	OFF/ON/AUTO <sup>*</sup>		P. 104
		NOISE FILTER	OFF/LOW/STANDARD <sup>*</sup> /HIGH		P. 105
			AUTO* A -7 - +7,G -7 - +7		
			淤 5,300K	A -7 - +7,G -7 - +7	
			<b>☆</b> 7,500K	A -7 - +7,G -7 - +7	
			ඌ 6,000K	A -7 - +7,G -7 - +7	
			-촜- 3,000K	A -7 - +7,G -7 - +7	
		WB	尝 4,000K	A -7 - +7,G -7 - +7	P. 68
			₩2 4,500K	A -7 - +7,G -7 - +7	
			∰3 6,600K	A -7 - +7,G -7 - +7	
			WB\$ 5,500K	A -7 - +7,G -7 - +7	
			DŊ	A -7 - +7,G -7 - +7	
			CWB	2,000K - 14,000K	
		ALL WB	ALL SET	A -7 - +7,G -7 - +7	P. 105
			ALL RESET		F. 105
		COLOR SPACE	sRGB <sup>*</sup> /Adobe	bbeRGB	P. 105
		SHADING COMP.	OFF <sup>*</sup> /ON		P. 105
		€F SET	€:-1 - €:-4	□/M/S/SF/F/N/B	P. 106
		PIXEL COUNT	Middle	3200 × 2400/2560 × 1920*/1600 × 1200	D 400
		FIXEL COUNT	Small	1280 × 960*/1024 × 768/640 × 480	P. 106
	°.	RECORD/ERASE			P. 106
		QUICK ERASE	OFF <sup>*</sup> /ON		P. 106
		RAW+JPEG ERASE	JPEG/RAW/RAW+JPEG <sup>*</sup>		P. 106
		FILE NAME	AUTO <sup>*</sup> /RESE	T	P. 107
		EDIT FILENAME	Adobe RGB	OFF <sup>*</sup> /A - Z/0 - 9	P. 107
		PRIORITY SET	sRGB NO <sup>*</sup> /YES		-
			AUTO <sup>*</sup> /CUST	-OM	P. 107
		dpi SETTING	AUTO/CUST	ОМ	P. 108
	۹				P. 108
		PIXEL MAPPING	<b>_</b>		P. 126
		EXPOSURE SHIFT	8 0 •	-1 - 0 <sup>*</sup> - +1	P. 108
		C WARNING LEVEL	-2 - 0 <sup>*</sup> - +2	•	P. 108
		LEVEL ADJUST	RESET/ADJU	JST	P. 108
		ctory default setting			1.100

\* Factory default setting

Information

# Specifications

<u> </u>	101 (1
Camera	specifications
ounieru	specifications

### Product type

	Product type Product type Lens Lens mount Equivalent focal length on a 35 mm film camera	<ul> <li>Digital camera with interchangeable lens system</li> <li>M.Zuiko Digital, Micro Four Thirds System Lens</li> <li>Micro Four Thirds mount</li> <li>Approx. twice the focal length of the lens</li> </ul>
	■ Image pickup device Product type No. of total pixels No. of effective pixels Screen size Aspect ratio	: 4/3" Live MOS sensor : Approx. 13,060,000 pixels : Approx. 12,300,000 pixels : 17.3 mm (H) × 13.0 mm (V) (0.7" × 0.5") : 1.33 (4:3)
	■ Live view	: Uses Live MOS sensor : Field of view of 100%
	LCD monitor Product type Total no. of pixels	: 3.0" TFT color LCD : Approx. 230,000 dots
	Shutter Product type Shutter	: Computerized focal-plane shutter : 1/4000 - 60 sec., Bulb shooting
	Auto focus Product type Focusing points Selection of focusing point	<ul> <li>Imager contrast detection system</li> <li>11 points</li> <li>Auto, Optional</li> </ul>
	Exposure control Metering system	<ul> <li>TTL metering system (imager metering)</li> <li>(1) Digital ESP metering</li> <li>(2) Center weighted averaging metering</li> </ul>
_	Metered range	<ul> <li>(3) Spot metering</li> <li>EV0 - 18 (Digital ESP metering/Center weighted metering/ Spot metering)</li> </ul>
Information	Shooting modes	<ul> <li>: (1) <b>FAUTO</b> : iAuto</li> <li>(2) <b>P</b> : Program AE (Program shift can be performed)</li> <li>(3) <b>A</b> : Aperture priority AE</li> <li>(4) <b>S</b> : Shutter priority AE</li> <li>(5) <b>M</b> : Manual</li> <li>(6) <b>ART</b> : Art filter</li> <li>(7) <b>SCN</b> : Scene</li> <li>(8) <b>QP</b> : Movie</li> </ul>
	ISO sensitivity Exposure compensation	: 100 - 6400 (1/3, 1 EV step) : ±3EV (1/3, 1/2, 1 EV step)
	White balance Product type Mode setting	<ul> <li>Image pickup device</li> <li>Auto, Preset WB (8 settings), Customized WB, One-touch WB</li> </ul>

Recording			
Memory	: SD memory card SDHC memory card		
Recording system	: Digital recording, JPEG (in accordance with Design rule for Camera		
	File system (DCF)), RAW Data		
Applicable standards	: Exif 2.2, Digital Print Order Format (DPOF), PRINT Image Matching III, PictBridge		
Sound with still pictures	: Wave format		
Movie	: AVI Motion JPEG		
Audio	: PCM 44.1 kHz (stereo)		
Playback			
Display format	<ul> <li>Single-frame playback, Close-up playback, Index display, Image rotation, Calendar display</li> </ul>		
Drive			
Drive mode	: Single-frame shooting, Sequential shooting, Self-timer		
Sequential shooting	: 3 frames/sec.		
Self-timer	: Operation time: 12 sec., 2 sec.		
External flash			
Synchronization	: Synchronized with the camera at 1/180 sec. or less		
Flash control mode	: TTL-AUTO (TTL pre-flash mode), AUTO, MANUAL		
Flash attachment	: Hot shoe		
External connector Multi-connector (USB connector, AV connector), HDMI mini connector (Type C), Accessory port			
Power supply			
Battery	: Li-ion Battery (BLS-1) ×1		
Dimensions/weight			
Dimensions	: 120.5 mm (W) × 70.0 mm (H) × 35.0 mm (D) (4.7" × 2.8" × 1.3") (excluding protrusions)		
Weight	: Approx. 335 g (0.7 lb.) (without battery) Approx. 385 g (including battery and card)		
Operating environment			
Temperature	: 0 °C - 40 °C (32 °F - 104 °F) (operation)/		
	-20 °C - 60 °C (-4 °F - 140 °F) (storage)		
Humidity	: 30 - 90% (operation)/10 - 90% (storage)		

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.



HIGH-DEFINITION MULTIMEDIA INTERFACE

147 ΕN

#### BLS-1 Lithium ion battery


MODEL NO. Product type	:PS-BLS1 :Rechargeable Lithium ion battery
Nominal voltage	: DC 7.2V
Nominal capacity	: 1150mAh
No. of charge and	
discharge times	: Approx. 500 times (varies with usage conditions)j
Ambient temperature	: 0 C - 40 C (32 F - 104 F) (charging) -10 C - 60 C (14 F - 140 F) (operation) -20 C - 35 C (-4 F - 95 F) (storage)
Dimensions Weight	: Approx. 35.5 mm (W) × 55 mm (D) × 12.8 mm (H) (1.4" × 2.2" × 0.5") : Approx. 46 g (0.1lb.)

#### BCS-1 Lithium ion charger

MODEL NO.	: PS-BCS1
Rated input	: AC 100V - 240V (50/60Hz)
Rated output	: DC 8.35V, 400mA
Charging time Ambient temperature	: Approx. 3 hours 30 minutes (room temperature if using BLS-1) : 0 C - 40 C (32 F - 104 F) (operation)/ -20 C - 60 C (-4 F - 140 F) (storage)
Dimensions	: Approx. 62 mm (W) × 83 mm (D) × 38 mm (H) (2.4" × 3.3" × 1.5")
Weight	: Approx. 72 g (0.2lb.) (without AC cable)

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT ANY NOTICE OR OBLIGATION ON THE PART OF THE MANUFACTURER.

# SAFETY PRECAUTIONS

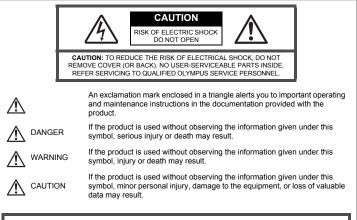

#### WARNING!

TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

#### **General Precautions**

- Read All Instructions Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.
- Cleaning Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.
- Attachments For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.
- Water and Moisture For precautions on products with weatherproof designs, read the weatherproofing sections.
- Location To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.
- **Power Source** Connect this product only to the power source described on the product label. **Foreign Objects** — To avoid personal injury, never insert a metal object into the product.
- Heat Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

# **Product Handling Precautions**

# 

Do not use the camera near flammable or explosive gases.

#### Do not use the flash and LED on people (infants, small children, etc.) at close range.

- You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.
- Keep young children and infants away from the camera.
  - Always use and store the camera out of the reach of young children and infants to prevent the following
    dangerous situations which could cause serious injury:
    - · Becoming entangled in the camera strap, causing strangulation.
    - Accidentally swallowing the battery, cards or other small parts.
    - · Accidentally firing the flash into their own eyes or those of another child.
  - Accidentally being injured by the moving parts of the camera.
- Do not look at the sun or strong lights with the camera.
- Do not use or store the camera in dusty or humid places.
- Do not cover the flash with a hand while firing.

# 

- Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.
   Never remove the batteries with bare hands, which may cause a fire or burn your hands.
- Never hold or operate the camera with wet hands.
- Do not leave the camera in places where it may be subject to extremely high temperatures.
  - Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire.
     Do not use the charger if it is covered (such as a blanket). This could cause overheating, resulting in fire.
- Handle the camera with care to avoid getting a low-temperature burn.
  - When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
    - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a lowtemperature burn may be caused.
    - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- Be careful with the strap.
  - Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.

# **Battery Handling Precautions**

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.

# 

- The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified charger. Do not use any other chargers.
- · Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal
  objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.
- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, by soldering, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek
  medical attention immediately.

# 

- · Keep batteries dry at all times.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.
- · Insert the battery carefully as described in the operating instructions.

Information

- If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.
- · Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during
  operation, stop using the camera.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- · Never subject batteries to strong shocks or continuous vibration.

# 

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately
  after using the camera.
- · Always unload the battery from the camera before storing the camera for a long period.
- This camera uses a lithium ion battery specified by Olympus. Do not use any other type of battery. For safe
  and proper use, read the battery's instruction manual carefully before using it.
- If the battery's terminals get wet or greasy, camera contact failure may result. Wipe the battery well with a
  dry cloth before use.
- Always charge a battery when using it for the first time, or if it has not been used for a long period.
- When operating the camera with battery power at low temperatures, try to keep the camera and spare battery as warm as possible. A battery that has run down at low temperatures may be restored after it is warmed at room temperature.
- The number of pictures you can take may vary depending on the shooting conditions or battery.
- Before going on a long trip, and especially before traveling abroad, purchase extra batteries.
   A recommended battery may be difficult to obtain while traveling.
- Please recycle batteries to help save our planet's resources. When you throw away dead batteries, be sure
  to cover their terminals and always observe local laws and regulations.

#### **Caution for Usage Environment**

- To protect the high-precision technology contained in this product, never leave the camera in the places listed below, no matter if in use or storage:
- Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.
- In sandy or dusty environments.
- · Near flammable items or explosives.
- In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well.
- · In places prone to strong vibrations.
- · Never drop the camera or subject it to severe shocks or vibrations.
- When mounted on a tripod, adjust the position of the camera with the tripod head. Do not twist the camera.
- Do not leave the camera pointed directly at the sun. This may cause lens or shutter curtain damage, color failure, ghosting on the image pickup device, or may possibly cause fires.
- Do not touch electric contacts on cameras and interchangeable lenses. Remember to attach the body cap when removing the lens.
- Before storing the camera for a long period, remove the battery. Select a cool, dry location for storage to
  prevent condensation or motif from forming inside the camera. After storage, test the camera by turning it
  on and pressing the shutter release button to make sure that it is operating normally.
- · Always observe the operating environment restrictions described in the camera's manual.
- · Do not directly touch or wipe the image pickup device of the camera.

### LCD Monitor

- Do not push the monitor forcibly; otherwise the image may become vague, resulting in a playback mode failure or damage to the monitor.
- A strip of light may appear on the top/bottom of the monitor, but this is not a malfunction.
- When a subject is viewed diagonally in the camera, the edges may appear zigzagged. This is not a
  malfunction; it will be less noticeable in playback mode.
- In places subject to low temperatures, the LCD monitor may take a long time to turn on or its color may change temporarily. When using the camera in extremely cold places, it is a good idea to occasionally place it in a warm place. An LCD monitor exhibiting poor performance due to low temperatures will recover in normal temperatures.
- The LCD used for the monitor is made with high-precision technology. However, black spots or bright spots
  of light may appear constantly on the LCD Monitor. Due to its characteristics or the angle at which you are
  viewing the monitor, the spot may not be uniform in color and brightness. This is not a malfunction.

#### Lens

- · Do not immerse in water or splash with water.
- · Do not drop or exert strong force on the lens.
- · Do not hold at the moving part of the lens.
- · Do not touch the lens surface directly.
- Do not touch the contact points directly.
- · Do not subject to abrupt temperature changes.
- The operating temperature range is -10 °C 40 °C (14 °F 104 °F). Always use within this temperature range.

### Legal and Other Notices

- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this
  unit lawfully, or any request from a third person, which are caused by the inappropriate use of this product.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing picture data.

#### Disclaimer of Warranty

- Olympus makes no representations or warranties, either expressed or implied, by or concerning any content
  of these written materials or software, and in no event shall be liable for any implied warranty of
  merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages
  (including but not limited to damages for loss of business profits, business interruption and loss of business
  information) arising from the use or inability to use these written materials or software or equipment. Some
  countries do not allow the exclusion or limitation of liability for consequential or incidental damages, so the
  above limitations may not apply to you.
- · Olympus reserves all rights to this manual.

# Warning

Unauthorized photographing or use of copyrighted material may violate applicable copyright laws. Olympus assumes no responsibility for unauthorized photographing, use or other acts that infringe upon the rights of copyright owners.

### **Copyright Notice**

All rights reserved. No part of these written materials or this software may be reproduced or used in any form or by any means, electronic or mechanical, including photocopying and recording or the use of any type of information storage and retrieval system, without the prior written permission of Olympus. No liability is assumed with respect to the use of the information contained in these written materials or software, or for damages resulting from the use of the information contained therein. Olympus reserves the right to alter the features and contents of this publication or software without obligation or advance notice.

# FCC Notice

#### Radio and Television Interference

Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Adjust or relocate the receiving antenna.
- Increase the distance between the camera and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help. Only the OLYMPUS-supplied USB cable should be used to connect the camera to USB enabled personal computers (PC).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate it.

#### Use Only Dedicated Rechargeable Battery and Battery Charger

We strongly recommend that you use only the genuine Olympus dedicated rechargeable battery and battery charger with this camera.

Using a non-genuine rechargeable battery and/or battery charger may result in fire or personal injury due to leakage, heating, ignition or damage to the battery. Olympus does not assume any liability for accidents or damage that may result from the use of a battery and/or battery charger that are not genuine Olympus accessories.

### For customers in North and South America

#### For customers in USA Declaration of Conformity

Model Number : E<sup>-</sup>P2 Trade Name : OLYMPUS Responsible Party : OLYMPUS IMAGING AMERICA INC, Address : 3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, USA Telephone Number : 484-896-5000

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

#### For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

#### For customers in Europe



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" mark cameras are intended for sales in Europe.



This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of waste electrical and electronic equipment in the EU countries. Please do not throw the equipment into the domestic refuse. Please use the return and collection systems available in your country for the disposal of this product.



This symbol [crossed-out wheeled bin Directive 2006/66/EC Annex II] indicates separate collection of waste batteries in the EU countries. Please do not throw the batteries into the domestic refuse. Please use the return and collection systems available in your country for the disposal of the waste batteries.

#### Provisions of warranty

- 1. If this product proves to be defective, although it has been used properly (in accordance with the written Handling Care and Operating instructions supplied with it), during the applicable national warranty period and has been purchased from an authorized Olympus distributor within the business area of Olympus Europa Holding GmbH as stipulated on the website: http://www.olympus.com this product will be repaired, or at Olympus's option replaced, free of charge. To claim under this warranty the customer must take the product before the end of the applicable national warranty period to the dealer where the product was purchased or any other Olympus service station within the business area of Olympus Europa Holding GmbH as stipulated on the website: http://www.olympus.com. During the one year period of the World Wide Guarantee the customer may turn the product in at any Olympus service station. Please notice that not in all countries such Olympus service station exists.
- The customer shall transport the product to the dealer or Olympus authorized service station at his own risk and shall be responsible for any costs incurred in transporting the product.

#### Provisions of Guarantee

- "OLYMPUS IMAGING CORP., Shinjuku Monolith, 2-3-1 Nishi-Shinjuku, Shinjuku-ku, Tokyo 163-0914, Japan grants a one year World Wide Guarantee. This worldwide Guarantee must be presented at an Olympus authorized repair service station before any repair can be made under conditions of this Guarantee. This Guarantee is valid only if the Guarantee Certificate and proof of purchase are presented at the Olympus repair service station. Please note that this Guarantee is in addition to and does not affect the customer's legal warranty rights under the applicable national legislation governing the sale of consumer goods mentioned above.
- This Guarantee does not cover the following and the customer will be required to pay repair charge, even for defects occurring within the Guarantee period referred to above.
  - (a) Any defect that occurs due to mishandling (such as an operation performed that is not mentioned in the Handling Care or other sections of the instructions, etc.)
  - (b) Any defect that occurs due to repair, modification, cleaning, etc. performed by anyone other than Olympus or an Olympus authorized service station.
  - (c) Any defect or damage that occurs due to transport, a fall, shock, etc. after purchase of the product.
     (d) Any defect or damage that occurs due to fire, earthquake, flood damage, thunderbolt, other natural
  - (d) Any detect or damage that occurs due to fire, earthquake, flood damage, thunderbolt, other natural disasters, environmental pollution and irregular voltage sources.
  - (e) Any defect that occurs due to careless or improper storage (such as keeping the product under conditions of high temperature and humidity, near insect repellents such as naphthalene or harmful drugs, etc.), improper maintenance, etc.
  - (f) Any defect that occurs due to exhausted batteries, etc.
  - (g) Any defect that occurs due to sand, mud, etc. entering the inside of the product casing.
  - (h) When the Guarantee Certificate is not returned with the product.
  - (i) When any alterations whatsoever are made to the Guarantee Certificate regarding the year, month and date of purchase, the customer's name, the dealer's name, and the serial number.
  - (j) When proof of purchase is not presented with this Guarantee Certificate.
- This Guarantee applies to the product only; the Guarantee does not apply to any other accessory equipment, such as the case, strap, lens cap and batteries.
- 4. Olympus's sole liability under this Guarantee shall be limited to repairing or replacing the product. Any liability under the Guarantee for indirect or consequential loss or damage of any kind incurred or suffered by the customer due to a defect of the product, and in particular any loss or damage caused to any lenses, films, other equipment or accessories used with the product or for any loss resulting from a delay in repair or loss of data, is excluded. Compelling regulations by law remain unaffected by this.

#### Notes regarding Guarantee maintenance

- 1. This Guarantee will only be valid if the Guarantee Certificate is duly completed by Olympus or an authorized dealer or other documents contain sufficient proof. Therefore, please make sure that your name, the name of the dealer, the serial number and the year, month and date of purchase are all completed or the original invoice or the sales receipt (indicating the dealer's name, the date of purchase and product type) is attached to this Guarantee Certificate. Olympus reserves the right to refuse free-of-charge service if neither Guarantee Certificate is completed or the above document is attached or if the information contained in it is incomplete or illegible.
- 2. Since this Guarantee Certificate will not be re-issued, keep it in a safe place.
- Please refer to the list on the web site: http:// www.olympus.com for the authorized international Olympus service network.

# Trademarks

- · IBM is a registered trademark of International Business Machines Corporation.
- · Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Inc.
- SDHC logo is a trademark.
- "Shadow Adjustment Technology" function contains patented technologies from Apical Limited.



- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design Rule for Camera File System/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

# Index

# Symbols

	104
■)) (Beep sound)	100
Language selection)	
[] HOME	
[] SET UP	
	106
C WARNING LEVEL	108
Fn FUNCTION	
FUNCTION	
FUNCTION	
SLOW LIMIT	104
¥ X-SYNC	104
* Custom Menu	93, 142
* MENU DISPLAY	21
Playback Menu	142
Y Setup Menu	90, 142
Shooting Menu 1	141
Shooting Menu 2	141
🕅 AF/MF	
BUTTON/DIAL	
RELEASE	
DISP/■))/PC	
EXP/ 180	
🖀 🕻 CUSTOM	
RECORD/ERASE	
	108
Α	

Adding sound to still pictures ${f U}$ .	
Adobe RGB	
AE BKT	
AE bracketing	
AE lock	
AEL/AFL	
AEL/AFL MEMO	
AELMetering	
AF AREA	
AF MODE	49, 98
AF target mode	
AF target []	
AF TRACKING (C-AF+TR)	51
ALL WB12	105
ALL ERASE	
All target AF mode [::::]	
ANTI-SHOCK [ ]	
Aperture priority shooting A	
Aperture value	
Art filter mode ART	
ASPECT	
Auto flash	
Auto focus	122

156	
EN	

Auto white balance	68
--------------------	----

В	
B (Basic)	
B&W FILTER	72
BACKLIT LCD	
Battery	
BEACH & SNOW 🚺	
BGM	80
BLACK & WHITE	85
BRACKETING	
BULB FOCUSING	
Bulb shooting	
BULB TIMER	
BUTTON TIMER	

### С

C-AF (continuous AF)	50
C-AF+TR (AF TRACKING)	51
Calendar display	78
CANDLE 4	11
Card	127
CARD SETUP	39, 127
Center weighted averaging metering []	42
CHILDREN 💽	11
Close-up playback Q	77
COLOR SPACE	105
Color temperature	
Compression rate	65
Continuous AF (C-AF)	
CONTRAST	72
CROSS PROCESS M	
CUSTOM RESET	92
Custom white balance CWB	68

### D

Date/time setting 🕘	7
DIAL DIRECTION	95
DIAL FUNCTION	95
Digital ESP metering 🐼	42
DIORAMA	11
Direct print	112
DIS MODE 👜	11
DOCUMENTS 😰	11
dpi SETTING	108
DPOF	
Dust reduction	6, 125
E	

Easy printing	113
Easy shooting modes	10
EDIT FILENAME	107
EFECT	72
e-PORTRAIT 💽	11, 85
EV STEP	102
EVF ADJUST	102

Exposure compensation 🔀	43
EXPOSURE SHIFT	108
F	
F (Fine)	65
FACE DETECT 😫	55, 101
FILE NAME	107
Fill-in flash 🗲	63
FIREWORKS 📓	
FIRMWARE	91
FL BKT	64
Flash bracketing	64
Flash intensity control 52	63
FLASH MODE \$	62
Flash off 🕃	63
Fn FACE DETECT	
FOCUS RING	94
FORMAT	127
Four Thirds system lenses	129
G	

GRADATION	73
GRAINY FILM M	11

#### н

HD	76
HDMI	
HDMI CONTROL	
HDMI OUT	
HIGH KEY HI	
Histogram	
Home position HP	
· _	

#### iAUTO shooting fAUTO ......10 Index display 💽 ......78 INFO SETTING ......101 IS (Image stabilizer) ......57 ISO bracketing ......47 ISO STEP ...... 103 ISO-AUTO ......103 J

JPEG EDIT	85
L	
(Large)	
LANDSCAPE 🔤	11
LANDSCAPE+PORTRAIT 🎦	11
Lens	5, 129
LEVEL ADJUST	
LEVEL GAUGE	

LIGHT TONE 🕅	11
Lithium ion battery	3, 128
Lithium ion charger	3, 128
Live control	16
LIVE VIEW BOOST	101
LOW KEY 🔤	11, 73

#### Μ

Middle)	
M.ZUIKO DIGITAL interchangeable le	ns 129
MACRO 🔛	11
Manual focus (MF)	50
Manual shooting M	40
METERING	42, 98
MF	
MF (manual focus)	50
MF ASSIST	
Micro Four Thirds system lenses	129
Monitor brightness adjustment I	90
MONOTONE	72
MOVIE	
MOVIE AE MODE	75
MOVIE PLAY	82
Movie shooting 🎬	74
MOVIE+STILL	
MTP	
MULTIPLE EXPOSURE 🖻	47
MUTED 🚯	72
MY MODE	
MY MODE SETUP	

#### Ν

N (Normal)	65
NATURAL 🛠	
NATURE MACRO	11
NIGHT SCENE 🛃	11
NIGHT+PORTRAIT	11
NOISE FILTER	105
NOISE REDUCT.	104
NTSC	100
Number of pixels	65

#### 0

OLYMPUS Master	. 1	16
One-touch white balance 🖵7	0,	97

#### Ρ

•	
PAL	100
PALE&LIGHT COLOR MS	11
PANORAMA 🖾	11, 60
PICT. TONE	73
PictBridge	112
PICTURE MODE	
PIN HOLE 🕅	11
Pixel count	
PIXEL MAPPING	
POP ART M	
PORTRAIT 🛠	
PORTRAIT 💽	11

Preset white balance	68
PREVIEW	41, 97
PRINT	100, 113
Print reservation	109
PRIORITY SET	107
Program shift Ps	
Program shooting P	
Protecting On	
Q	

1	L	5	,
			•

QUICK ERASE	 106
_	

#### R

RAW	66
RAW DATA EDIT	85
RAW <b>4</b> :-	
RAW+JPEG ERASE	106
REC VIEW	91
Record mode <b>4:</b> -	
REDEYE FIX	
Red-eye reduction flash ()	
RESET LENS	
RESET PROTECT	
Resizing 🔚	
RLS PRIORITY C	
RLS PRIORITY S	
Rotating images 🗂	81

# s

S (Small)	65
S-AF (single AF)	
S-AF+MF	51
SATURATION	
Scene mode SCN	11
SD	76
SD/SDHC card	4, 127
Self-timer 🕉	
SEPIA	85
Sequential shooting 🖳	
SF (Super Fine)	65
SHADING COMP.	105
SHADOW ADJ	
SHARPNESS	
Shutter priority shooting S	
Shutter speed	. 12, 37, 39
Single AF (S-AF)	
Single target AF mode [ · ]	
Single-frame erase 面	
Single-frame playback	77
Single-frame protect	
Single-frame shooting	
SLEEP	100
SLIDE	80
Slideshow 🕒	
Slow synchronization \$ SLOW	62
Slow synchronization \$ SLOW2/	
2nd CURTAIN	62
SOFT FOCUS 🕅	11

SPORT S. Spot metering - highlight control I HI Spot metering - shadow control I SH Spot metering SRGB STORAGE Strap	
SUNSET 🗃	
Super FP flash	
System Chart	
т	
TEST PICTURE Trimming	
USB MODE	100
v	
VIVID 2	72
w	
WB WB BKT	69
WB compensation	69
White balance bracketing	
White balance <b>WB</b>	68
Zoom display	54